




TERRALED Street Lights

INSTALLATION MANUAL

V 1.5


1 Accessing Internal Components

The luminaire opens by loosening the 2 screws located on the side of the hood. The hood can then be pivoted using the incorporated hinge found at the back of the luminaire.

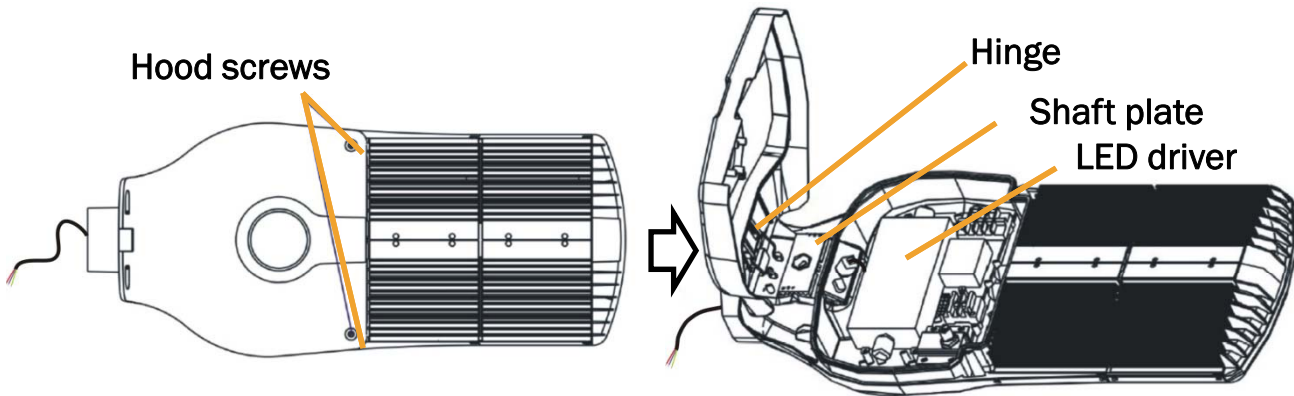


2 Adjusting Luminaire Tilting Angles

The tilting angle of the luminaire can be changed by moving the shaft plate through different settings.

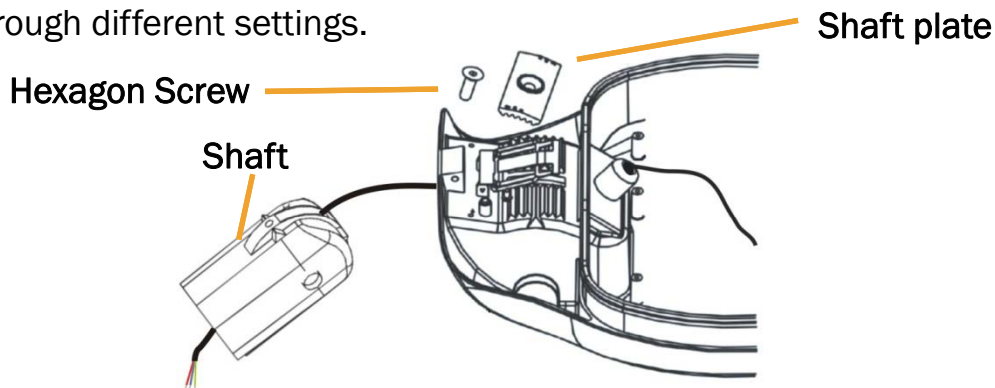

Release the hexagon screw to detach the shaft and shaft plate.

Shaft plate at 0° (factory setting)

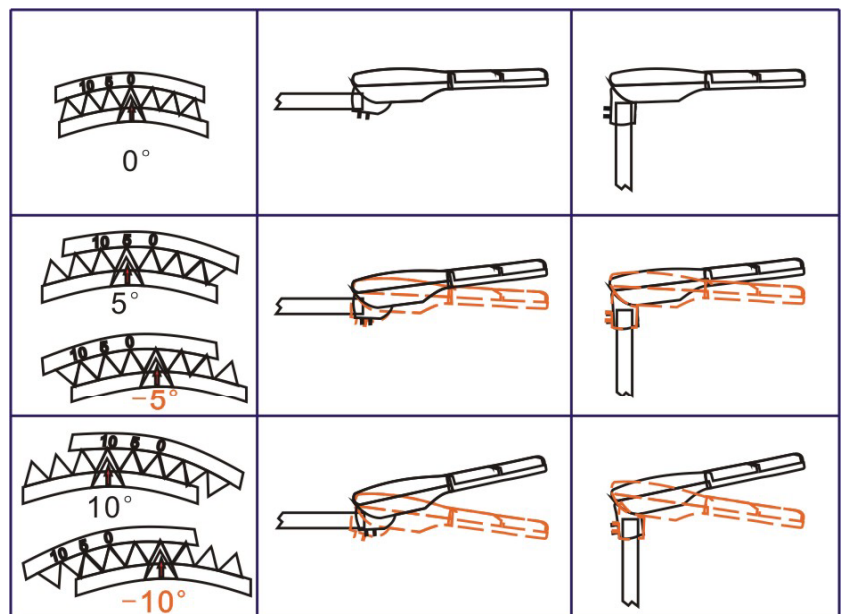


Shaft plate at $+5^\circ$ and -5° settings


Shaft plate at $+10^\circ$ and -10° settings

3. Selecting Mounting Methods

SIDE ENTRY

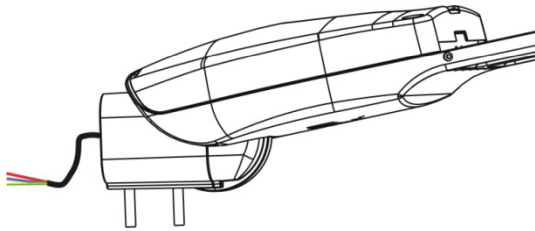


POST TOP ENTRY

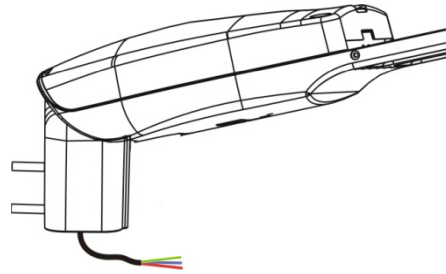


Rotate the shaft into the desired position and lock it with the shaft plate and hexagon screw.

4. Inserting Photocell

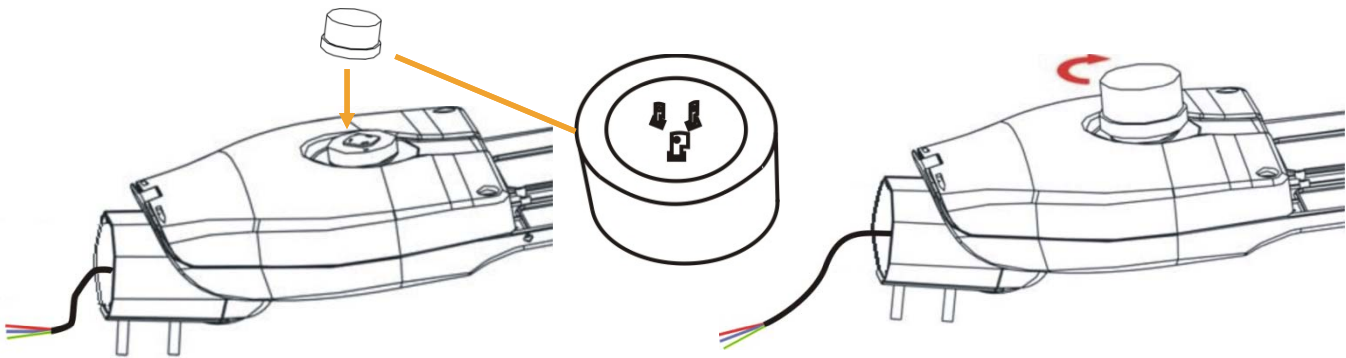

Match the pins to insert and turn to install.

5. Wiring and Mounting with Pole

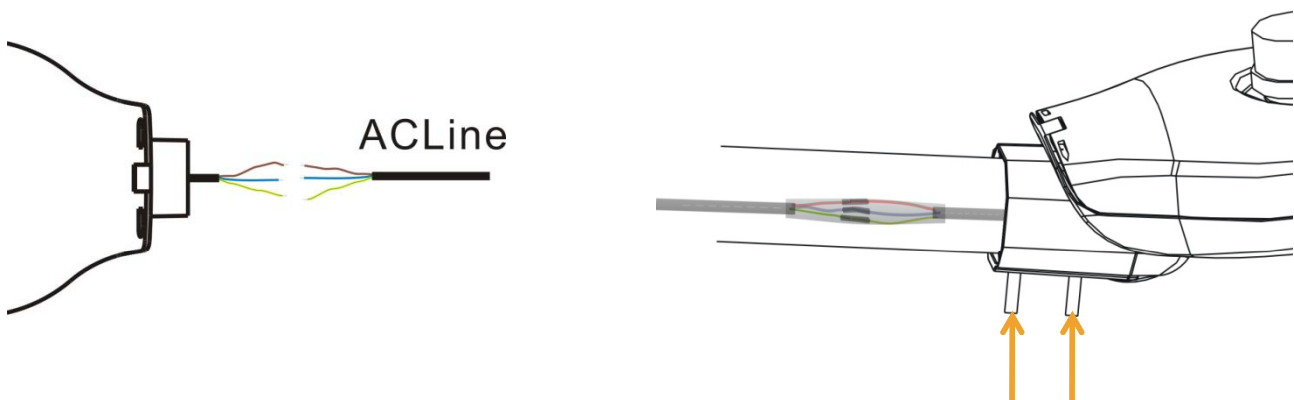

Fasten the 2 screws to secure the shaft and pole

- 1.L(Live):Brown wire
- 2.N(Neutral):Blue wire
- 3.Earth: Green/Yellow wire

Spigot size
Post top: 55-60mm
Side entry: 55-60mm