

**Installation Tips**

1. If the Universal Mounting Brace is to be installed at 90 degrees to the joists then fit the sliding pipes (B) into the round hole in the end brackets (C).
2. If the UMB is required to be installed at an angle other than 90 degrees to the joists then fit the sliding pipes (B) into the elongated holes in the end brackets (C).
3. Never extend the sliding pipes (B) past the mark on the smaller of the two pipes.
4. Always connect the earth wire supplied with the UMB.
5. If the hole in the ceiling is off centre then turn the UMB as required so that the larger of the two pipes is over the hole to ensure that both holes of the centre bracket (A) sit on the larger of the two pipes. If the smaller pipe passes through the holes the bracket may rattle.
6. When fixing the end brackets (C) to the joists be sure to lift them high enough above the gyprock so that the centre bracket (A) sits flat on the gyprock but also takes the load of the ceiling fan so that the pipes do not move or rattle.



For any installation queries please call  
**National Warranty Line**

**1300 360 280**



Monday to Friday from 9am to 5pm EST  
Only available within Australia



**CEILING FAN MUST BE INSTALLED  
BY A LICENSED ELECTRICIAN**

UMBIM-V1.0

**Universal Mounting Brace**  
**For Ceiling Fans**

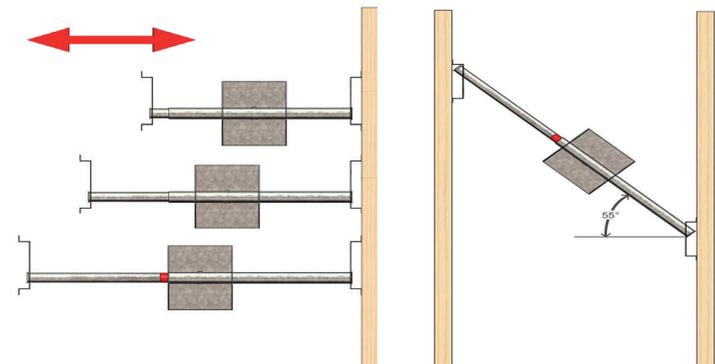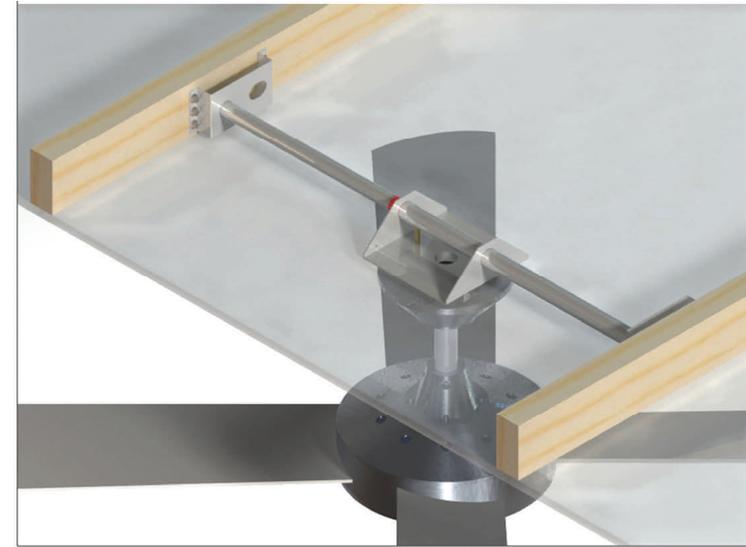

LENGTH ADJUSTABLE  
FROM 420mm to 700mm

ANGLE ADJUSTABLE  
UP TO 55°



**CEILING FAN MUST BE INSTALLED  
BY A LICENSED ELECTRICIAN**