

## Multivan T5 Webasto Telestart Installation Manual

VW Telestart T91 Kit

Reception range up to 1.000 meters

New functions:

- Feedback function – short flashing signals when on every 2 sec.
- Operating time can be set from 10 to 120 min.
- Heating/Ventilation mode

Compatible with webasto heaters:

- Thermo Top C
- Thermo Top E
- Thermo Top P
- Thermo Top V



**These instructions works only with climatronic module as shown.**




Move driver seat to the front and upper position, under the seat you will see place where telestart module should be located.



Screw down the holder as shown on the picture.



There is a ground point under the carpet, screw down the brown connector here.

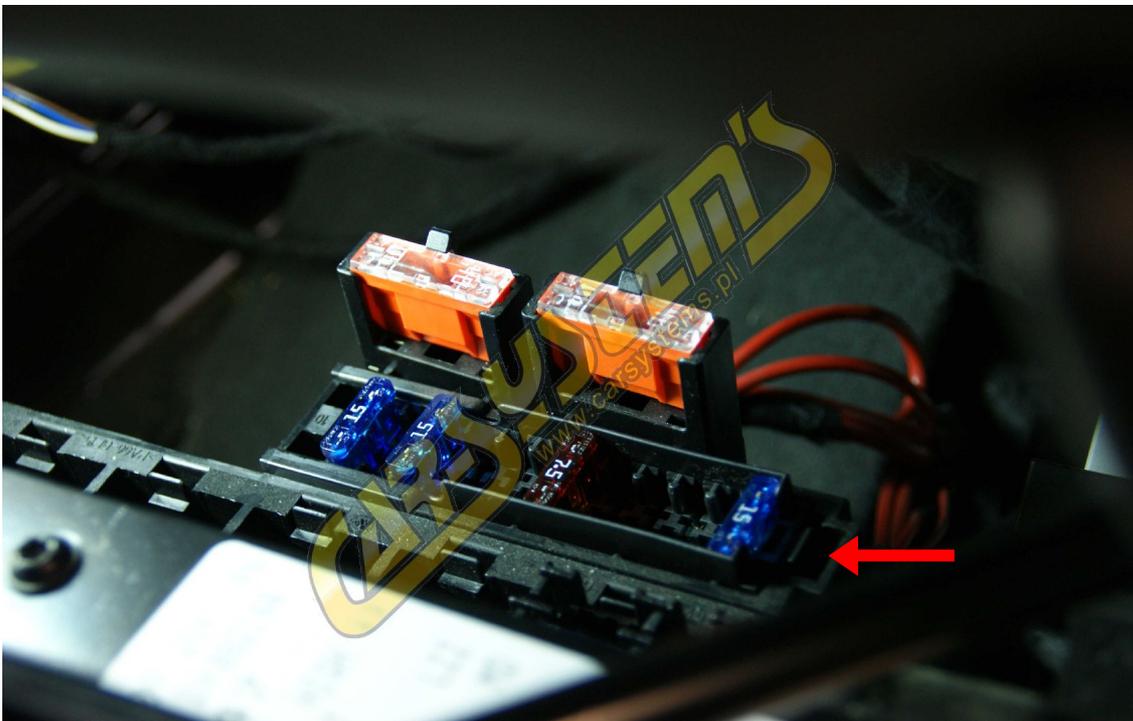


Move driver seat to the back, there is a small fuse box. Move latch to the right side and move whole box down.



Slide violet security bolt and insert red connector into empty hole. Check voltage on the nearest connector, there should be constant +12V. Turn over fuse box and insert 7,5A fuse.



Unscrew 8mm screws, two 13mm and one T25. Remove bottom shield from car.

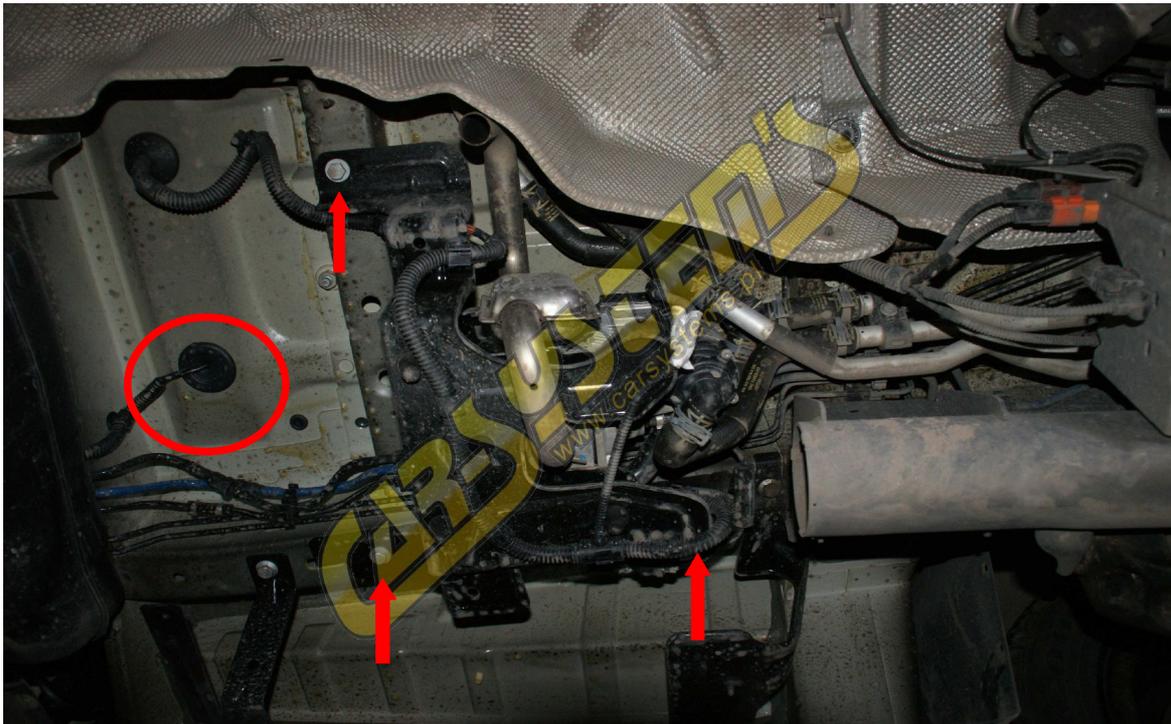

Remove three 13mm screws and lower the webasto unit.  
Input brown wire from under seat through the hole.



Remove plug from webasto heater. Slide green security bolt.



Insert brown connector into 1 pin hole.



Tie the wire as original installation.



Put in telestart module, insert blue plug and antenna plug.



U can put in antenna on the plastic cover of the driver seat.