


Installation manual JLM Octopus 4 Cylinder



Make : Mitsubishi
Model: ASX
Engine : 1.6
Year : 2012

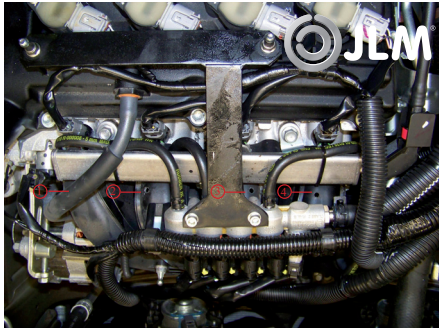

Step 1:

Install JLM Valve Saver Kit as per instructions.

Ensure the hose lengths reach the Kit & Octopus before any fitting takes place.



Step 2:


Disconnect the inlet manifold. Drill a 2mm hole in each of the inlet manifold tubes, close to the cylinder, clean the inlet manifold, reconnect the inlet manifold.

Tap the hole using a M6 x 0.5 Tap.




Step 3

Add some sealant or glue to the thread of the inlet port to stop vacuum leaks.

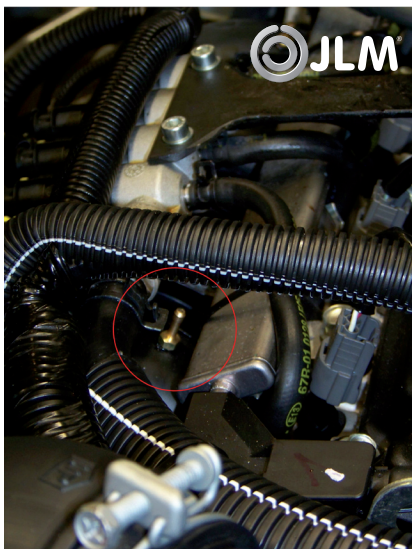


Step 4

Screw inlet ports in place.

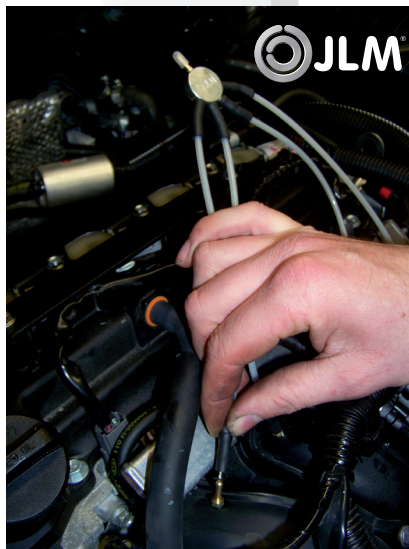

Step 5

Connect the hoses to inlet ports. Connect hose from Octopus to JLM Valve Saver Kit

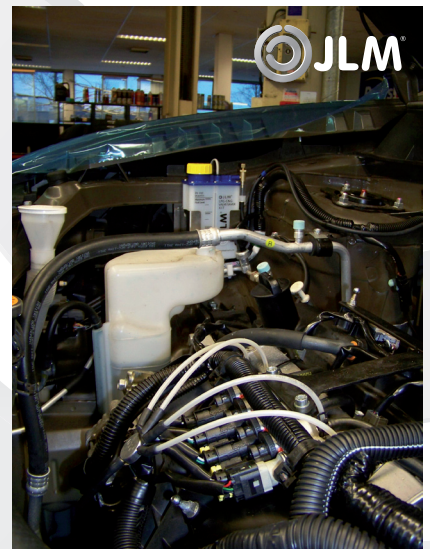

Step 6

Adjust JLM Valve Saver Fluid flow as per JLM instruction manual.

Disclaimer: Installation of the JLM octopus cylinder should only be done by an experienced mechanic. GMS Lubricants b.v. can't be held responsible for any damage caused by installation of the octopus cylinder