




# AA-39

## *Doorphone rain shield*

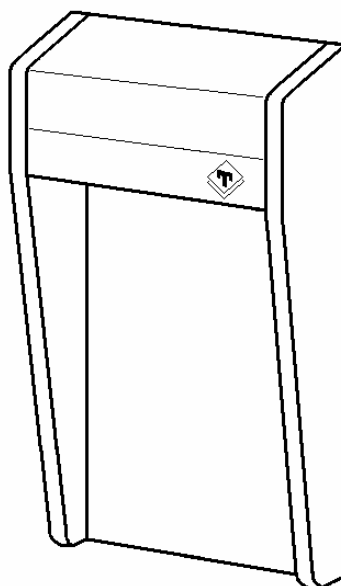

## INSTALLATION MANUAL

Made in Italy by TEMA TELECOMUNICAZIONI S.r.l.

### **Recommendations**

1. Use only original spare parts and consumables supplied by Tema Telecomunicazioni Srl for this equipment. The company shall not be held responsible for any damage caused by the use of materials that they have not supplied.
2. The device has been carefully manufactured and tested. In any case, the product is not recommended for use in situations in which incorrect operating may result in damage to persons and/or property.
3. We recommend that you carefully read all this manual before starting to use the device.
4. Do not expose the device to sunlight and protect it from sources of heat, dust, humidity and chemical agents.
5. This manual is the property of Tema Telecomunicazioni Srl and any duplication and reproduction, even partial, as well as storage on any type of media is forbidden without written permission from Tema Telecomunicazioni Srl.

Revision	Date	Revision reason	Prepared	Checked/Approved
2	09/07/2014	Update	GBC	DP

**1. PARTS COMPRISING THE SYSTEM (PACKING LIST)**

The package consist of the following parts:

<i>Qty</i>	<i>Description</i>
1	Transparent plexiglas AA-39 Doorphone rain shield
1	Drilling template sheet, 1:1 ratio
1	This manual


**2. CHARACTERISTICS**

<b>Characteristics</b>	
Application	Rain shield for TEMA Doorphone systems Can be used with models AA-504, AA-540, AA-506 Maintains compatibility with older models AA-22, AA-24, AA-25, AA-30, AA-31, AA-34, AA-35
Installation options	External, between the wall and the Doorphone
Material	Transparent plexiglas
Operational temperature	From - 20°C to + 80°C
Dimensions (W x H x D)	120 x 235 x 60 mm
Weight	325 gr


**3. NOTES FOR A CORRECT INSTALLATION**

The cover unit must be installed between the wall and the Doorphone to protect. Please also refer to the Doorphone manual, the unit that you are installing, for details and explanation on how to fix the arrival of the connecting cables to the system.

Use the original drilling template drawing found in the package and then proceed to the preparation of the wall to fix the rain shield and Doorphone system to be installed. On the drilling template is also indicated what particular holes should be used (among all those present) for the attachment of each model of Doorphone.

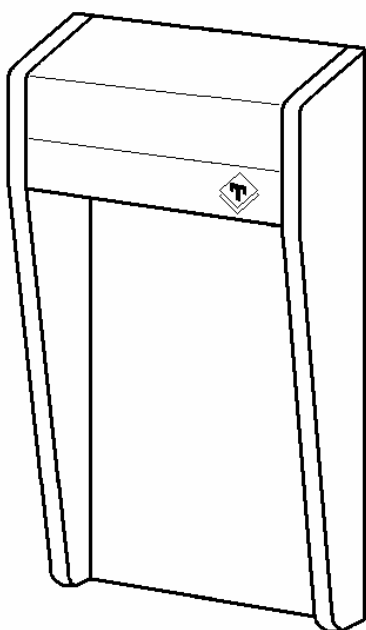

**AA-39 rain shield**

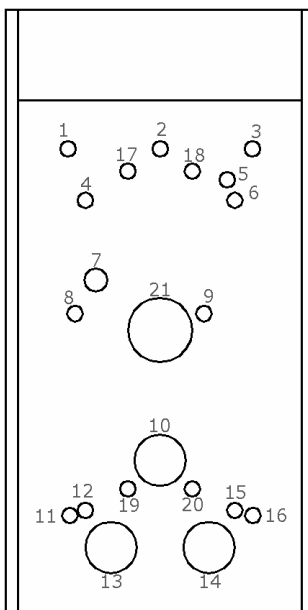

**Holes diagram**

**AA-504 AA-540 and AA-506**  
Holes 17, 18, 19, 20, 21\*

(\* = wiring cables holes )

**AA-22 and AA-24**  
Holes 8, 9, 7\*

**AA-25**  
Holes 2, 13, 10\*

**AA-30 and AA-31**  
Holes 4, 6, 12, 15, 14\*

**AA-34 and AA-35**  
Holes 1, 5, 11, 16, 13\*, 14\*

**Holes details for each model**