

Veneto


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



790012

7900+1206

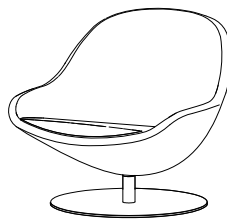

790014


7900+1405




790015

7900+1505


7900

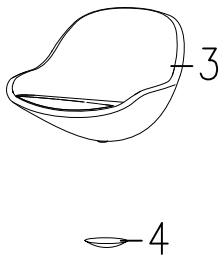

1206

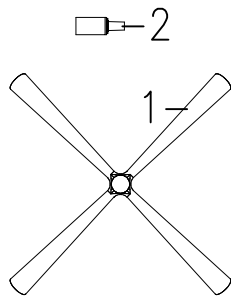

1405

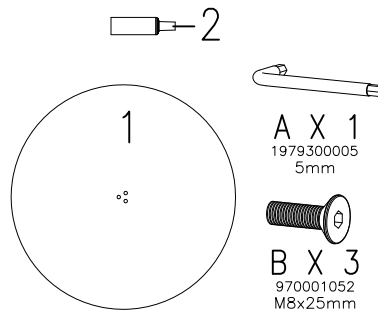

1505


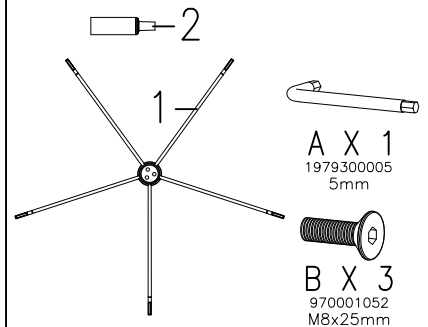


FIG.
1



DK Skruerne spændes hård.
US Tighten the screws hard.
D Ziehen Sie die Schrauben hart.
F Serrer les vis à fond
NL Schroeven hard aandraaien.
E Aprieta fuerte los tornillos
P Aperte os parafusos com força
JP 「ネジを固く締めます」。

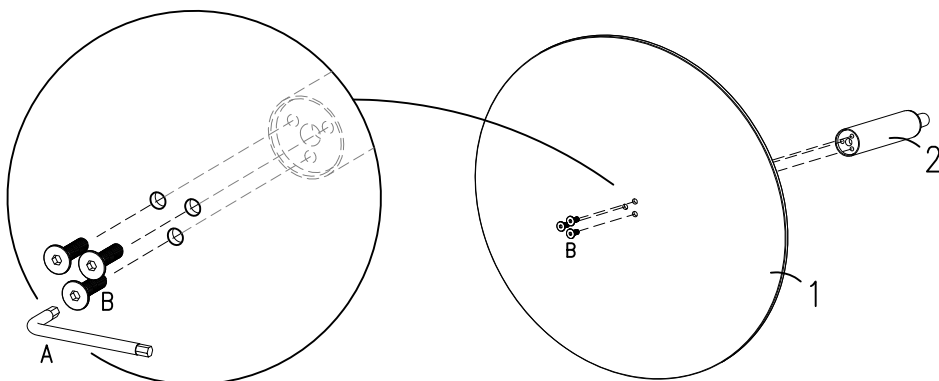