


Toco

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


1360

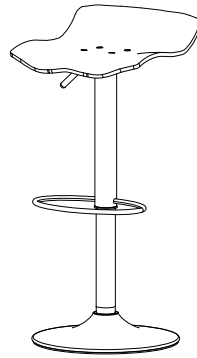

Beslag - Beschläge - Fittings - Set de montage



A X 1
970003224



B X 1
970003226



C X 4
970003227
M6x11/D15.3,d10



D X 2
979900022
M6x16mm



E X 2
970003745
M6x13mm




F X 1
1979300005
5mm




G X 4
979900096
Ø13/Ø6.2x1mm



H X 4
970003121
Ø9/Ø6.2x1.2mm

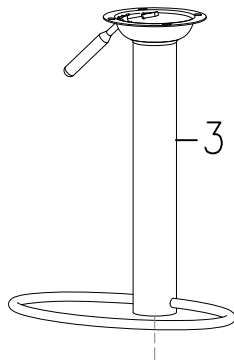

3

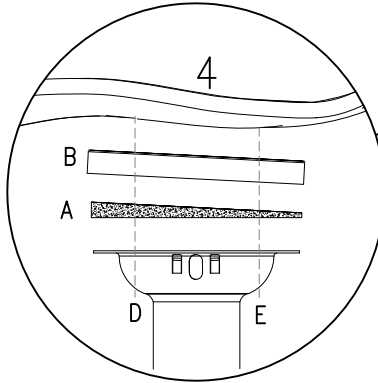



4

B


A

D

E

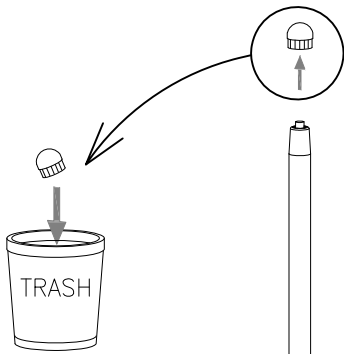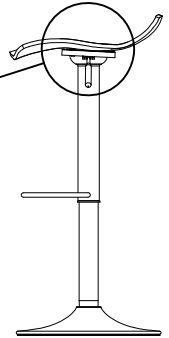

2

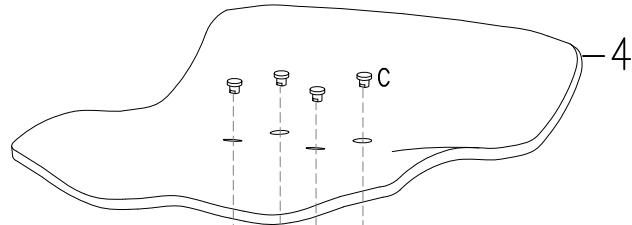


4


C

B

A

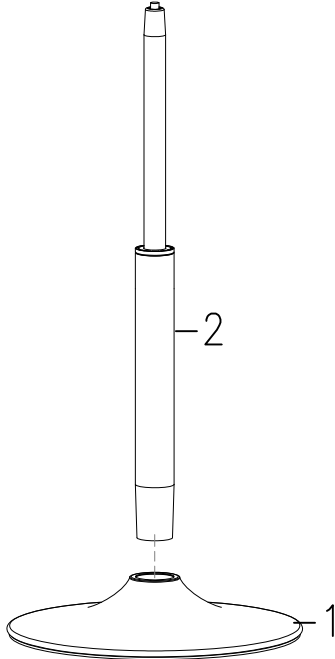

1

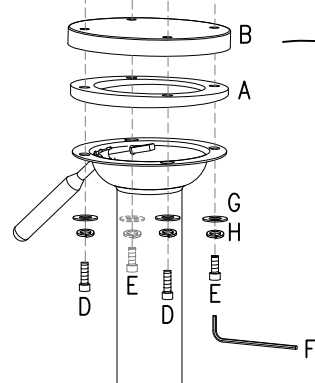

B

A

C

D

E

F

G

H

B

A

C

D

E

F

G

H