

smartville

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



L038

0100+4030
112x66x76 cm




L039

0100+5030
112x66x76 cm



L040



0110+4030
112x66x76 cm

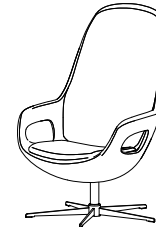

L041



0110+5030
112x66x76 cm

0100 / 0110

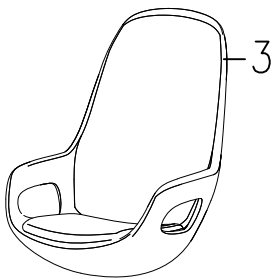

C X 1
6mm

4030 / 1403



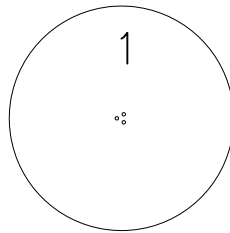


A X 1
1979300005
5mm



B X 3
970001052
M8x25mm

4050 / 1503

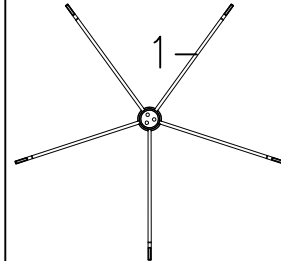


A X 1
1979300005
5mm



B X 3
970001052
M8x25mm


FIG.
1



A X 1
5mm



B X 3
M8x25mm

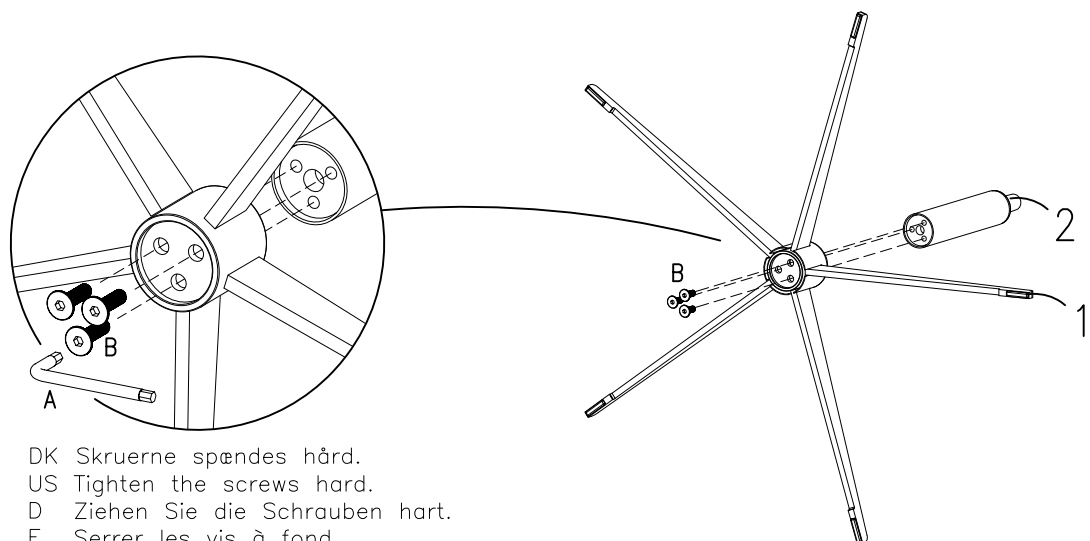

DK Skruerne spændes hård.
US Tighten the screws hard.
D Ziehen Sie die Schrauben hart.
F Serrer les vis à fond
NL Schroeven hard aandraaien.
E Aprieta fuerte los tornillos
P Aperte os parafusos com força
JP 「ネジを固く締めます」。

FIG.
2

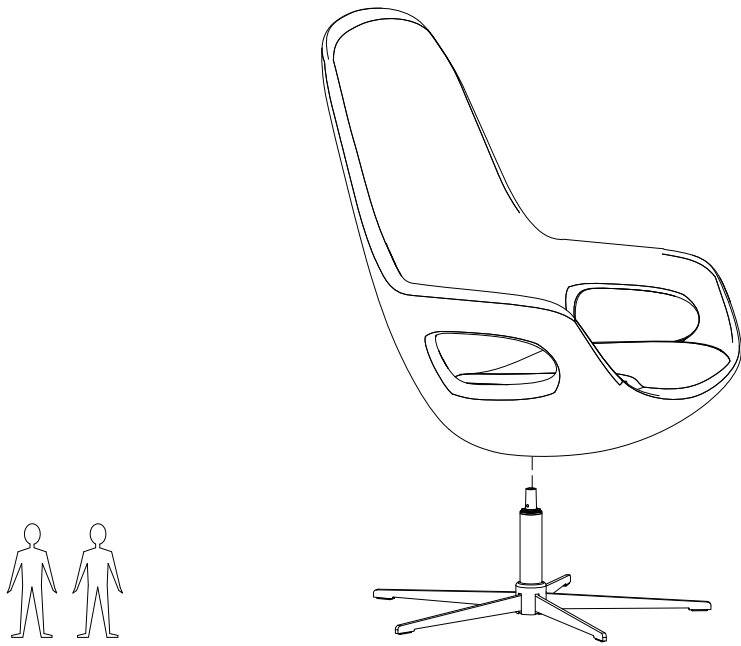


FIG.
3

smartville 0100

