

Siena Barstool

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

1580



Beslag - Beschläge - Fittings - Set de montage



A X 2
979900248
M6x25mm



B X 2
979900095
M6x19mm



C X 4
970003121
D9,d6,2x1.2mm






D X 4
979900096
D13,6.2x1mm



E X 1
1979300005
5mm



G X 1
970003224

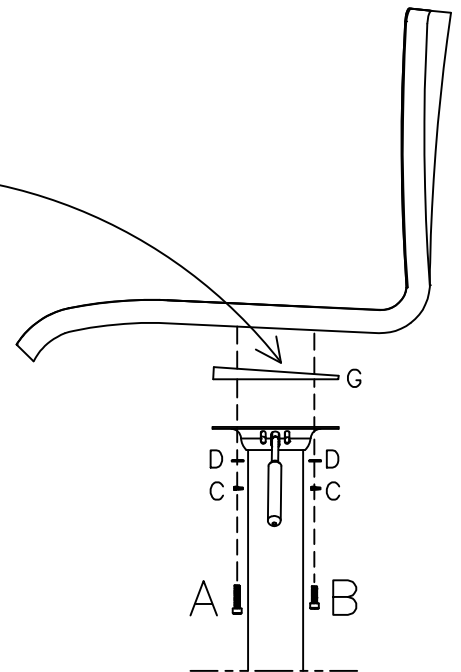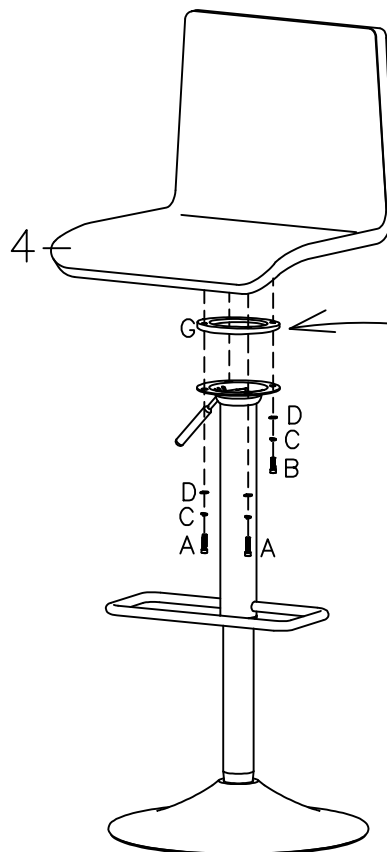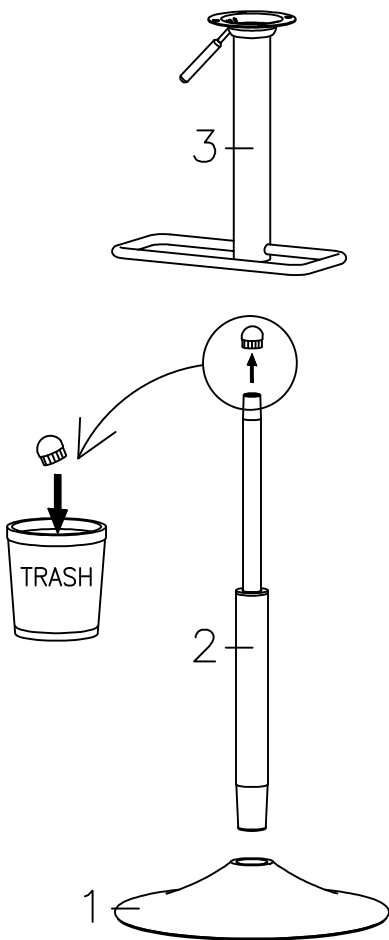

Attention!

