


Nomi

Design by BoConcept


Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

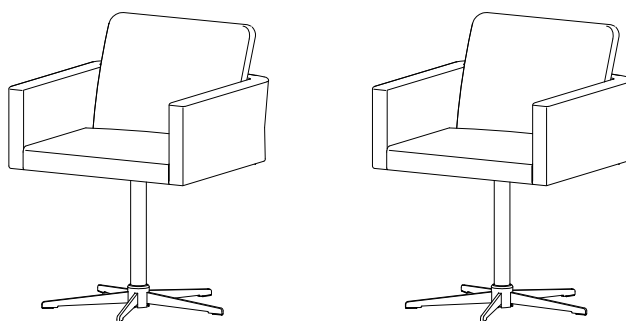

0010+1553

81x59,5x54,5 cm

Korpus — Korpus — Carcase — Carcasse

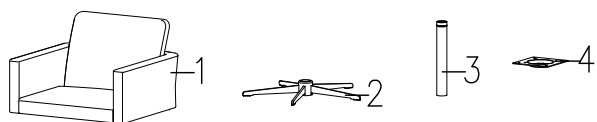

Beslag — Beschläge — Fittings — Set de montage — Acessórios



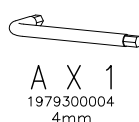


FIG. 1



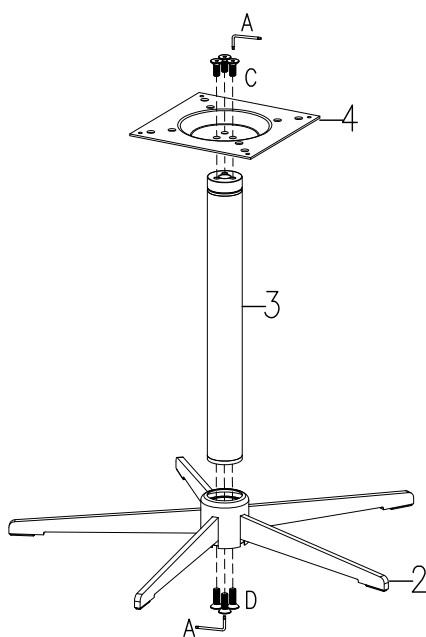



FIG. 2

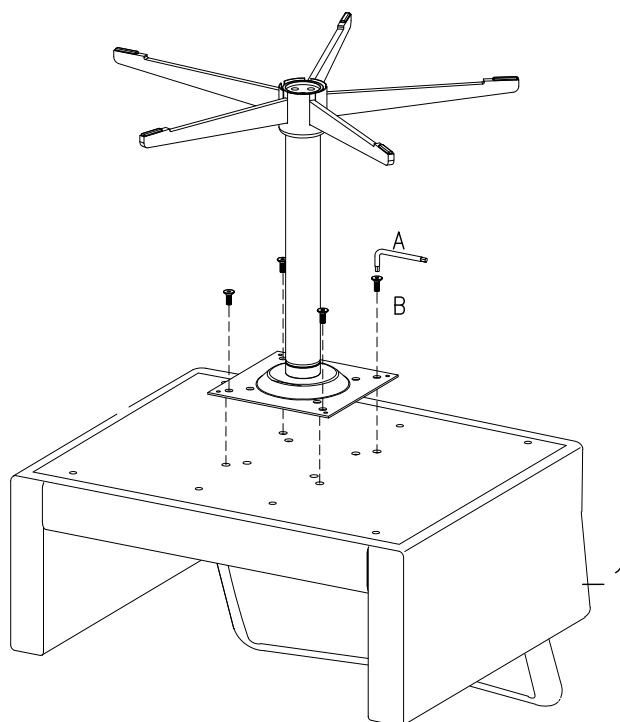

Nomi

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

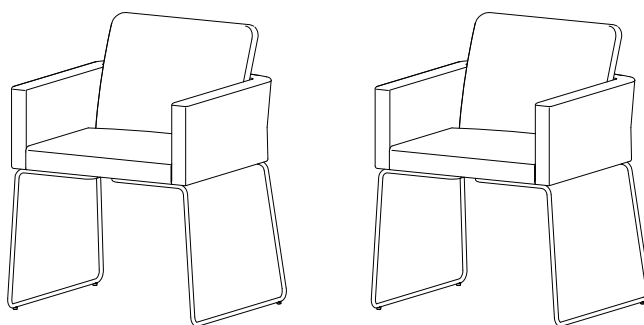


0020

81x60x60 cm

Korpus - Korpus - Carcase - Carcasse

Col. 1

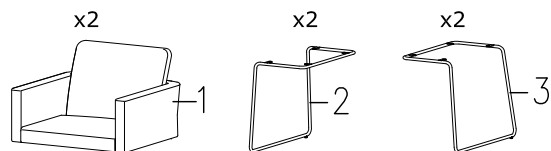

Beslag - Beschläge - Fittings - Set de montage - Acessórios

Col. 1

x2



A X 8
979900259
Ø16xd6.5x1.25mm



B X 8
979900139
Ø11xd6.5x2mm



C X 8
970000958
M6x20mm



E X 1
1979300004
4mm

FIG.
1

