


# Morini

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje


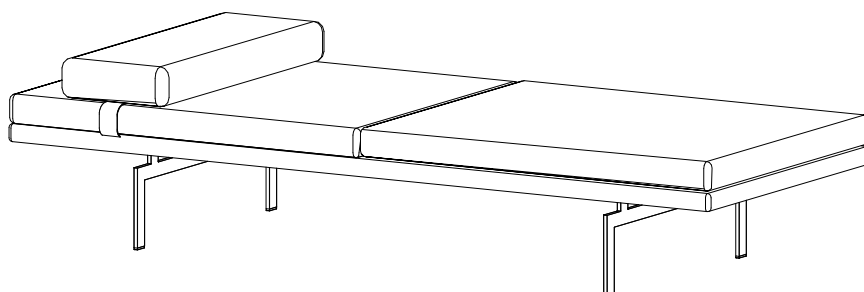


## 4090 + 0700

39/51x200x80 cm

Korpus - Korpus - Carcase - Carcasse  
4090 Col. 1

0700 Col. 2

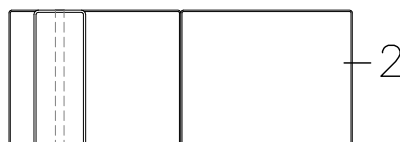

Beslag - Beschläge - Fittings -  
Set de montage  
col.1



A X 8  
970003046  
M8x40mm



B X 1  
970003045  
5x79x30mm

FIG.  
1

