



Volani

Design by BoConcept


Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

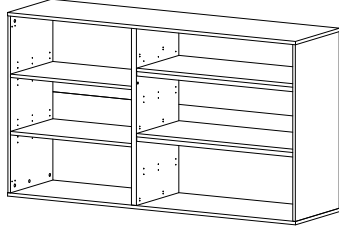

2900
102,4x182,7x50 cm

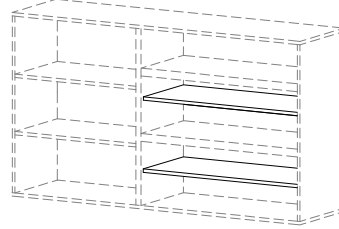


900
1,9x99,15x44,1 cm

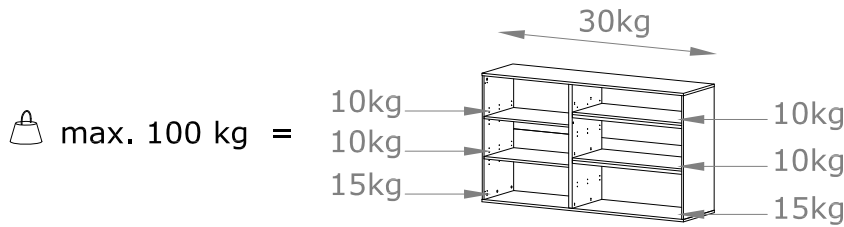


Volani 2900


Col. 1

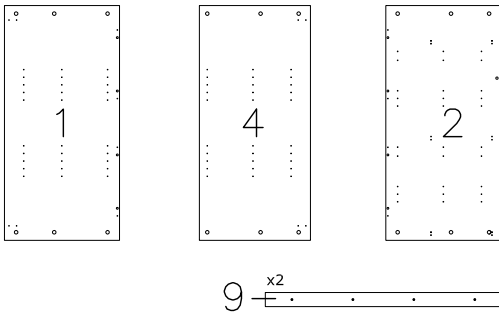

Col. 2

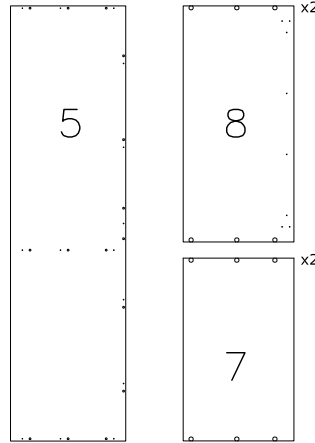


Col. 3

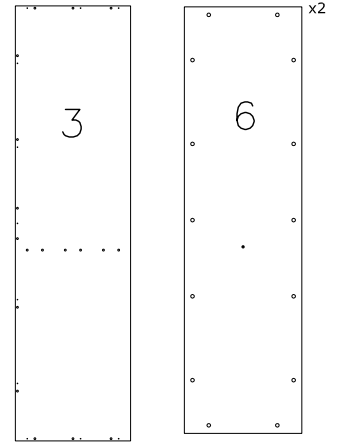

Beslag - Beschläge - Fittings - Set de montage

col.1

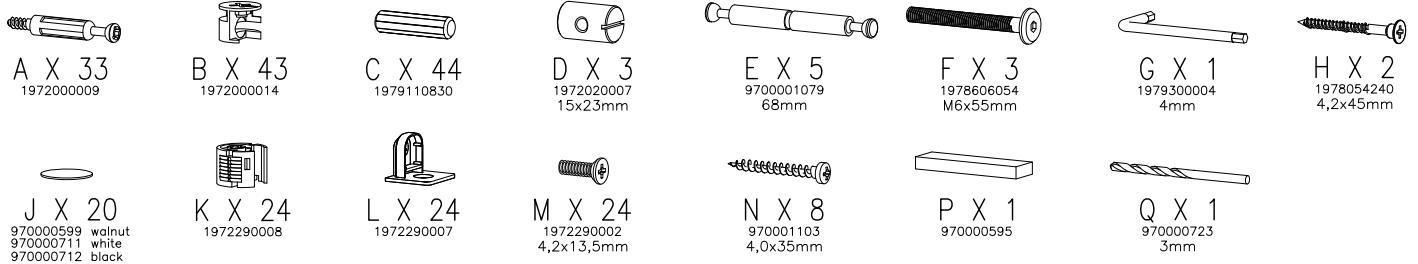

Volani 900

Col. 1




Beslag - Beschläge - Fittings - Set de montage

col.1



Værktøj - Werkzeuge - Tools - Outils

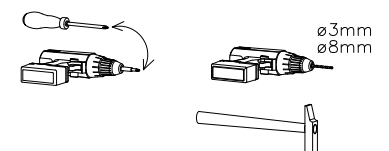

- A X 33
- B X 15
- C X 18
- D X 3
15x23mm







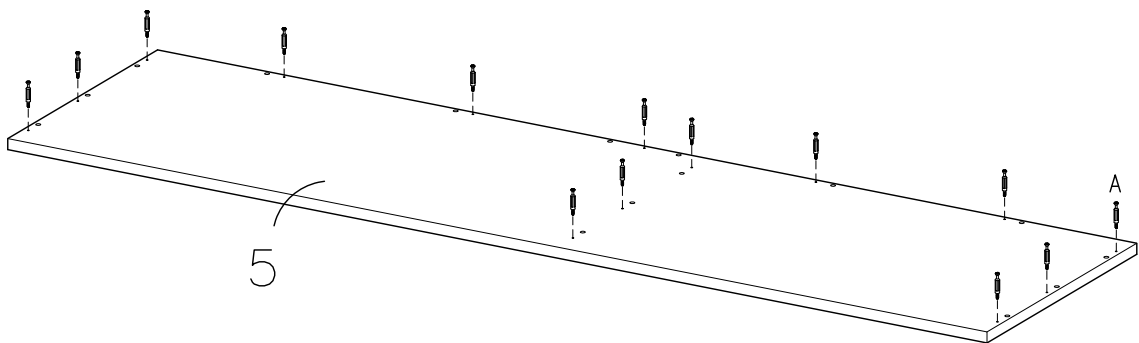


FIG. 2

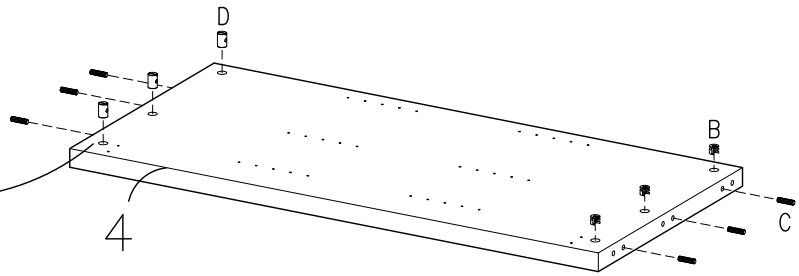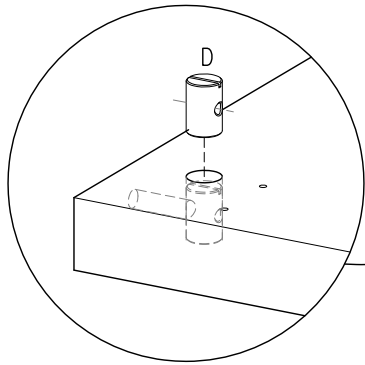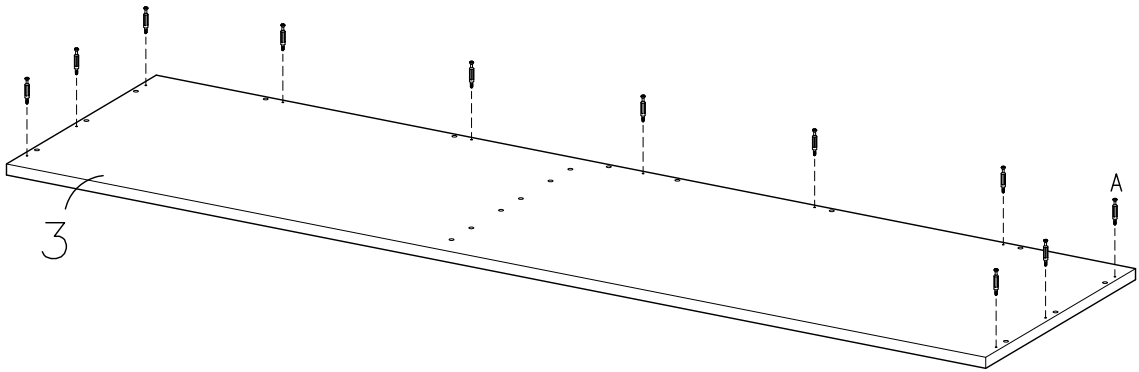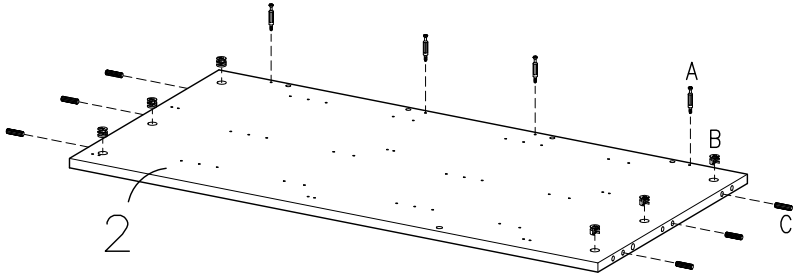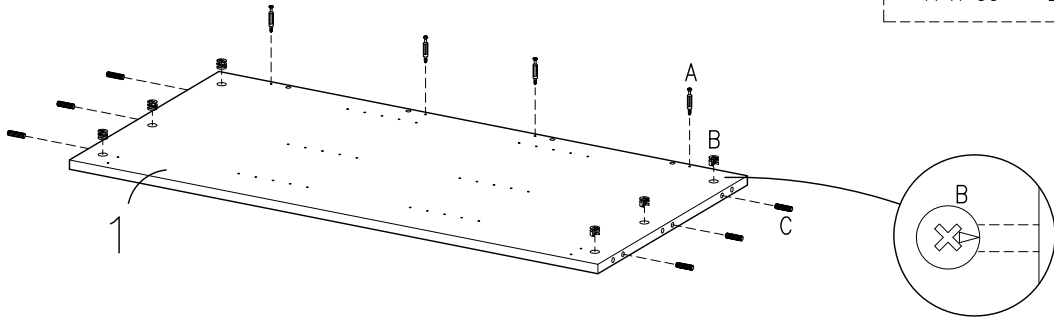

Attention!

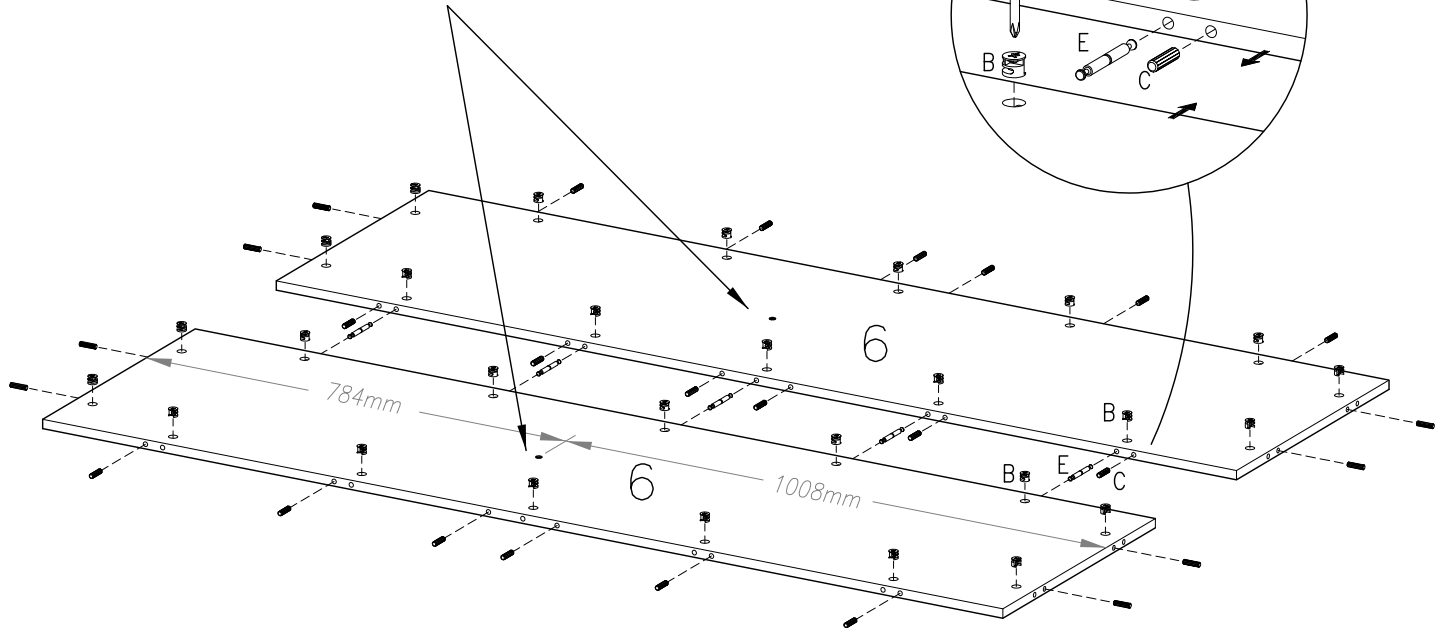
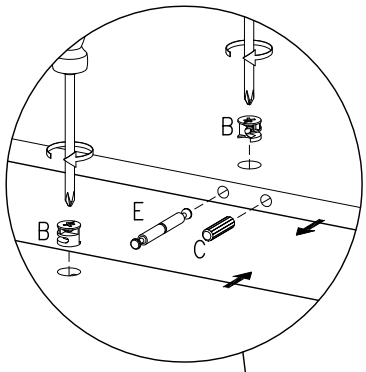


FIG. 3

Attention!

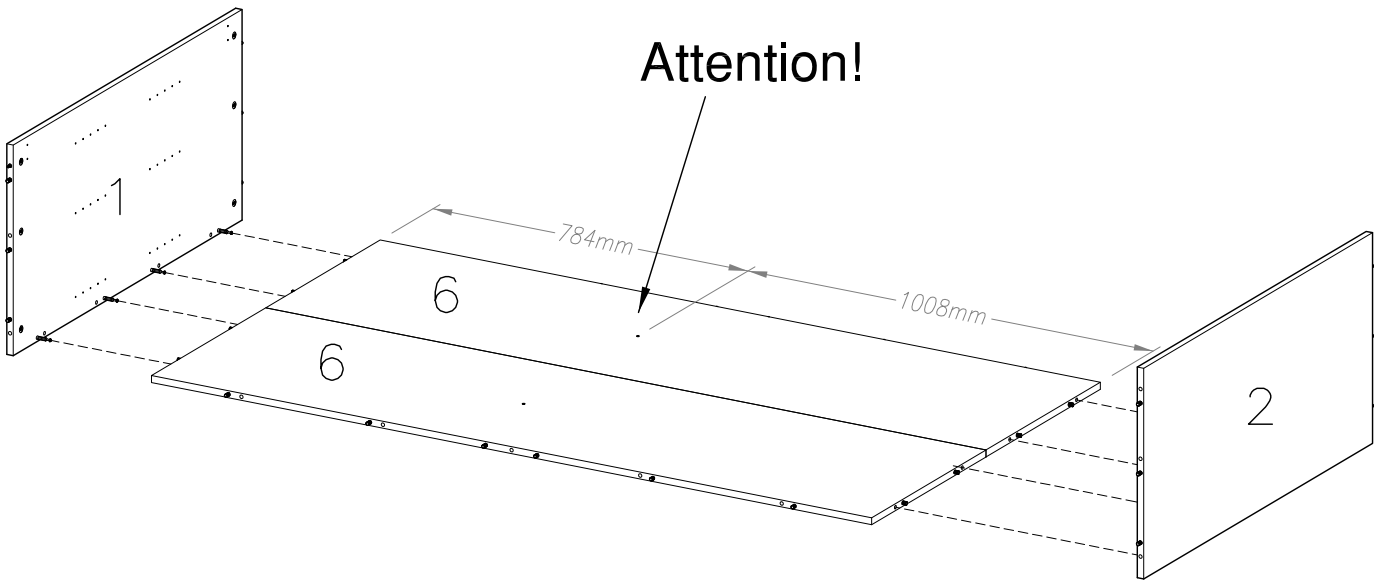


FIG. 4

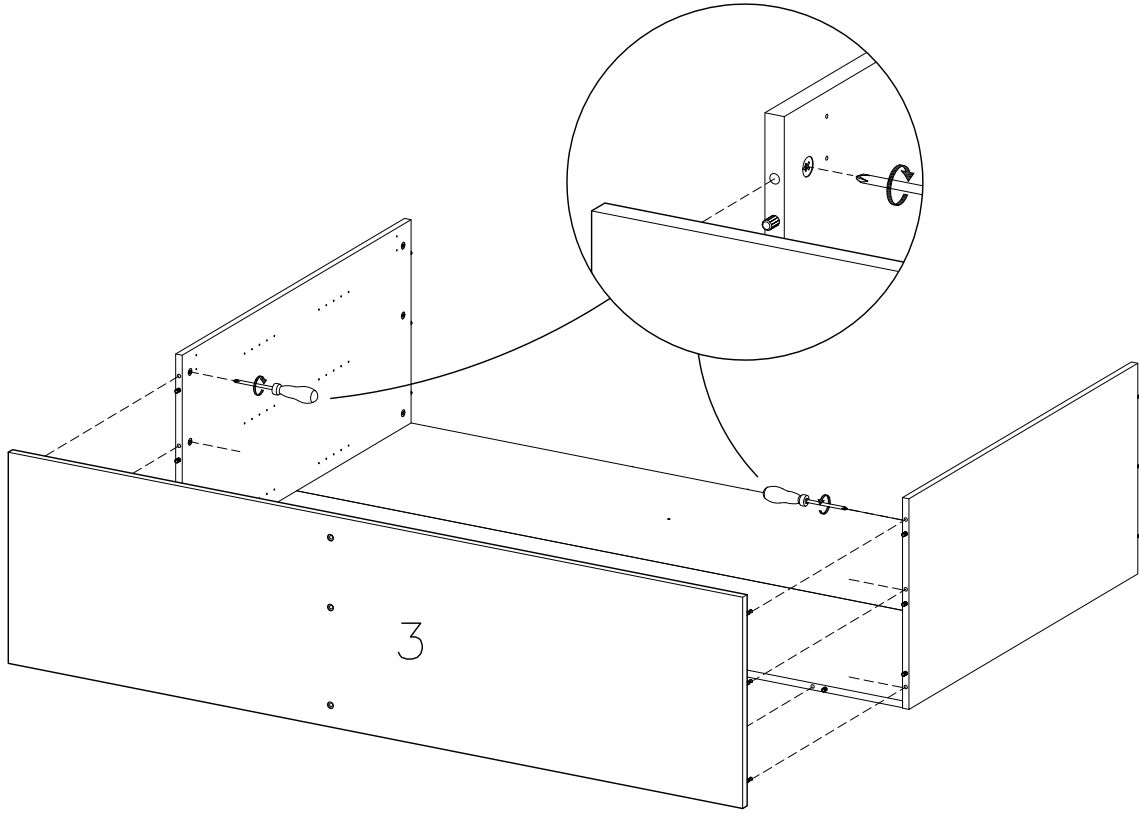


FIG. 5


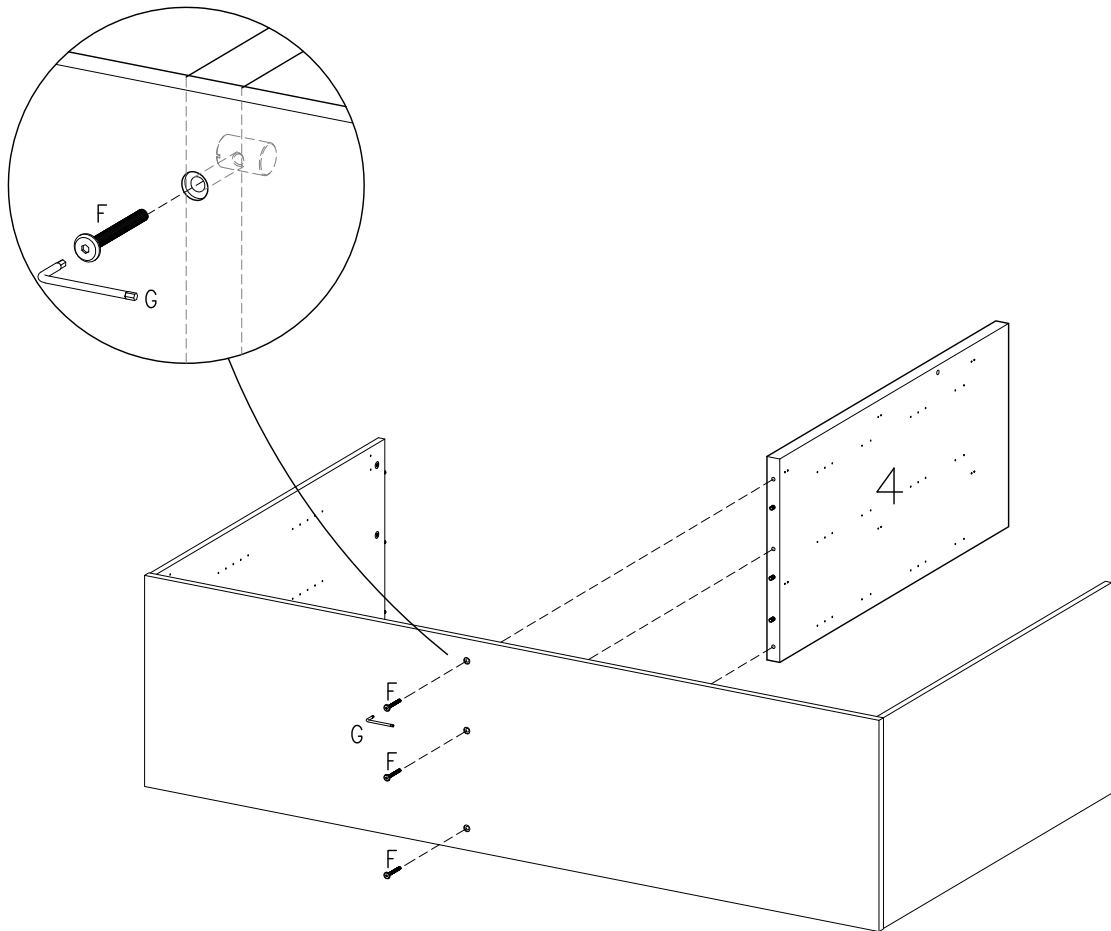


FIG. 6














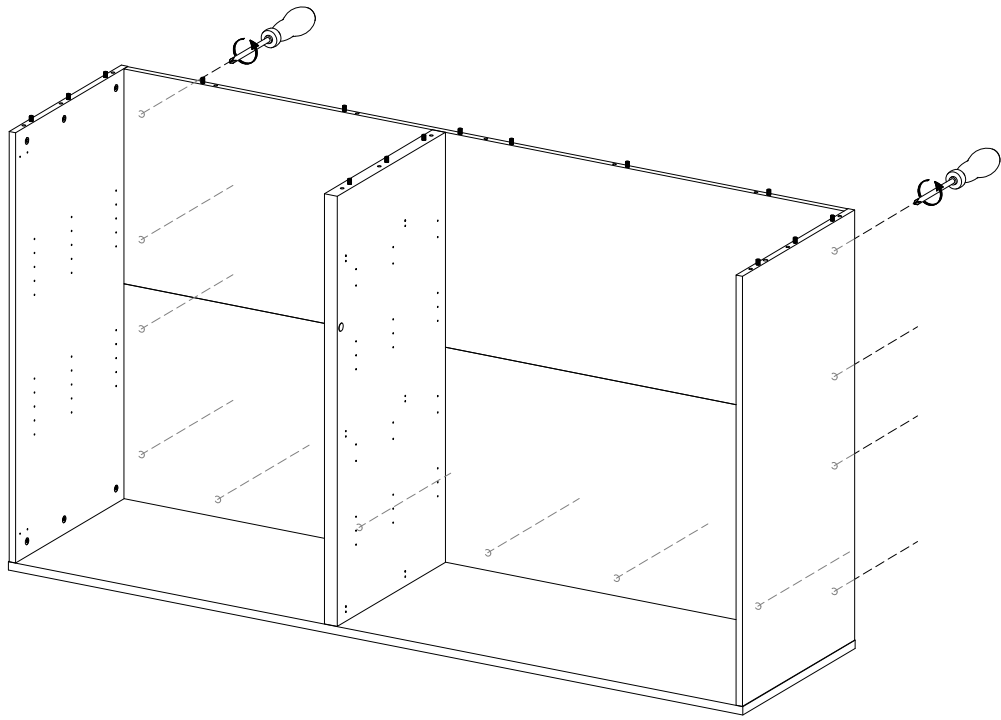



FIG. 7

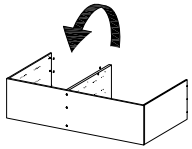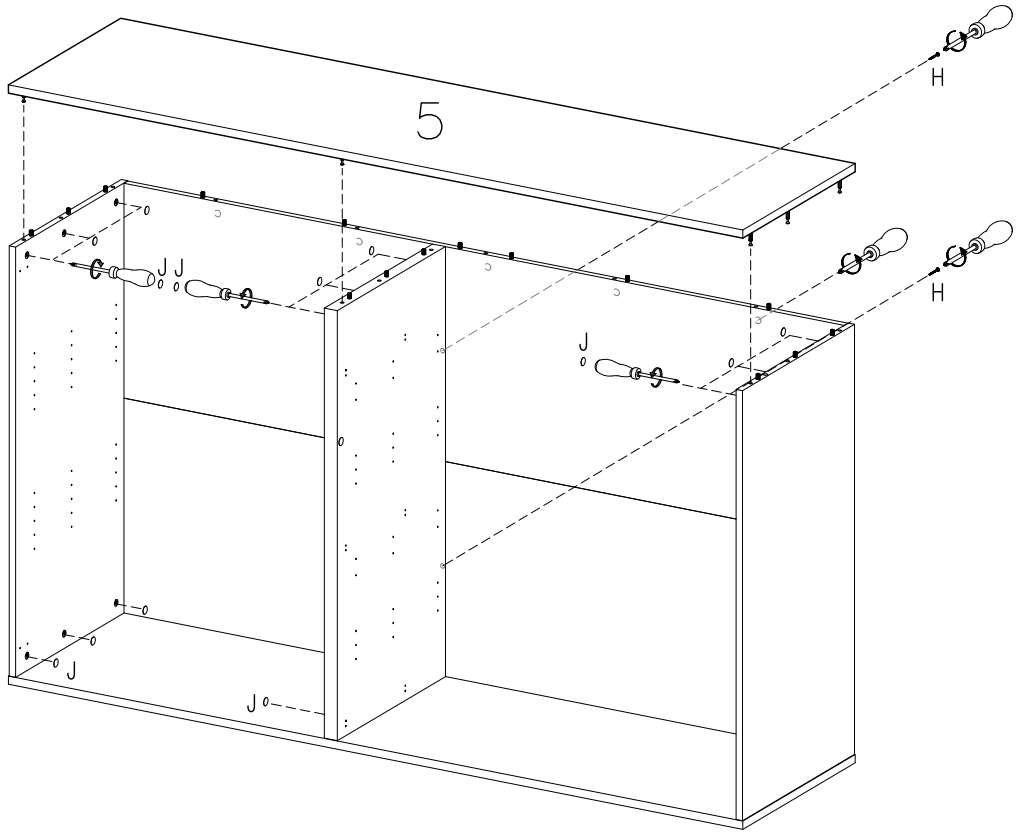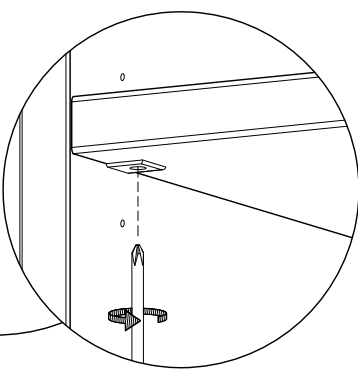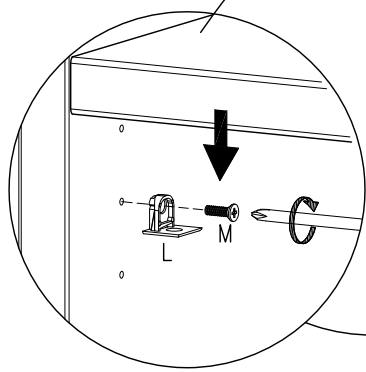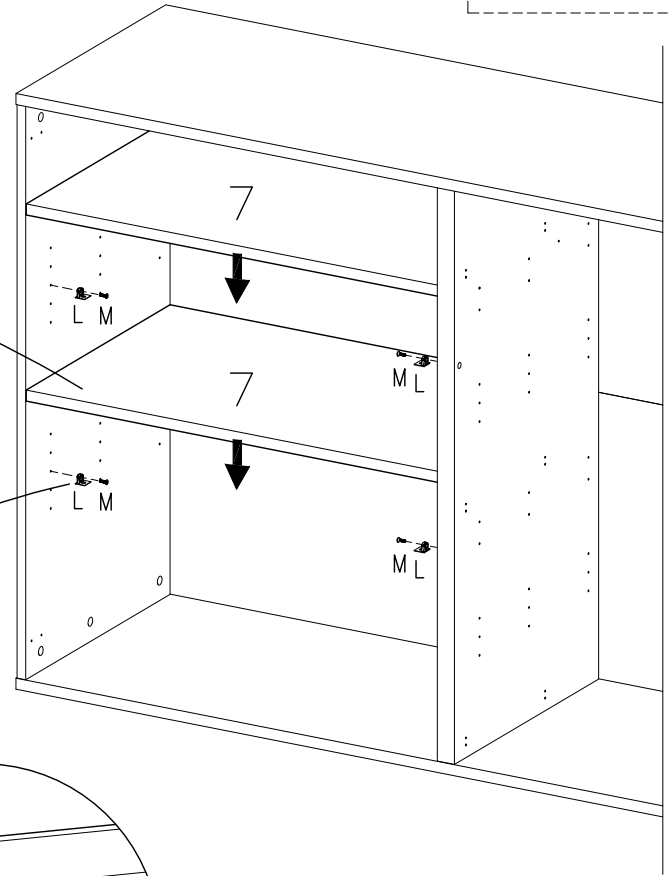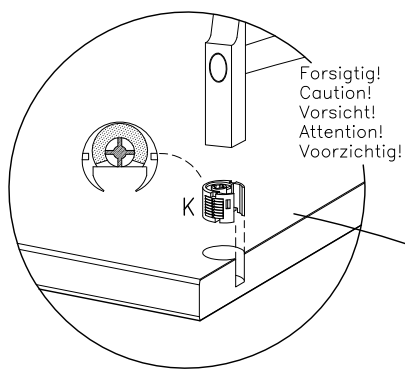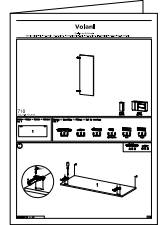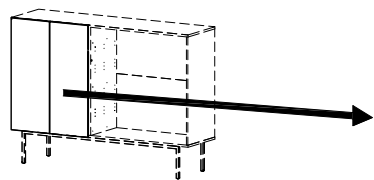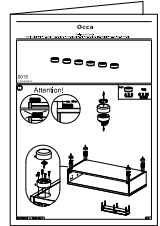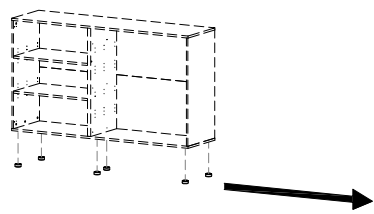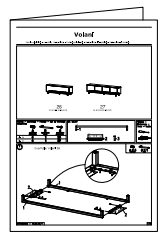








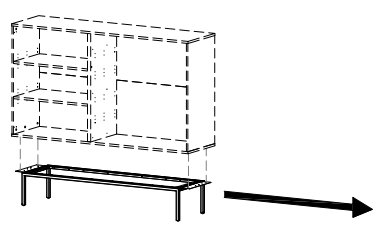


Attention!

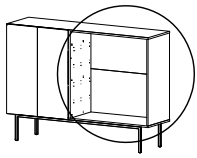



- 
K X 12
- 
L X 12
- 
M X 12
3,8x13,5mm
- 
N X 8
4,0x35mm
- 
P X 1
- 
Q X 1
3mm

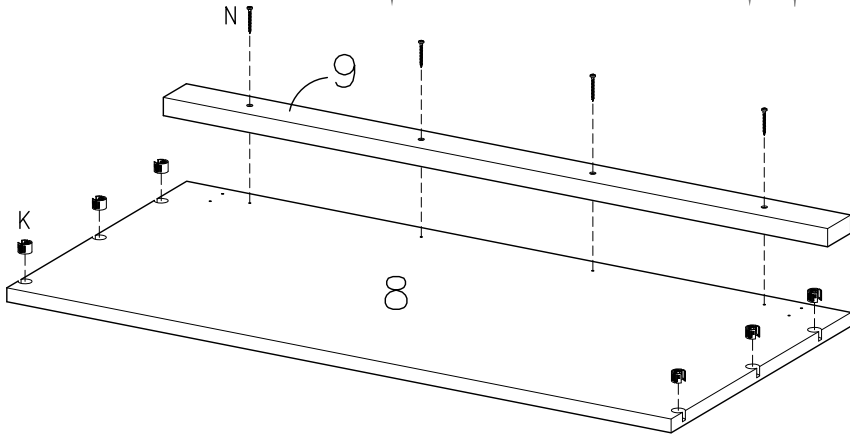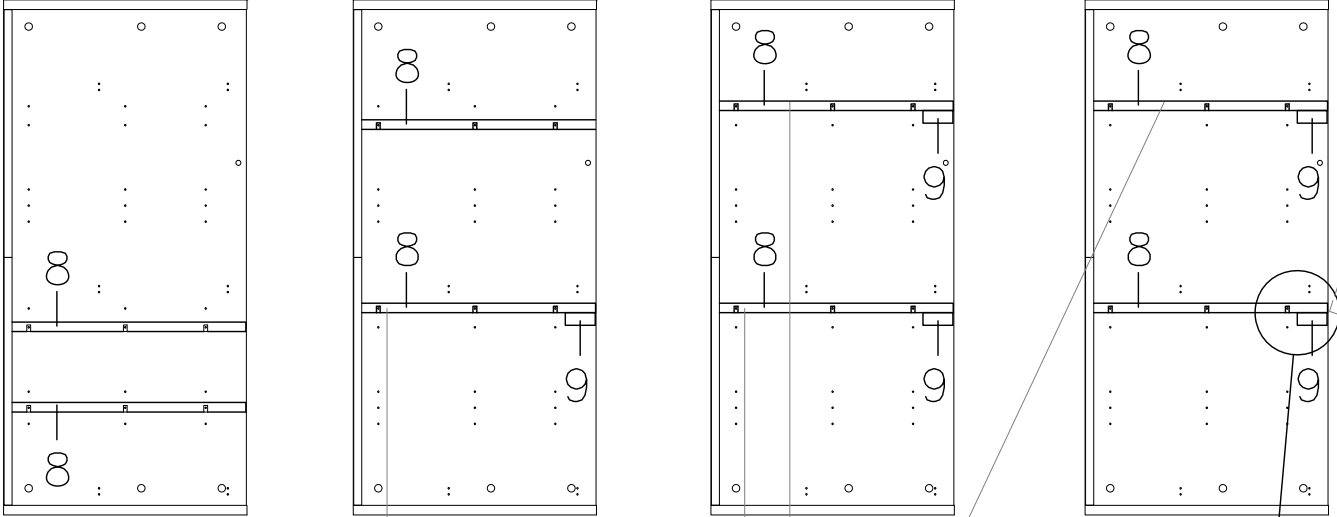

Attention!

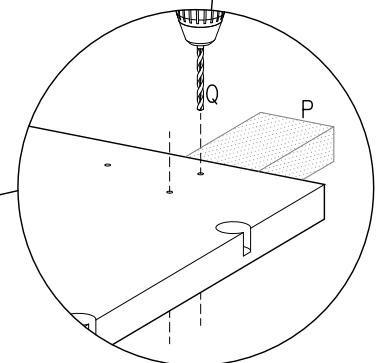
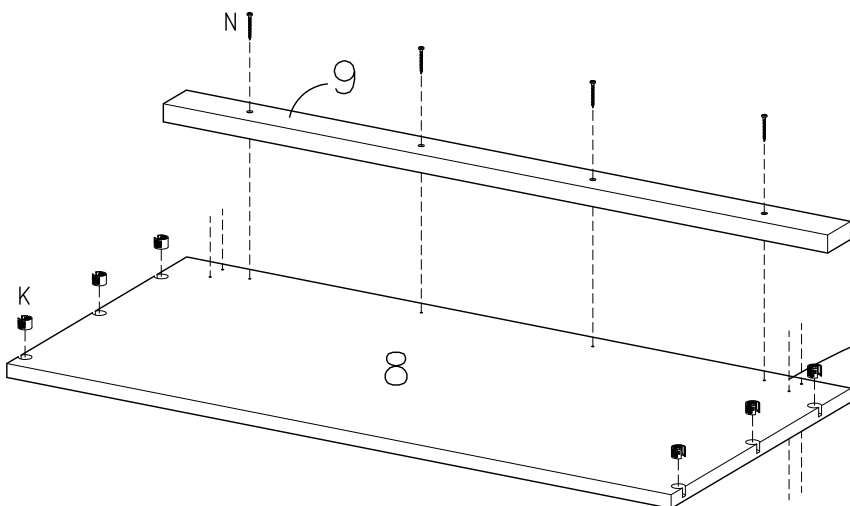
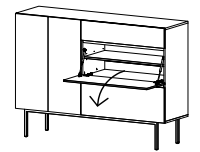


FIG. 11







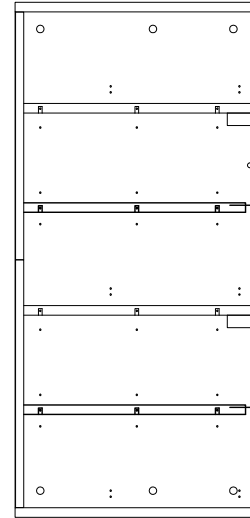


FIG. 12

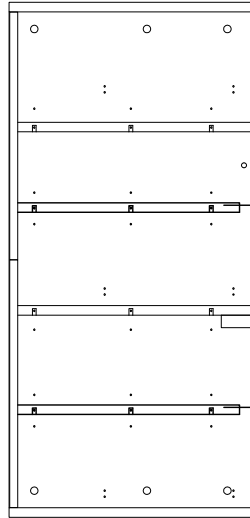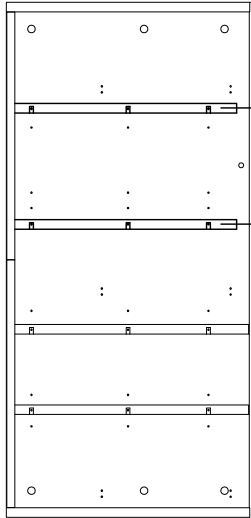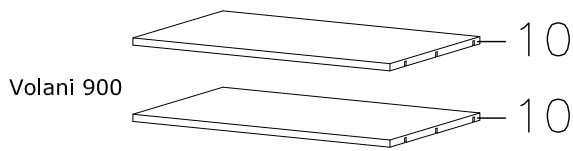

- DK Ved reklamation oplyses følgende:
- D Im Reklamationsfall, bitte folgendes erläutern:
- US In case of claims, please state the following:
- F En cas de réclamation, veuillez indiquer:
- NL Bij service volgene mededelen
- E En caso de reclamacion, indicar lo siguiente:
- P No caso de reclamação, por favor indique o seguinte:
- JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

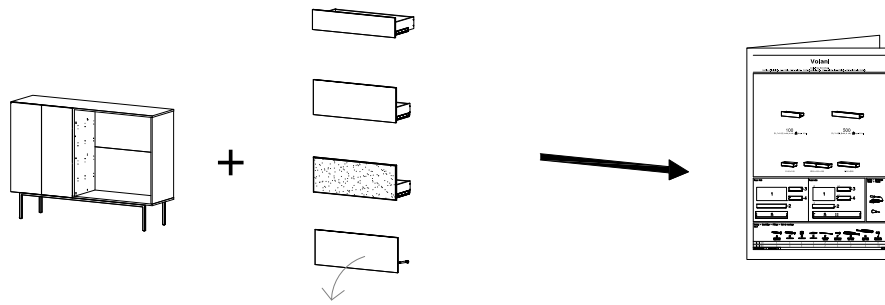