


London


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

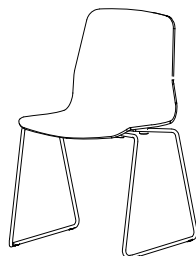

D009


1860+1880
82x50,8x50,5cm

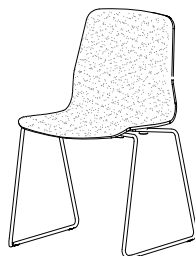

D011

1870+1880
82x50,8x50,5cm

1880



A X 4
970003082
M6x18mm

B X 4
970003078

C X 4
970003079

D X 4
970003080

E X 8
970003077
M4x35mm

F X 1
1979300004
4mm

1860



1870



Værktøj –
Werkzeuge –
Tools – Outils



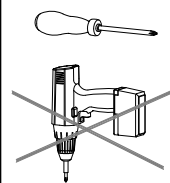


FIG.
1

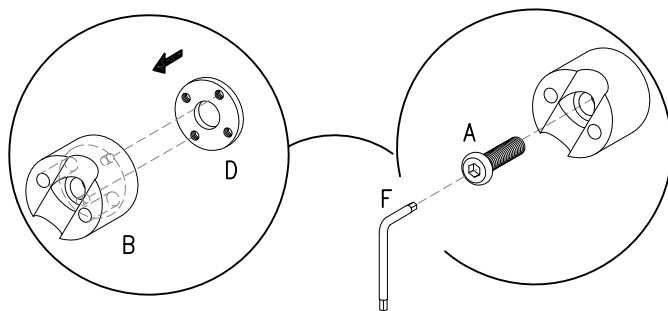

A X 4 **B X 4** **D X 4** **F X 1**
M6x18mm 4mm

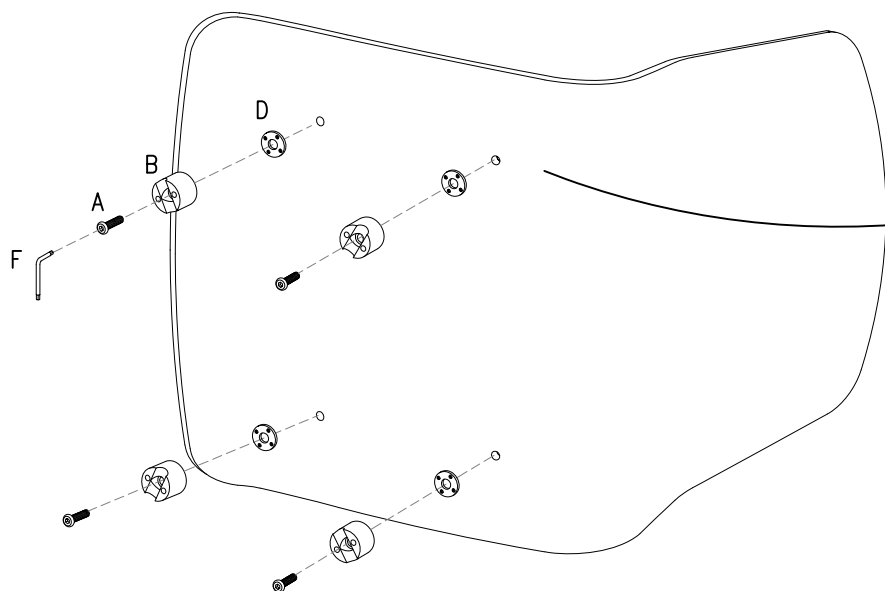

Attention!



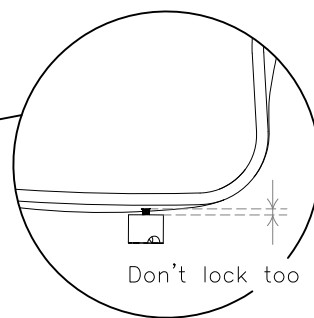


FIG.
2

step 1

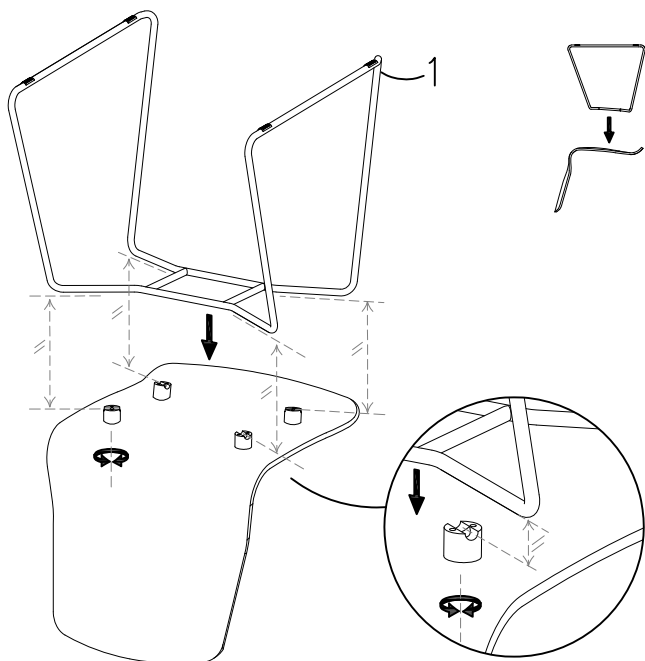


step 2

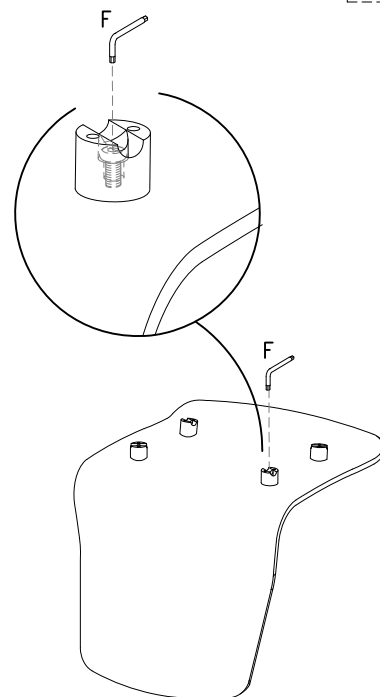

F X 1
4mm

FIG.
3

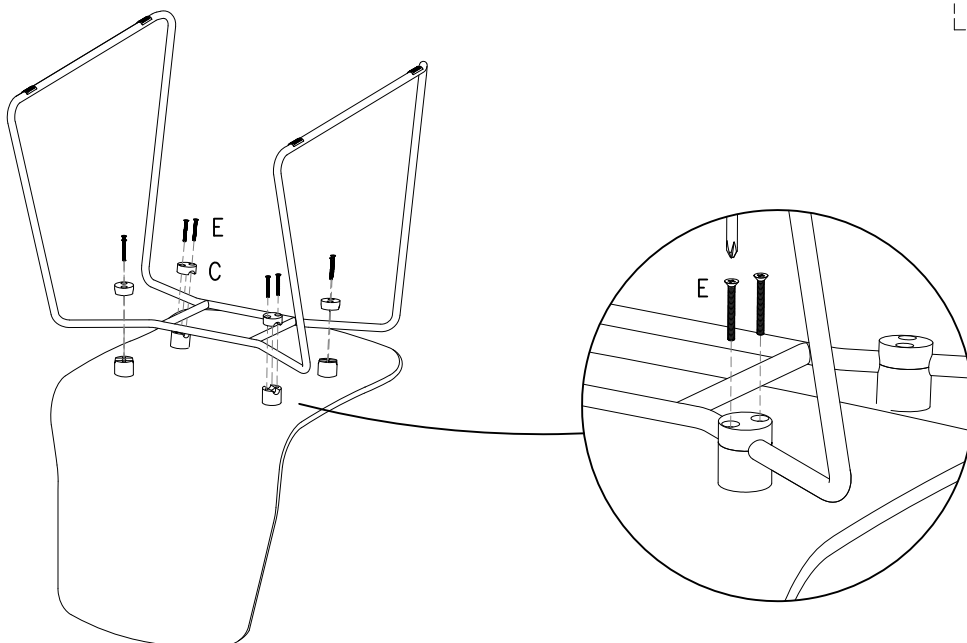

C X 4

E X 8
M4x35mm

DK Ved reklamation oplyses følgende:
D Im Reklamationsfall, bitte folgendes erläutern:
US In case of claims, please state the following:
F En cas de réclamation, veuillez indiquer:
NL Bij service volgenv mededelen
E En caso de reclamacion, indicar lo siguiente:
P No caso de reclamação, por favor indique o seguinte:
JP お気づきの点等ございましたら、以下の点をお知らせください。

Example!

