

Imola


Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje




L002

1580+8515
110x95x99 cm

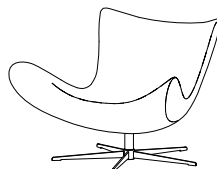


L003

1580+8520
73x95x90 cm



L004

1558+8550
41x66x48/56 cm

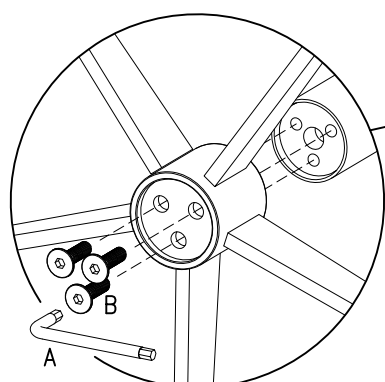

DK Skruerne spændes hård.
US Tighten the screws hard.
D Ziehen Sie die Schrauben hart.
F Serrer les vis à fond
NL Schroeven hard aandraaien.
E Aprieta fuerte los tornillos
P Aperte os parafusos com força
JP 「ネジを固く締めます」。

