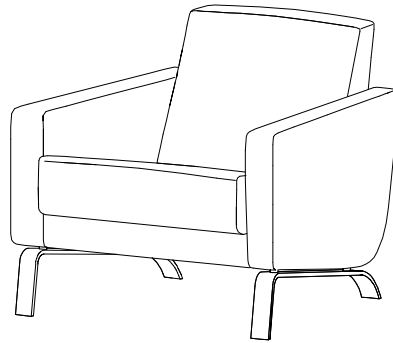


Fly

Design by Bo Concpet

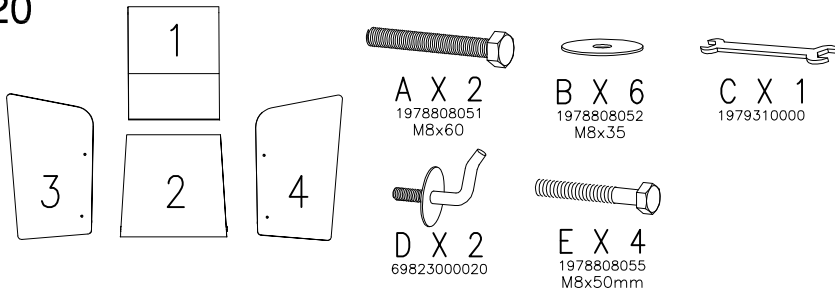
Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



20+21

Beslag - Beschläge - Fittings - Set de montage

20



Beslag - Beschläge - Fittings - Set de montage

21

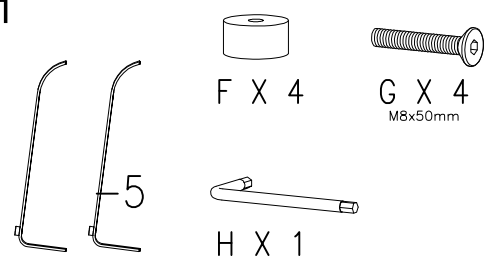


FIG. 1


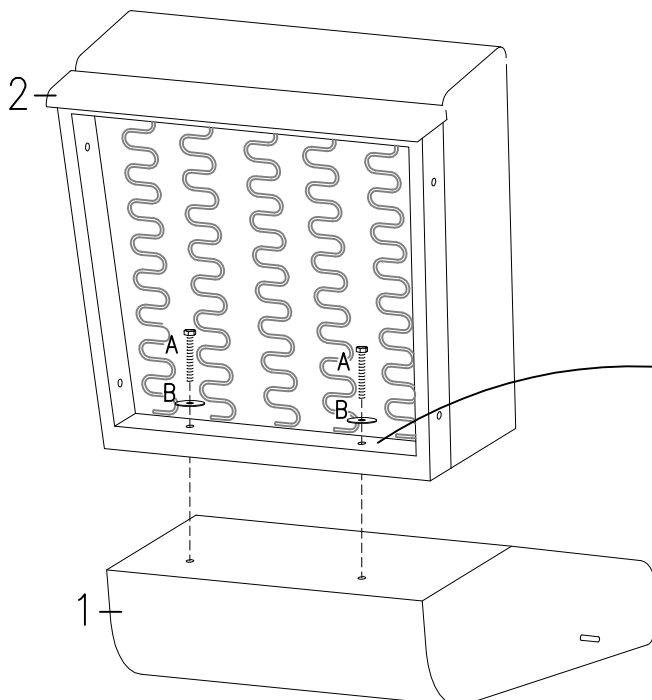






FIG. 2

- 
D X 2
- 
B X 4
- 
E X 4
M8x50mm
- 
C X 1



- ② 50%
- ③ 100%
- ② 100%
- ① 100%

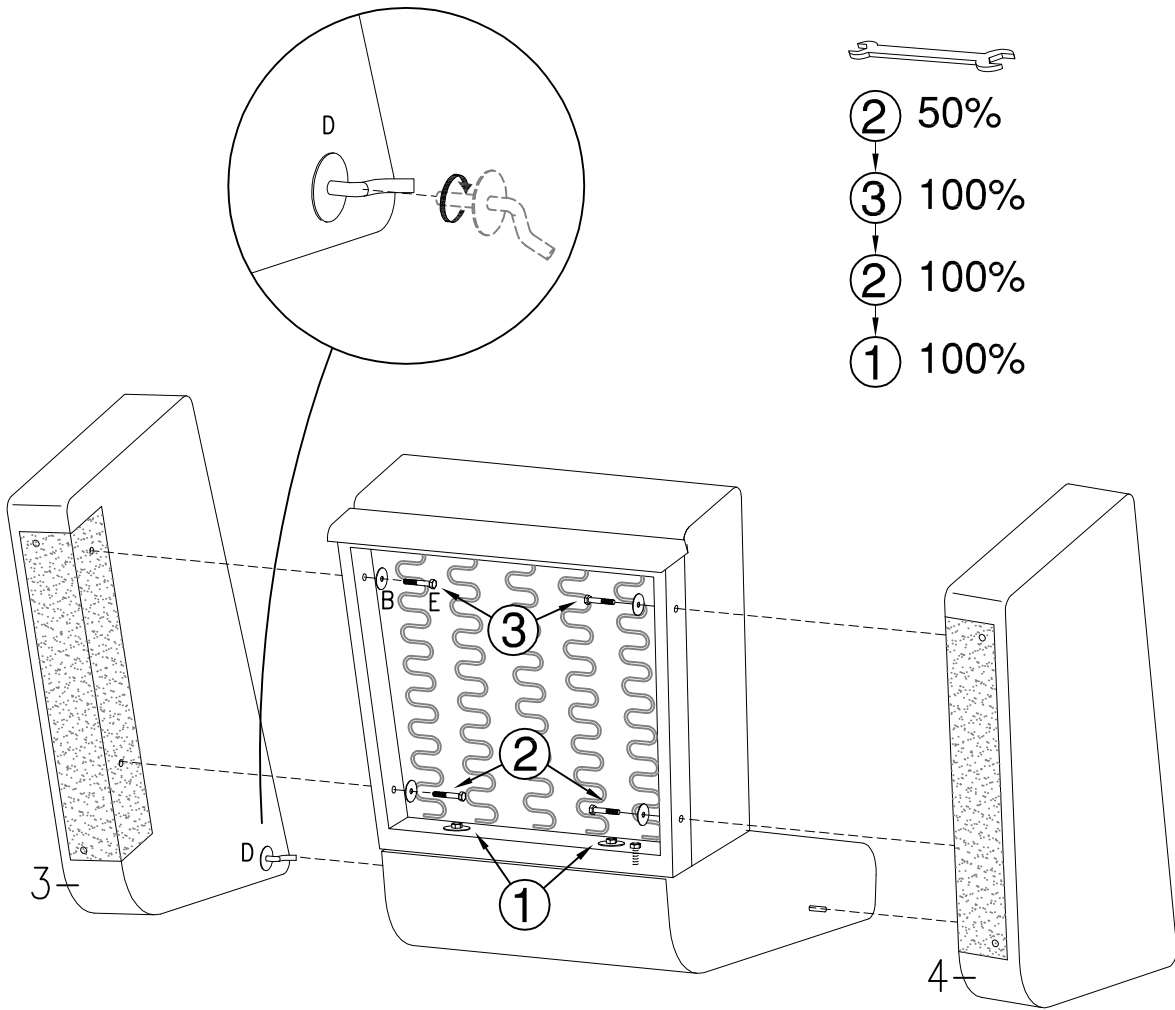





FIG. 3

- 
F X 4
- 
G X 4
- 
H X 1

