



Vega

Design by BoConcept

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

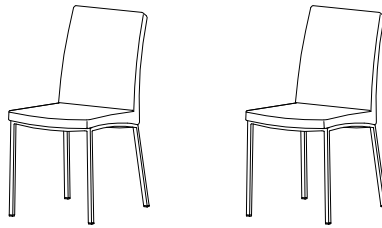




1310/1312

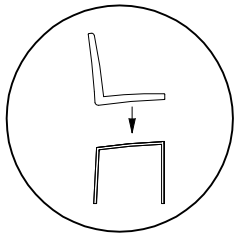

Beslag - Beschläge - Fittings - Set de montage


A X 4
979900119
M8x15mm


B X 1
1979300005
5mm

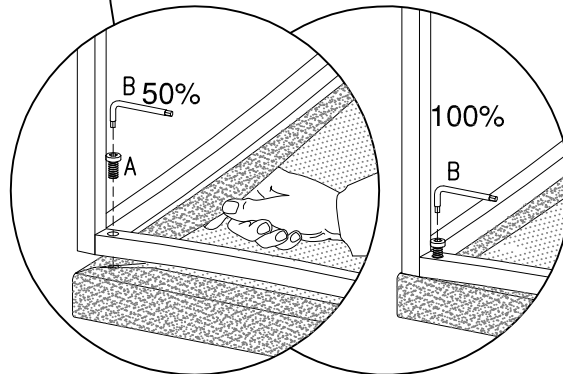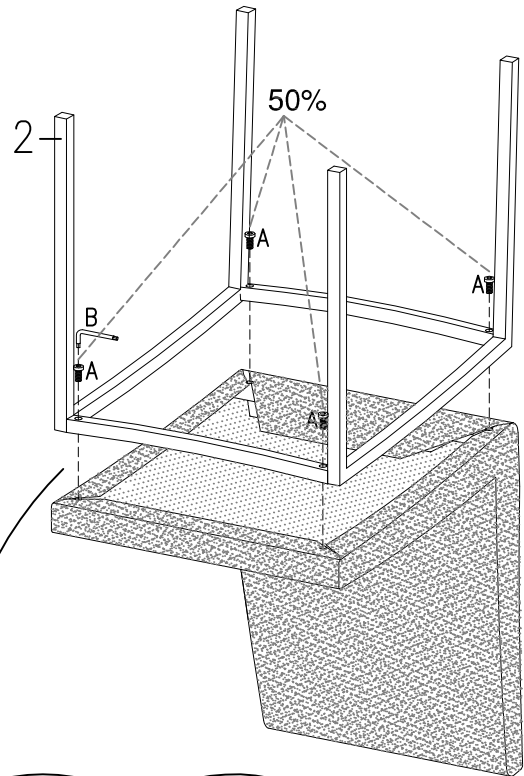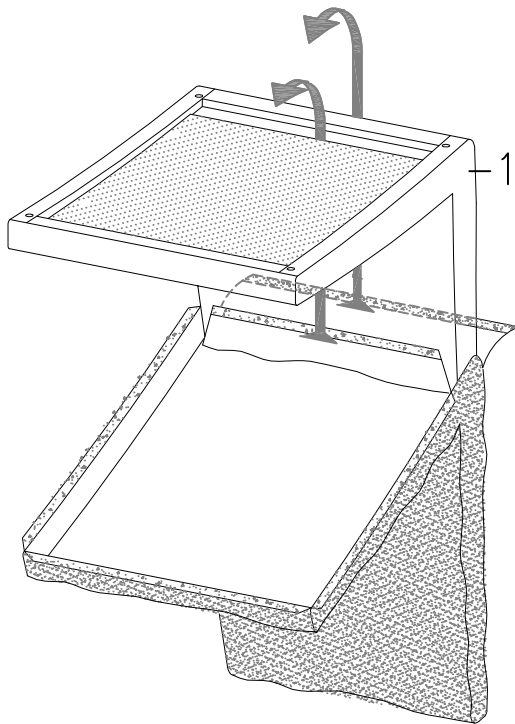

Step1

DK Spændes løst
US Tighten loosely
D Locker anziehen
F Ne pas trop serrer
NL Los aanspannen
E Apretar de modo suelto
P Avvitare senza serrare
JP 緩く締めてください。

Step2

DK Efterspændes
US Tighten screws fully after assembly
D Nachziehen
F Resserrer
NL Aanspannen
E Reapretar
P Serrare le viti dopo il montaggio
JP 組立後、ネジをしっかりと締めてください。