



Curve

Samlevejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje

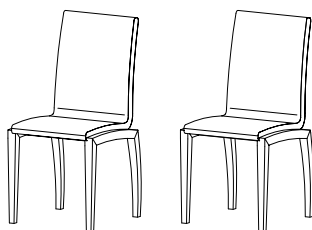

1150/1152

Beslag - Beschläge - Fittings - Set de montage




D X 4
4x40mm




E X 2
M6x35mm




F X 6

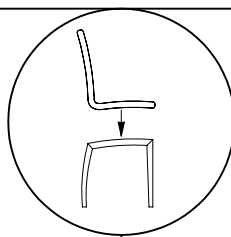

Beslag - Beschläge - Fittings - Set de montage



C X 2
4x45mm





D X 2
4x40mm



E X 2
M6x40mm



F X 6

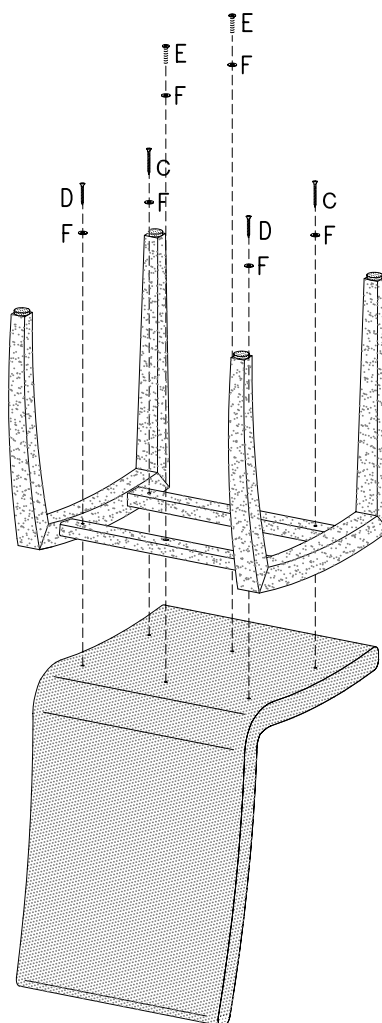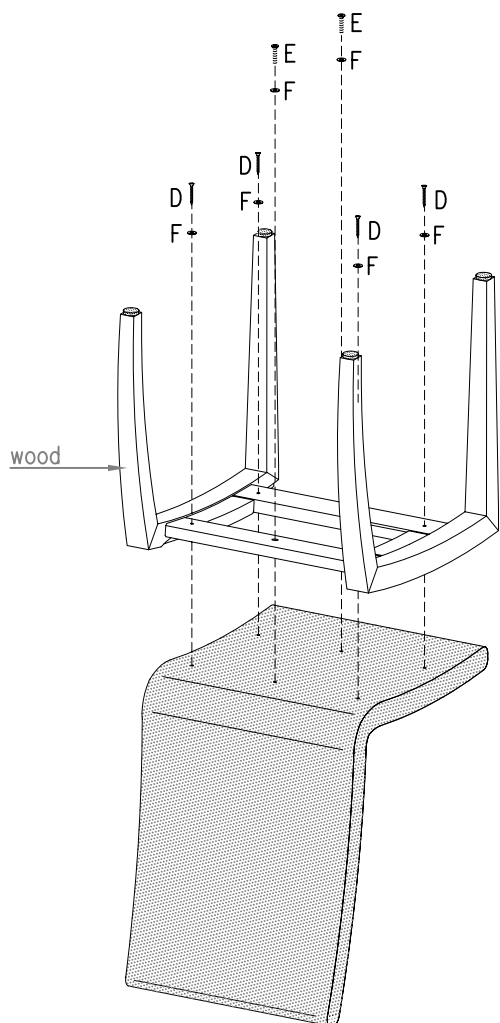

Step1

DK Spændes løst
US Tighten loosely
D Locker anziehen
F Ne pas trop serrer
NL Los aanspannen
E Apretar de modo suelto
P Avvitare senza serrare
JP 緩く締めてください。

Step2

DK Efterspændes
US Tighten screws fully after assembly
D Nachziehen
F Resserer
NL Aanspannen
E Reapretar
P Serrare le viti dopo il montaggio
JP 組立後、ネジをしっかりと締めてください。