
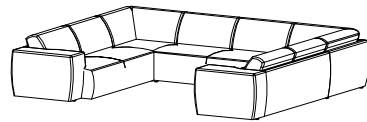






# Bergen

Design by BoConcept

Samvejledning - Assembly Instructions - Montageanleitung - Instructions d'assemblage - Instrucciones de montaje



## Examples

Beslag – Beschläge – Fittings – Set de montage



**A**  
932000163  
M8x60mm



**B**  
932000157  
M8 25x8,5x2



**C**  
932000162  
M8 DIN934



**D**



**E**  
Ø50x30mm



**F**  
Ø6/12x1,0mm




**G**  
1978103535  
3,5x35mm



**K**  
932000168  
KON004



**L**  
932000197  
M8x60mm




**M**  
1979300005  
5mm




**N**  
932000188  
3,5x20mm

FIG. 1

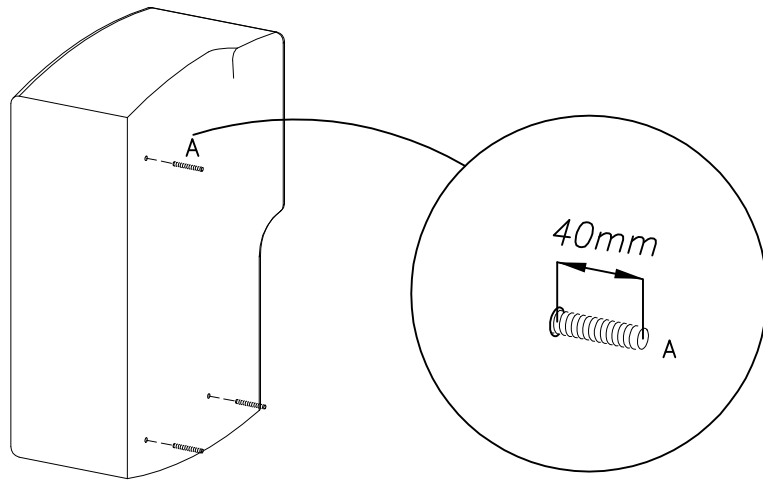

A  
DIN975  
M8x60mm

FIG. 2

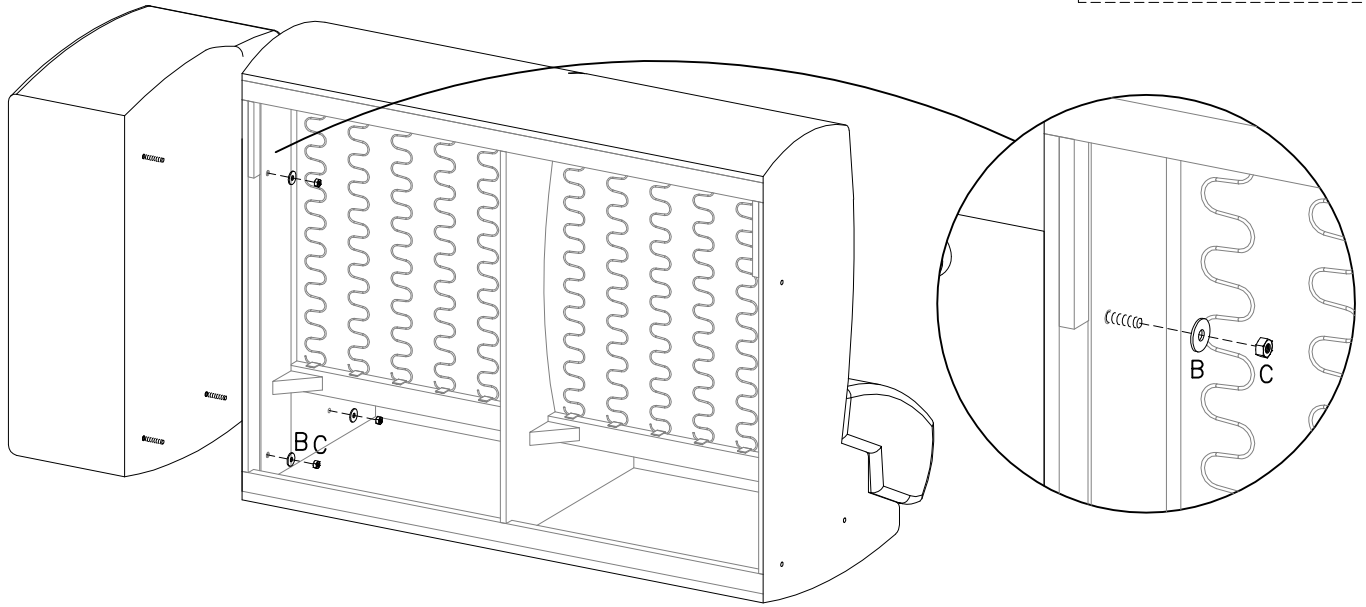


B  
M8 25x8,5x2

C  
M8

D

FIG. 3

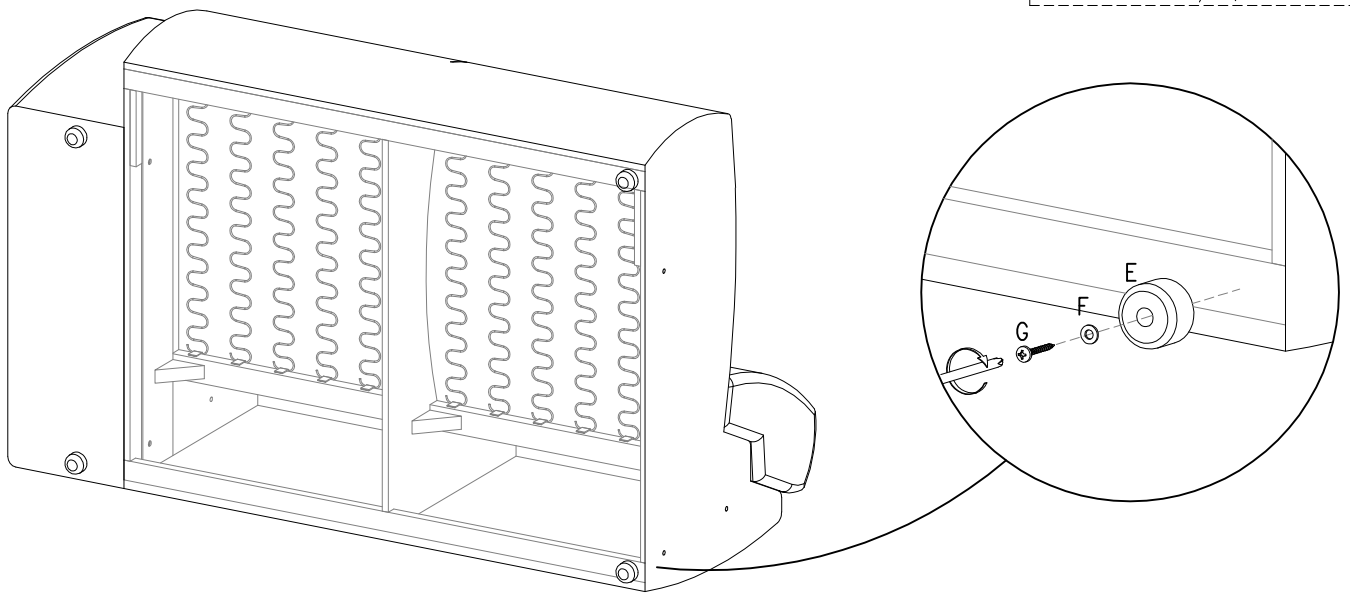

E  
Ø50x30mm

F  
Ø6/12x1,0mm

G  
3,5x35mm

FIG. 4


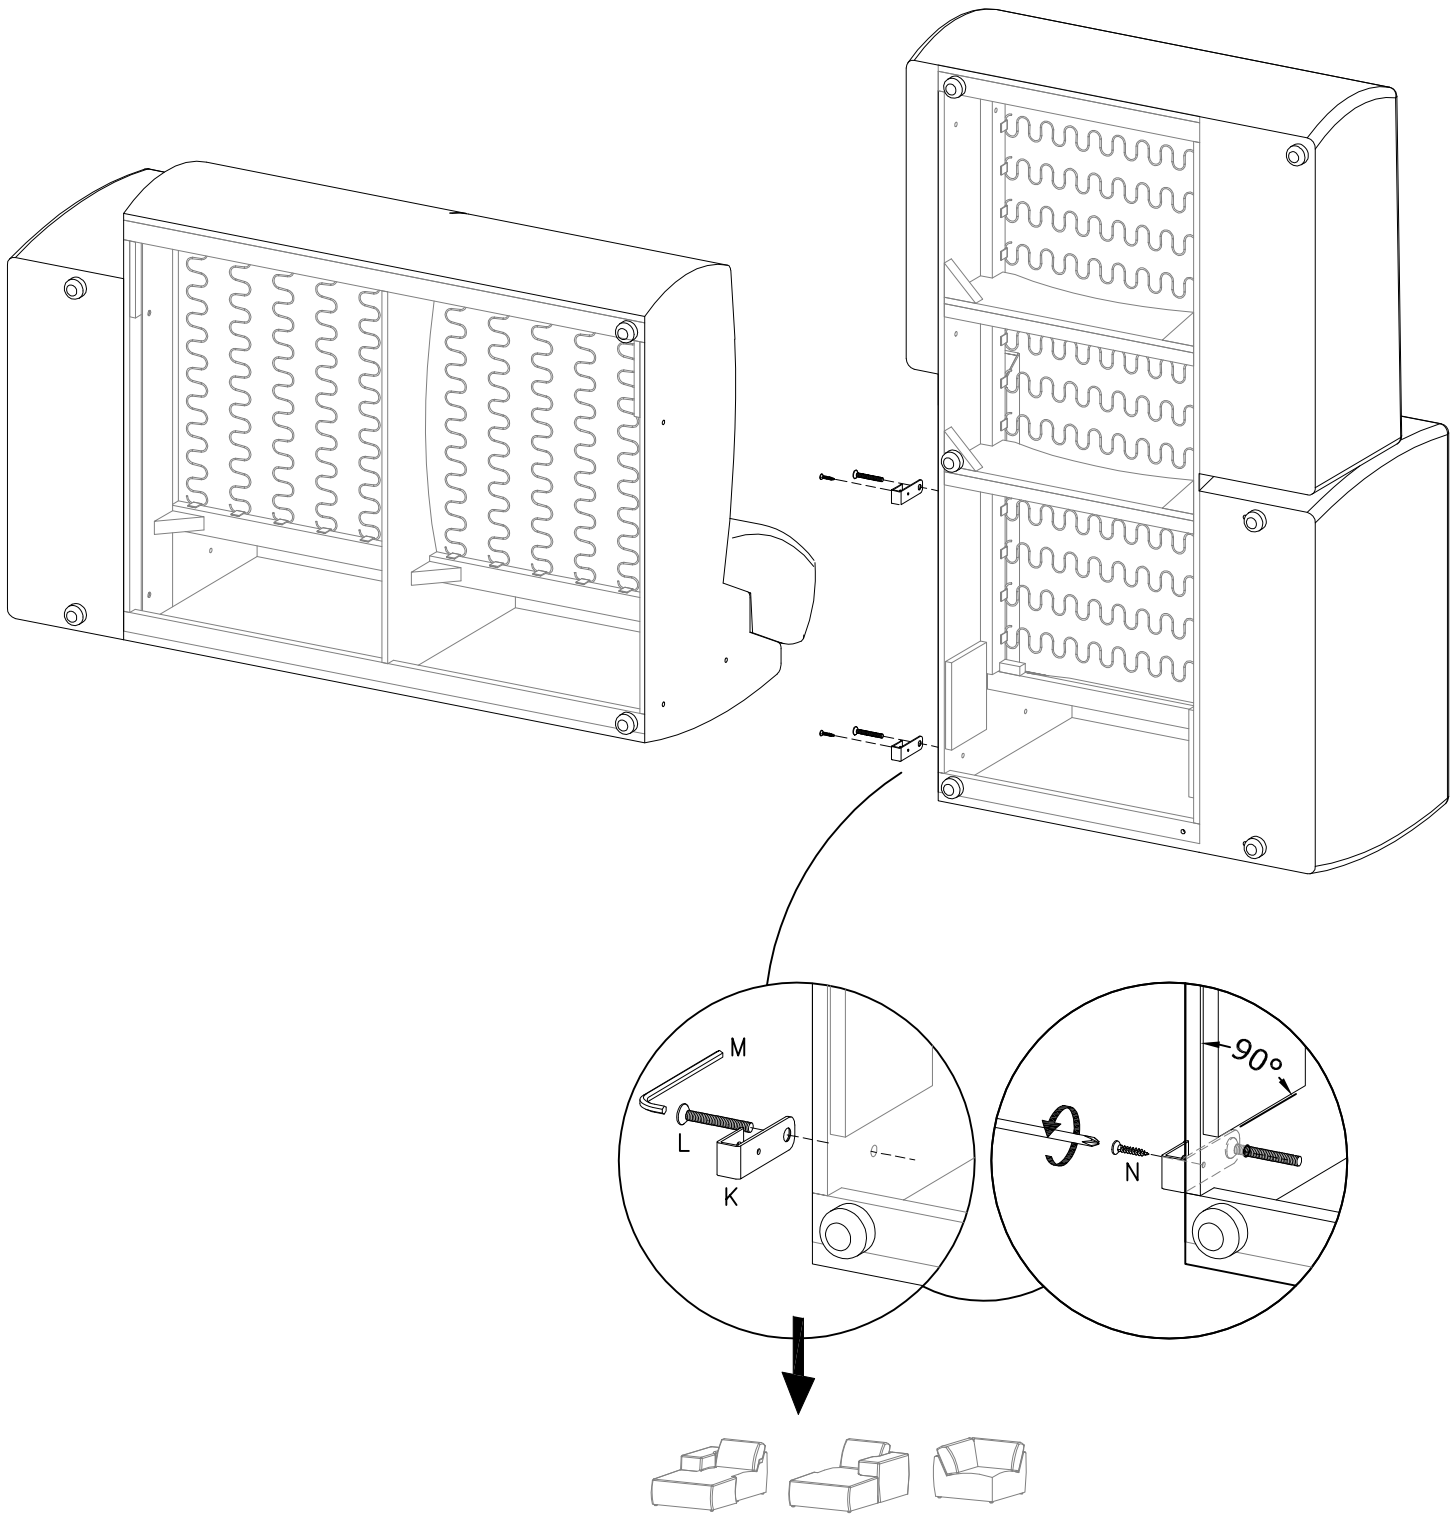


FIG. 5

