



## PCI Slot Mount

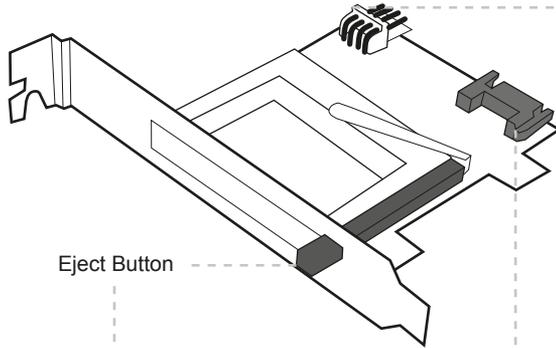

## Bay Mount

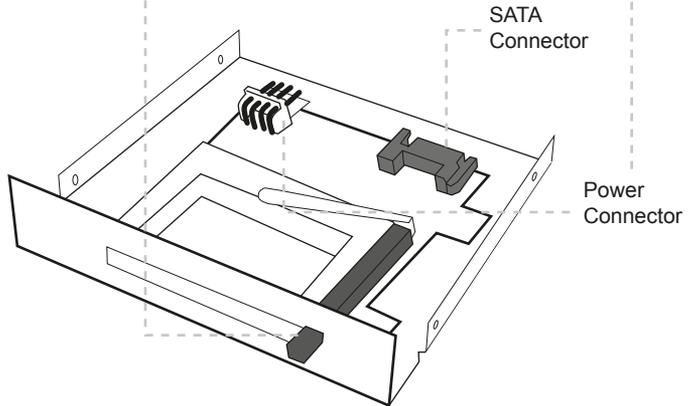

v7.1.11

## Technical Support

If you need any assistance to get your unit functioning properly, please have your product information ready and contact Addonics Technical Support at:

Hours: 8:30 am - 6:00 pm PST

Phone: 408-453-6212

Email: <http://www.addonics.com/support/query/>

## Hardware Installation:

**Step 1:** Connect Y-type power cable to the power connector on the adapter. This will provide power to the adapter and the CF card.

**Step 2:** Connect a SATA cable to the SATA connector on the adapter and the other end to the SATA controller port.

**Step 3:** Start the Computer.

**Note:** If you insert the CF card while your system is ON and it does not get detected, probably your SATA host controller does not support hot swap.

## CONTACT US

---

**www.addonics.com**

**Phone: 408-573-8580**

**Fax: 408-573-8588**

**Email: <http://www.addonics.com/sales/query/>**