


The Button must be paired to the Base Unit before first usage. Insert the Button in the USB port at the front of the Base Unit you are using.



Pairing is finished when the LED's become static white or static red.

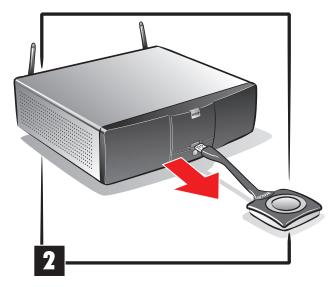