

SM015-2AMPS | VSM 4 Hole AMPS Adapter Mount with Universal Phone Cradle



Package Contents:

- (1) SM015-2 - Universal Phone Cradle
- (1) AP032 - Dual-T to 4-hole AMPS adapter plate with screws and nuts


 Do not place mount in or near an air bag deployment zone.

Console Mounting VSM Bracket

- Step 1. Find a safe location on the console to install the vehicle specific mount (VSM) sold by other manufacturers. The VSM bracket is not included in this kit. Follow the manufacturers instructions for installing VSM bracket.


Connect Adapter plate AP032 to VSM Bracket

- Step 1. Place the Dual-T to 4-hole AMPS adapter plate against the VSM bracket. Using a screwdriver, tighten the screws into the nuts behind the adapter plate. See diagram below.

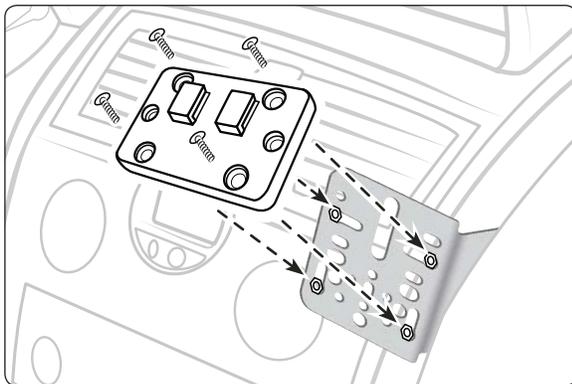


Connect Mobile Phone Cradle to VSM Mount

- Step 1. Connect the Dual-T slots (A) on the back of the phone cradle to the Dual-T tabs (B) on the Dual-T to 4-hole AMPS adapter plate.

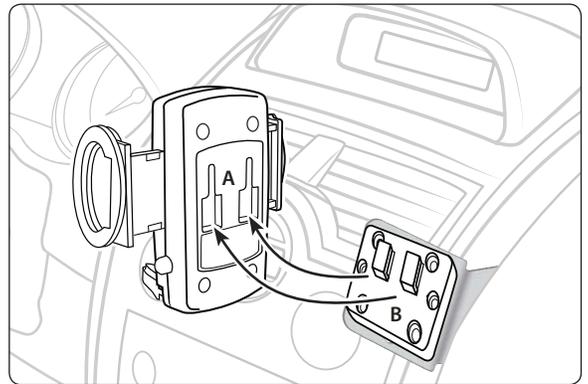

Device Insertion and Removal from Cradle

- Step 1. Insert your phone or device into the cradle with the device sitting on the adjustable support legs (C). Squeeze the grip arms (D) inward to firmly grasp the device. Press the release button (E) to open the arms.

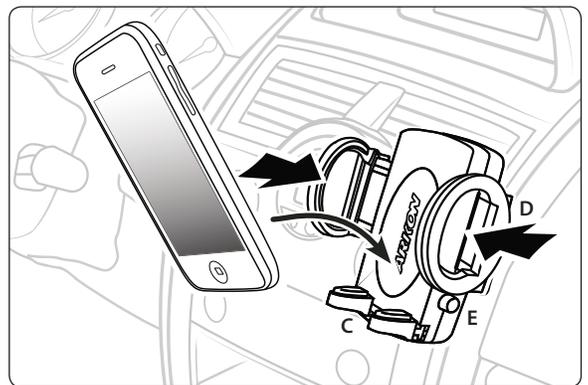

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and/or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.

ARKON
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:

USA (800) 841-0884

INT'L (626) 254-9005

Monday - Friday 9 am - 5 pm, PST

www.arkon.com

Arcadia, CA 91006 USA

Designed in USA | Made in Taiwan

© Copyright 2010 Arkon Resources, Inc.