



**Installation Instructions for
Remote Subwoofer Level
Control Unit
Model PAB-RC**

CALL TOLL-FREE FOR ANSWERS TO INSTALLATION PROBLEMS

Continental U.S. : 1 - 800 - 645 - 4994
Monday - Friday : 9:00 AM - 7:00 PM Eastern Time
Saturday : 9:00 AM - 5:00 PM Eastern Time


IMPORTANT - RETAIN THIS DOCUMENT FOR FUTURE REFERENCE.

INSTALLATION INSTRUCTIONS

1. Clean the mounting surface in the vehicle.
2. Install the Remote Subwoofer Level Control unit in a convenient location in the passengers compartment (usually under the dash board in an accessible area). The Remote Subwoofer Level Control unit can be attached using a velcro attachment or can be screwed to the dash using sheet metal screws.
3. To use the velcro attachment, remove the adhesive backing and mount a piece of velcro to the top of the unit. Using another piece of velcro, remove the adhesive backing and mount the piece of velcro to the dash board. Press the two velcro pieces together and ensure that the unit is secure.
4. To use the sheet metal screw attachment, select a mounting area for Remote Subwoofer Level Control unit. Place the unit on the mounting surface and mark the locations of the four mounting holes.
5. Remove the Remote Subwoofer Level Control unit and drill a 1/8" hole at each of the four locations.

CAUTION: Before drilling the holes, look at the underside of the mounting surface. Always check carefully to avoid drilling into wiring, braces, fuel or brake lines. **CHECK BEFORE YOU DRILL !**

6. Secure the Remote Subwoofer Level Control unit to the mounting surface using self-tapping screws.
7. Attach the RJ-11 plug to the connector to the back of the unit. Route cable from the passengers compartment to the amplifier (usually located in the vehicle's trunk). Attach the other RJ-11 plug to Remote Control connector on the amplifier.

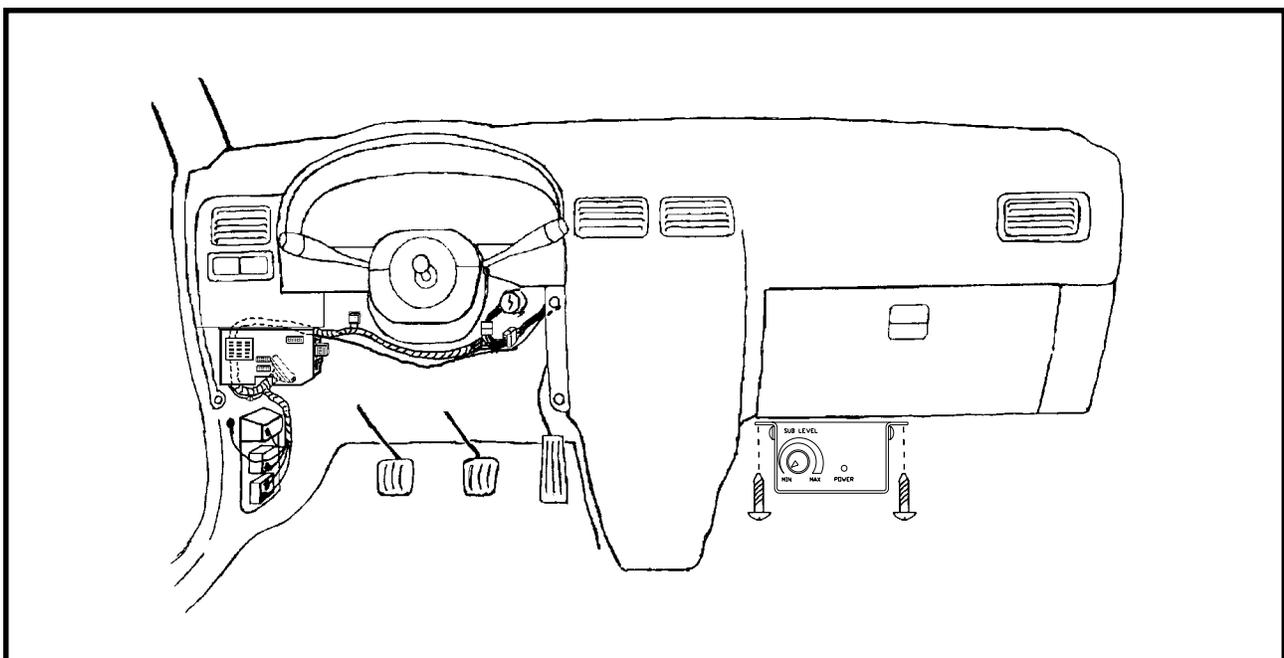

FRONT OF VEHICLE

