

American Standard

FloWise™ SHOWERHEAD

HOW TO INSTALL SHOWER HEAD TO SHOWER ARM

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.

To ensure that your installation proceeds smoothly—please read these instructions carefully before you begin.

Installation Instructions 1660.715



Certified to comply with ANSI A112.18.1

M968976


RECOMMENDED TOOLS



Adjustable Wrench


1 REMOVE SHOWER HEAD FROM HOUSING

- Hold SHOWERHEAD (1) with one hand and HOUSING (2) with the other as illustrated.
- Rotate SHOWERHEAD (1) clockwise while holding HOUSING (2) stationary. **NOTE: The thread connection is a left hand thread.** Keep turning SHOWERHEAD (1) until it can be removed from the HOUSING (2).

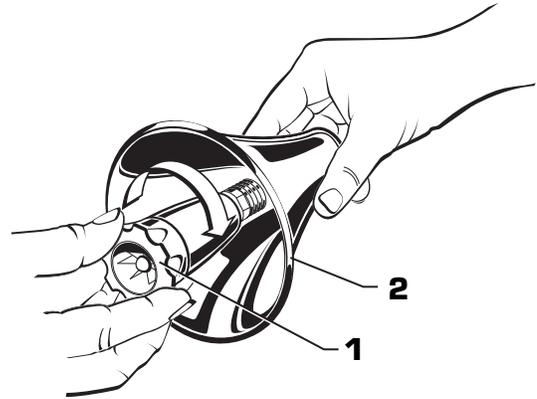


2 INSTALL HOUSING

- Slide HOUSING (2) onto SHOWER ARM (3).

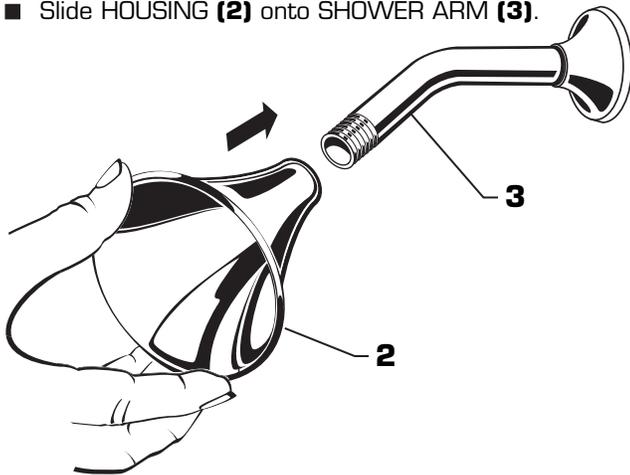

3 INSTALL SHOWER HEAD

- Rap SHOWER ARM (3) threads with Teflon tape.
- Tighten SHOWERHEAD (1) with an adjustable wrench. Do not over tighten.

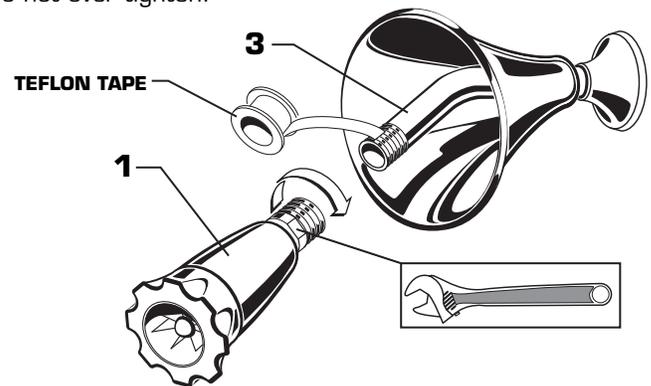

4 INSTALL HOUSING TO SHOWER HEAD

- Install HOUSING (2) onto SHOWER HEAD (1). Thread HOUSING (2) counter-clockwise to install onto SHOWER HEAD (1). Hand tighten only.

