



126T00

Illustrated Parts List

Model Series

126T00

TYPE NUMBERS
0004 through 4830.

TABLE OF CONTENTS

Air Cleaner	4
Blower Housing/Shrouds	6
Camshaft	2
Carburetor	3
Controls	5
Crankshaft	2
Cylinder	2
Electric Starter	7
Electrical	5
Engine Sump	2
Exhaust System	4
Flywheel	7
Flywheel Brake	5
Fuel Supply	3
Governor Spring	5
Ignition	5
Kits/Gaskets	2 & 3
Lubrication	2
Piston Group	2
Rewind Starter	7
Valves	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

126T00


1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

1019 LABEL KIT






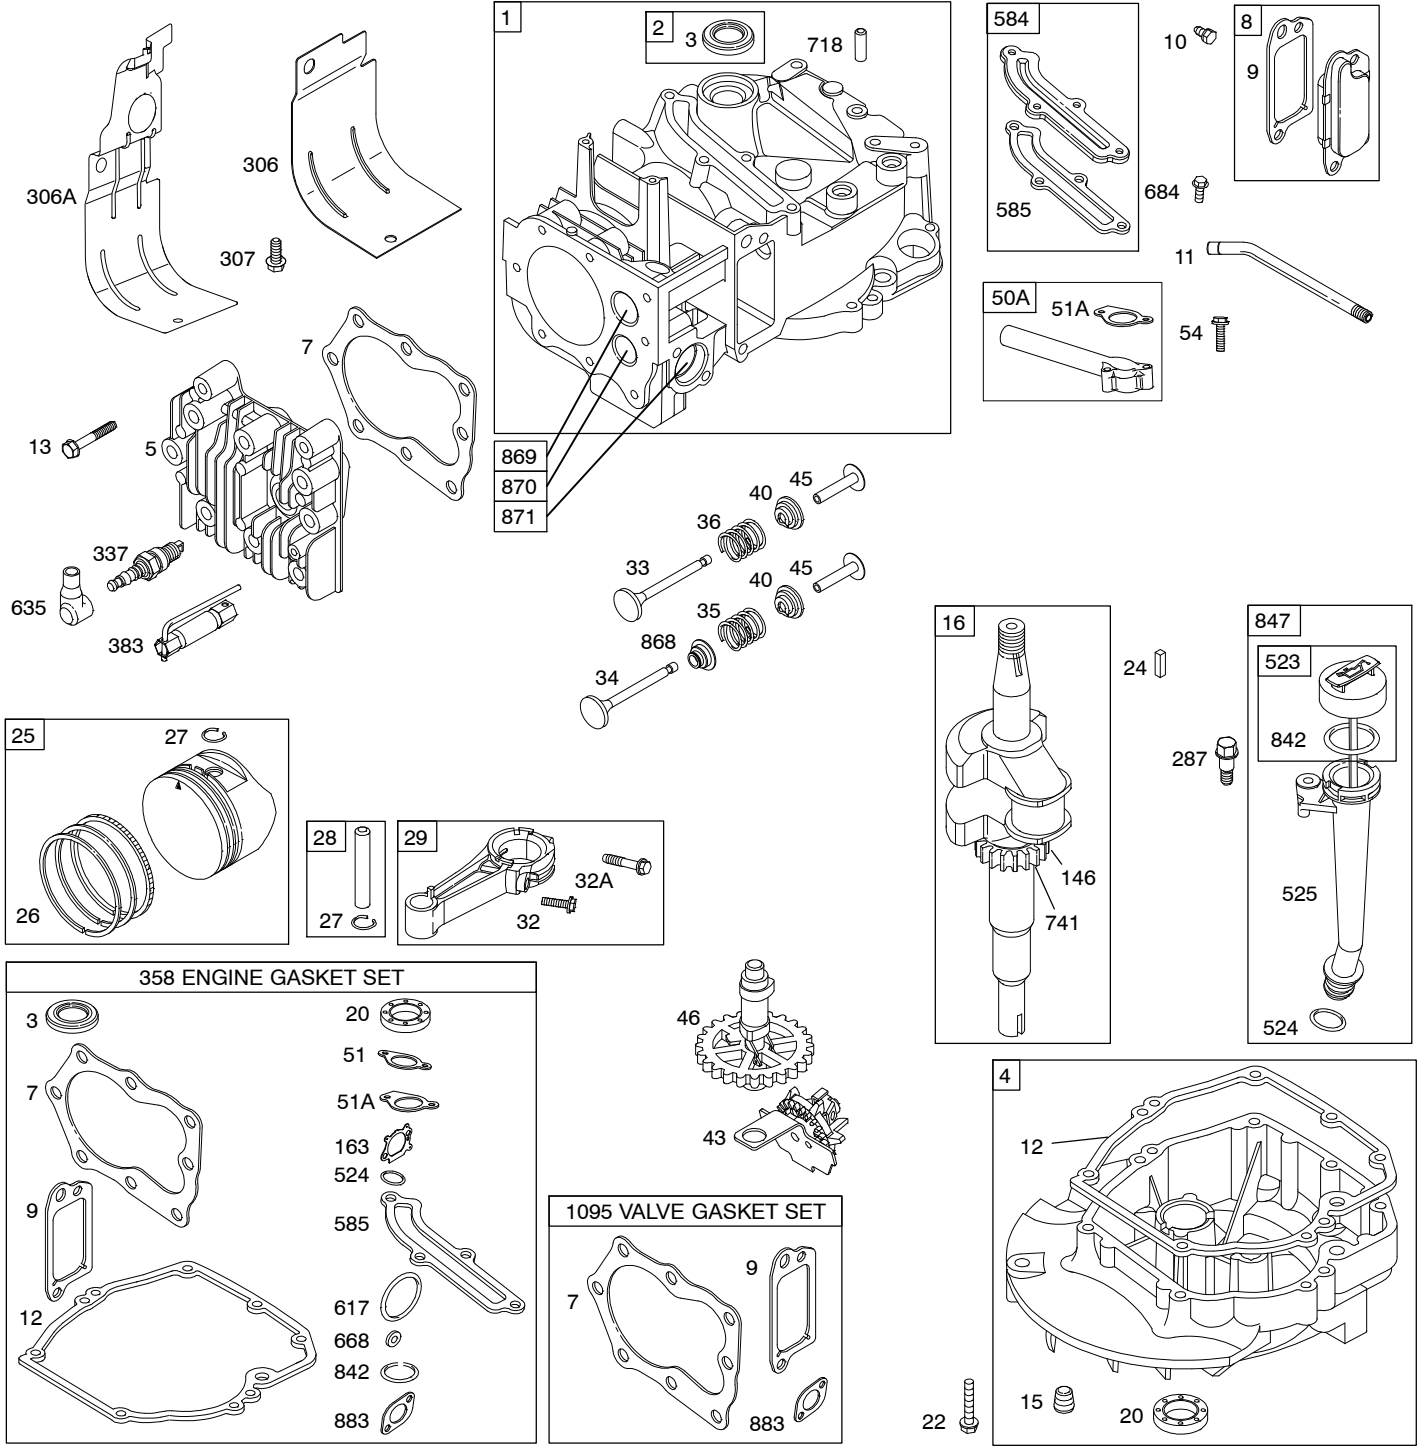

















358 ENGINE GASKET SET


- 3 Seal
- 7 Gasket
- 9 Bracket
- 12 Gasket
- 20 Seal
- 51 Seal
- 51A Seal
- 163 Seal
- 524 Seal
- 585 Bracket
- 617 Seal
- 668 Seal
- 842 Seal
- 883 Seal

1095 VALVE GASKET SET

- 7 Gasket
- 9 Bracket
- 883 Seal

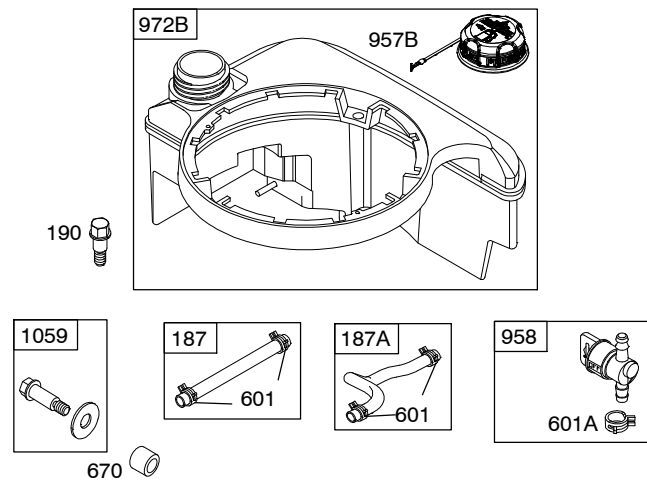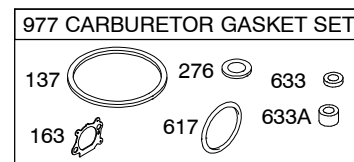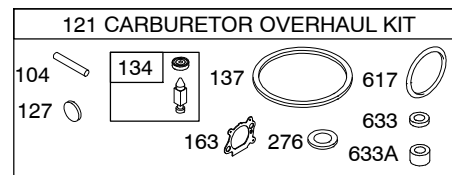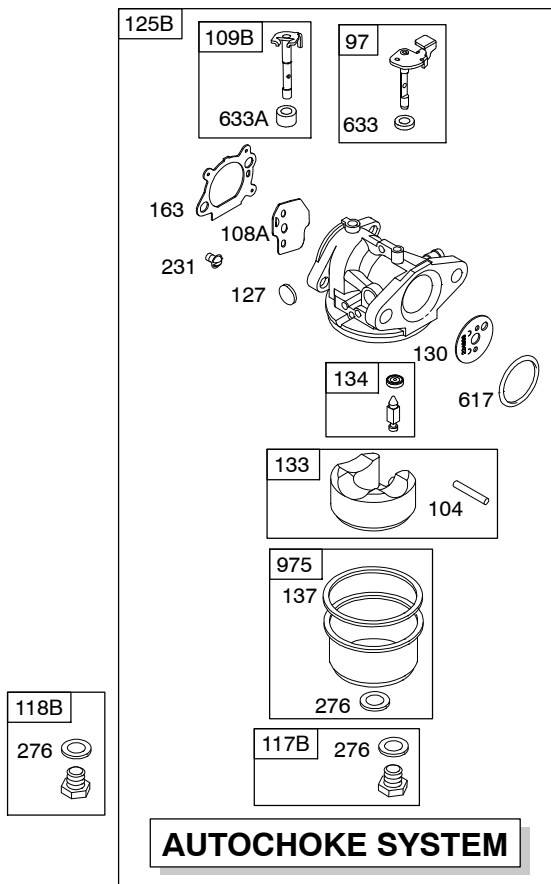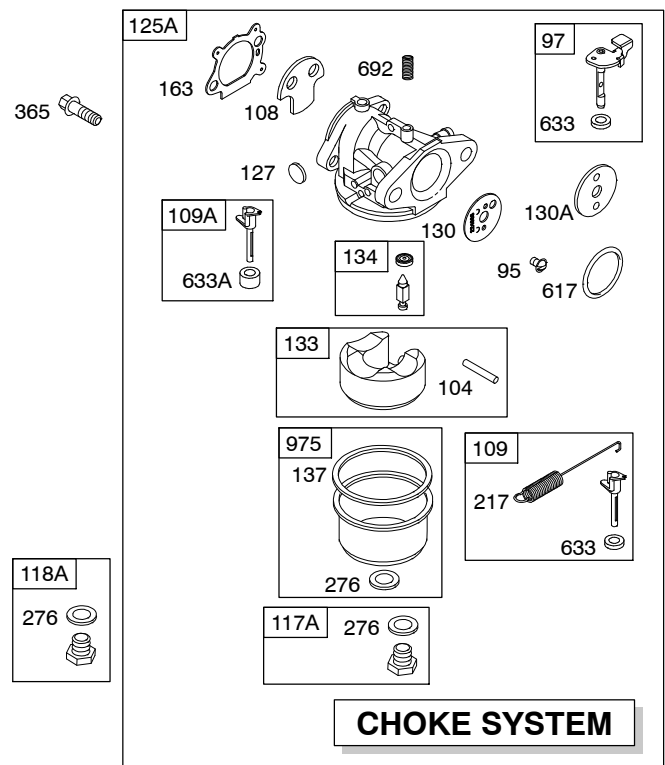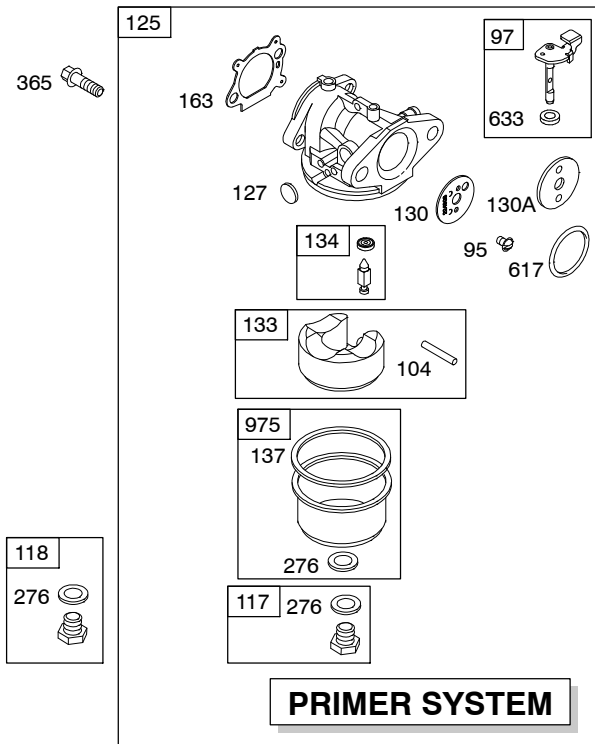


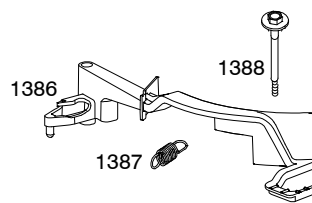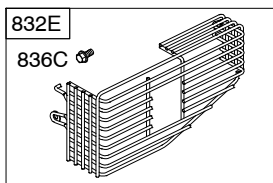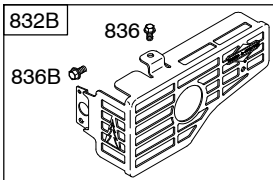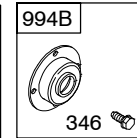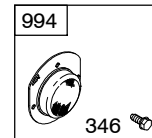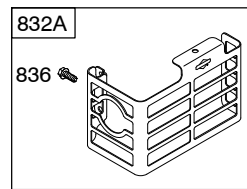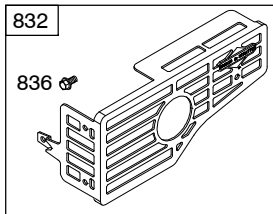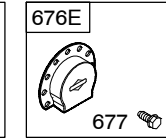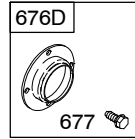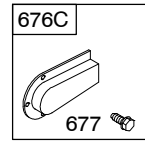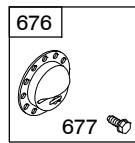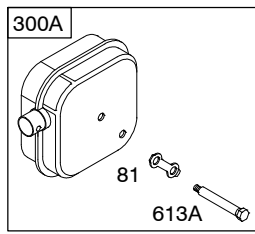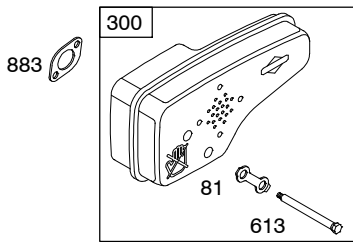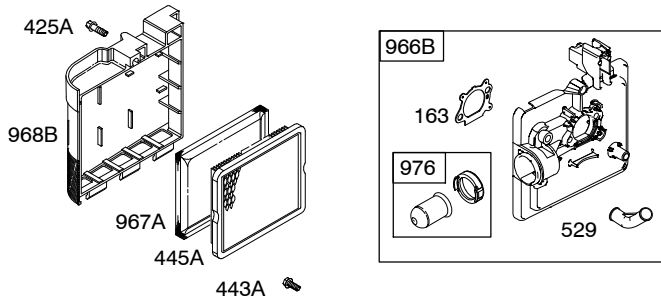






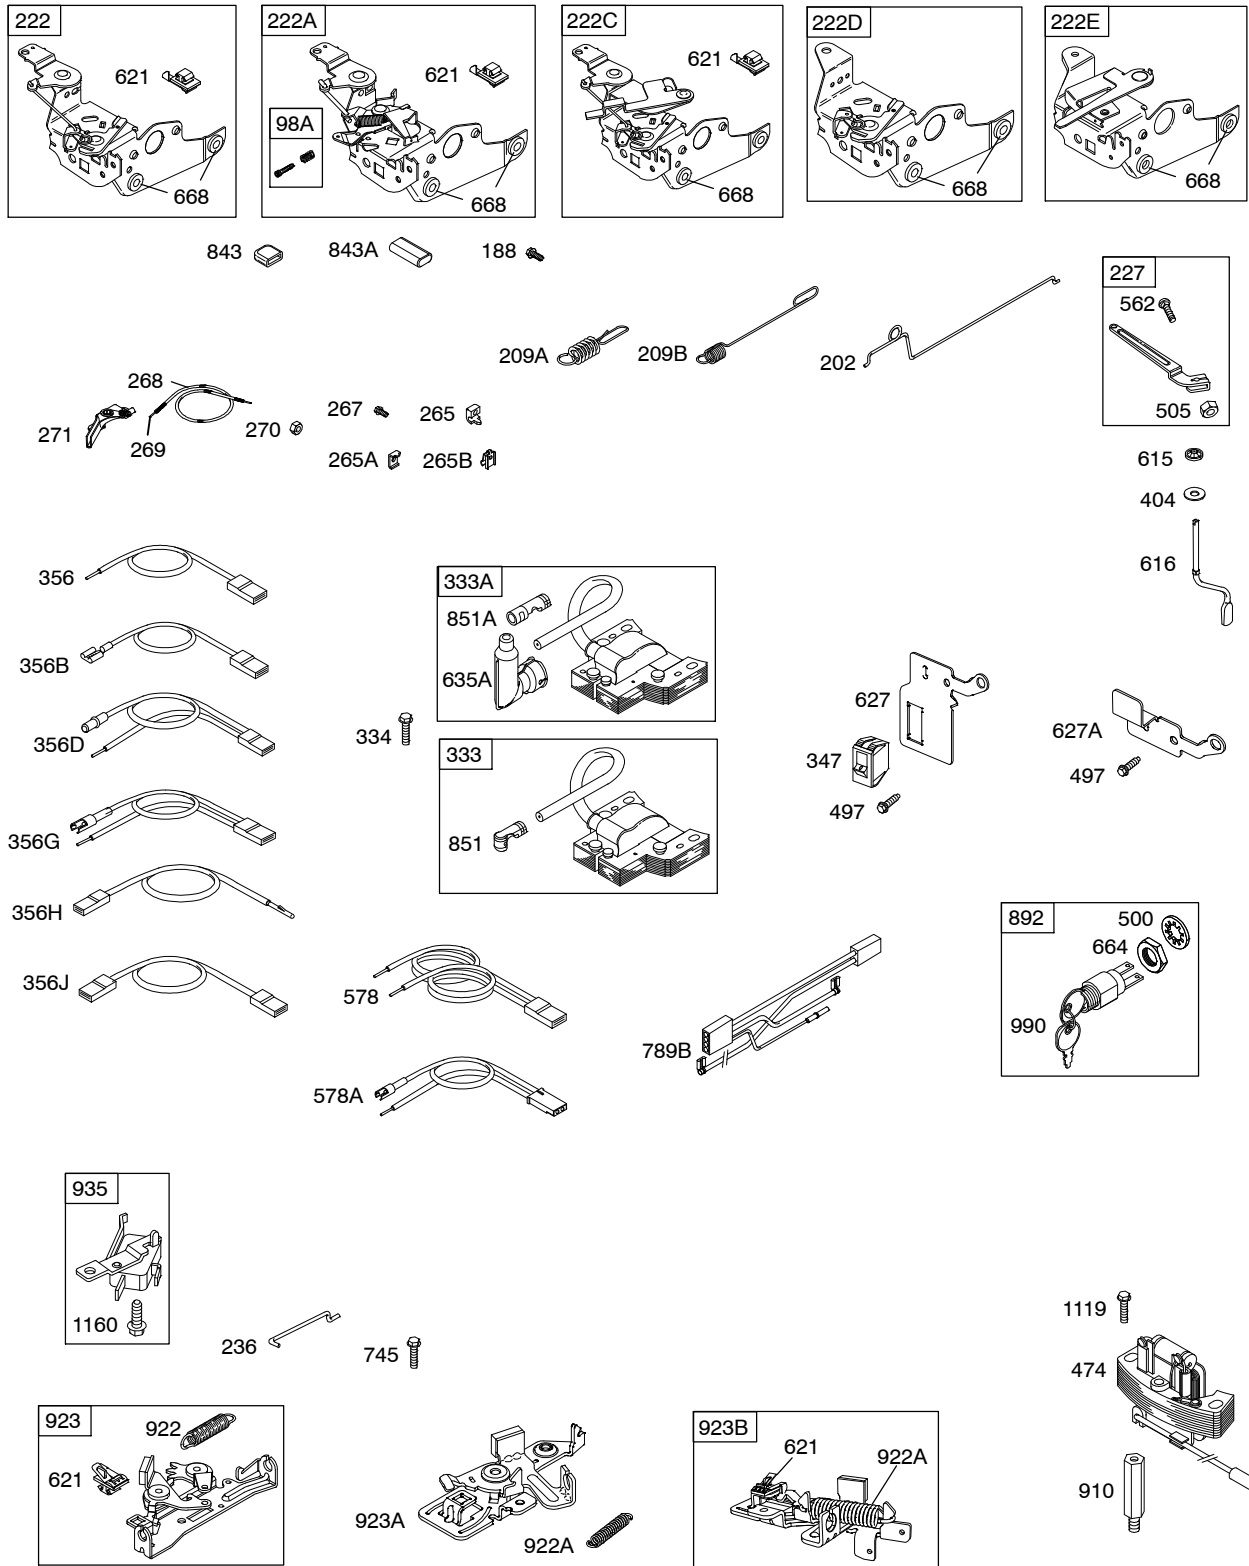


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-5 Assemblies include all parts shown in frames. **07/14/2008**

126T00

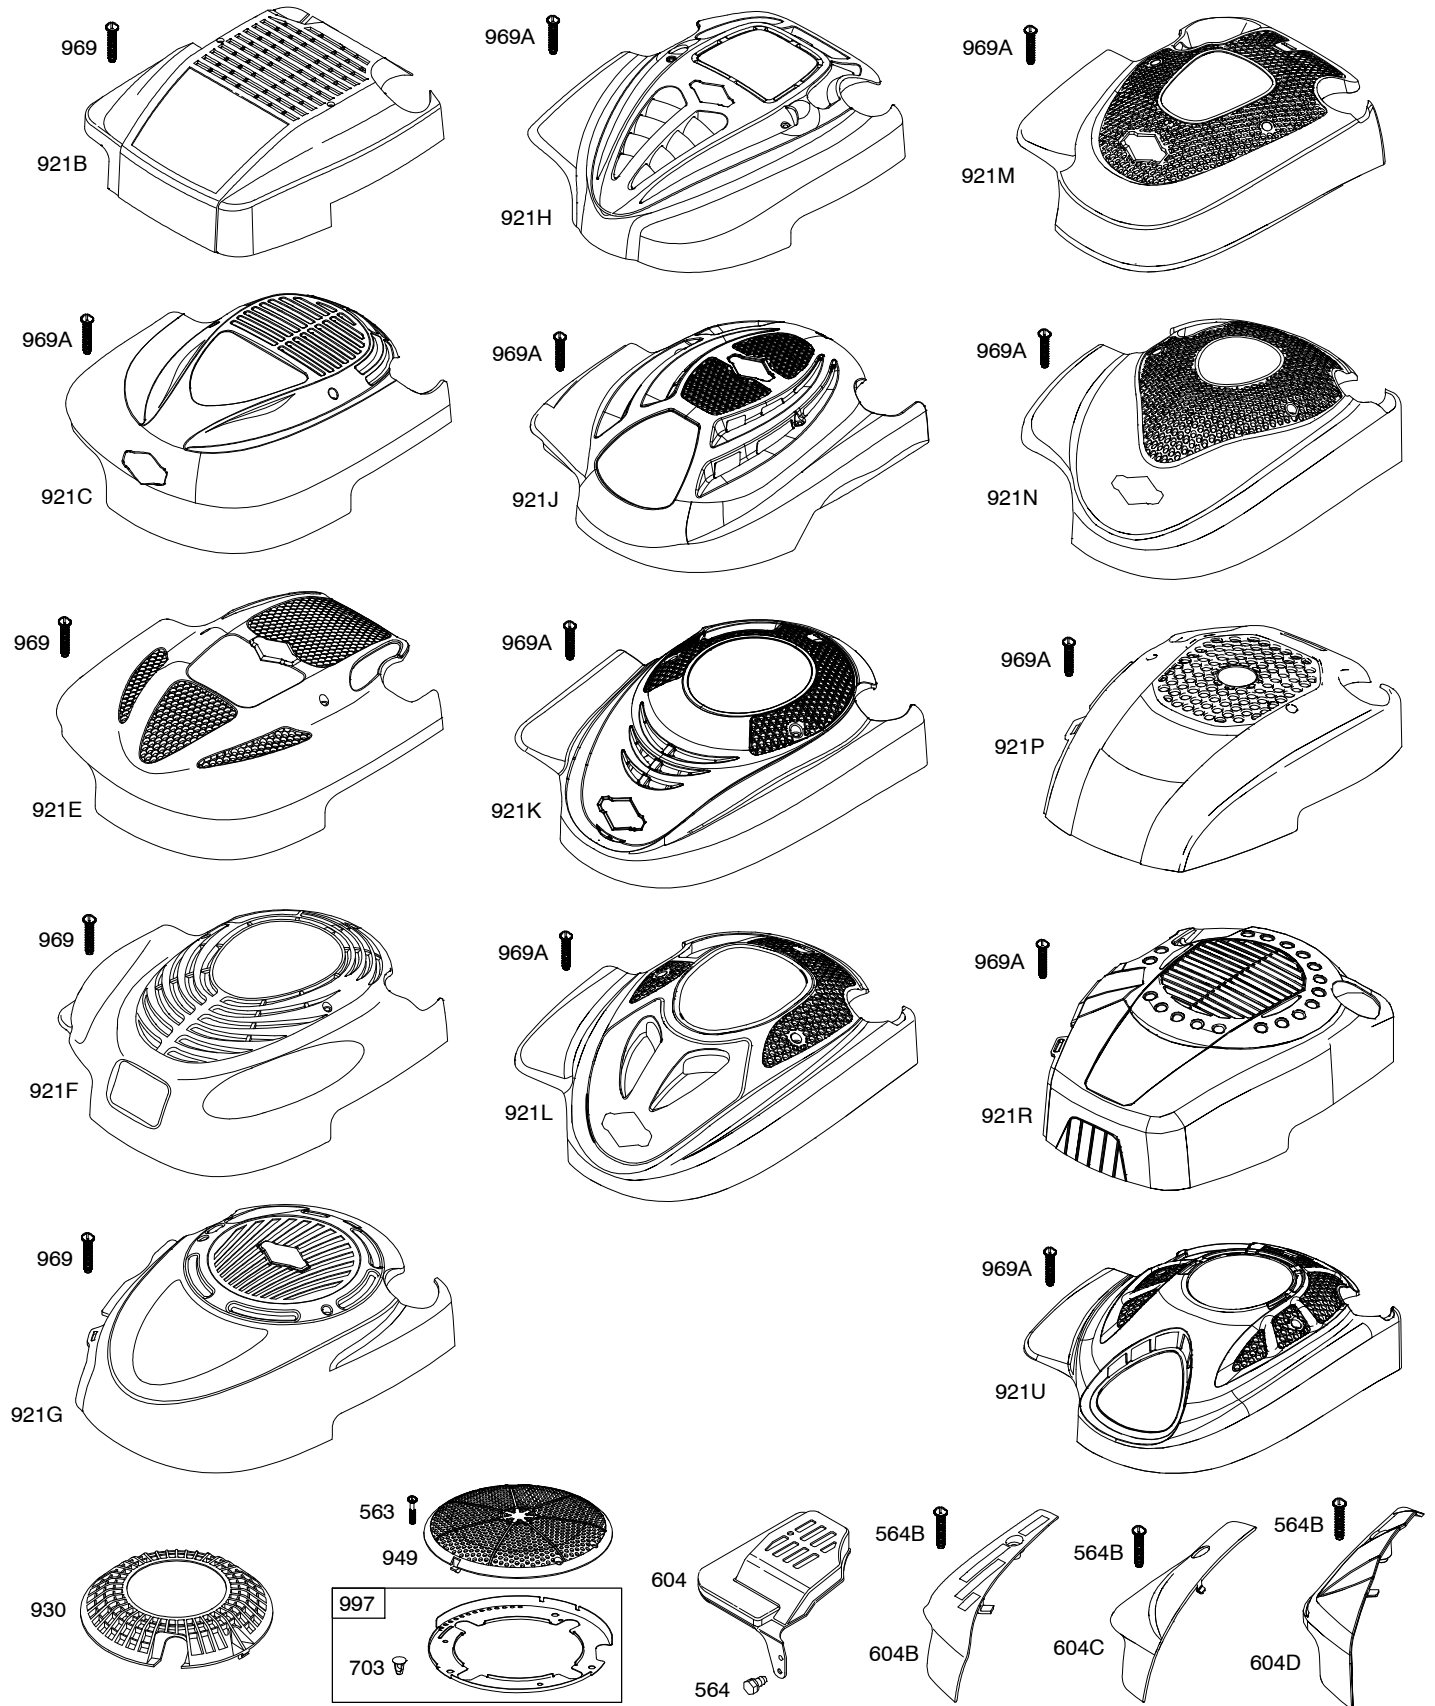

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-6 Assemblies include all parts shown in frames. **07/14/2008**

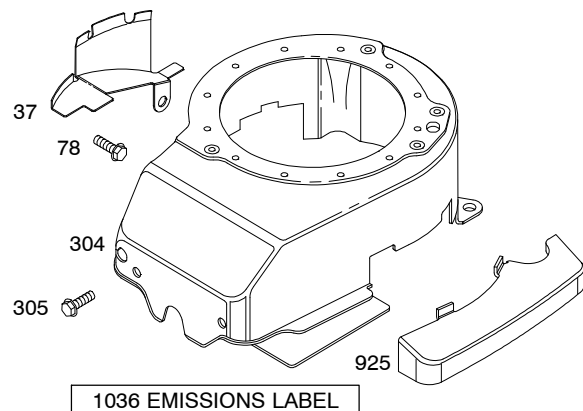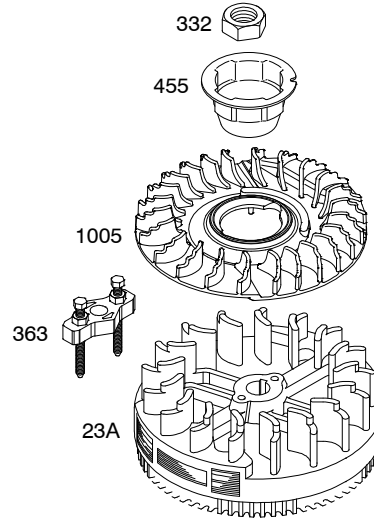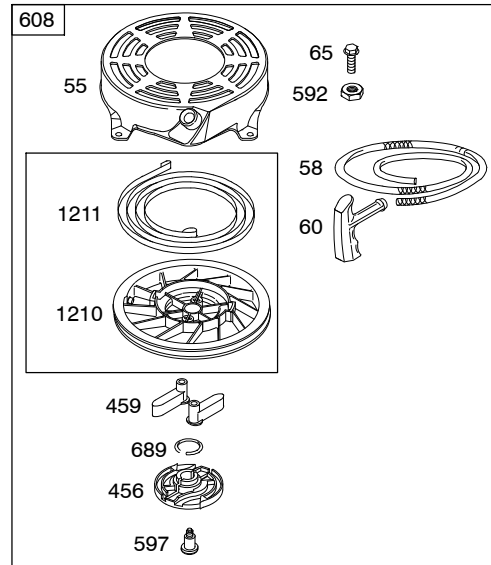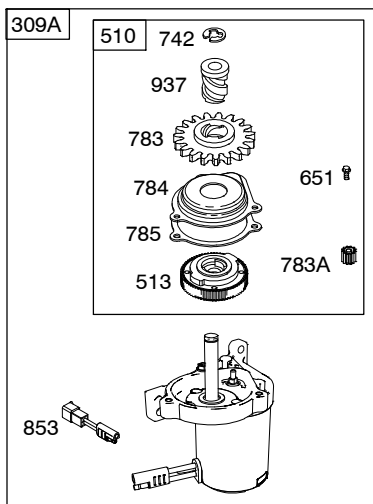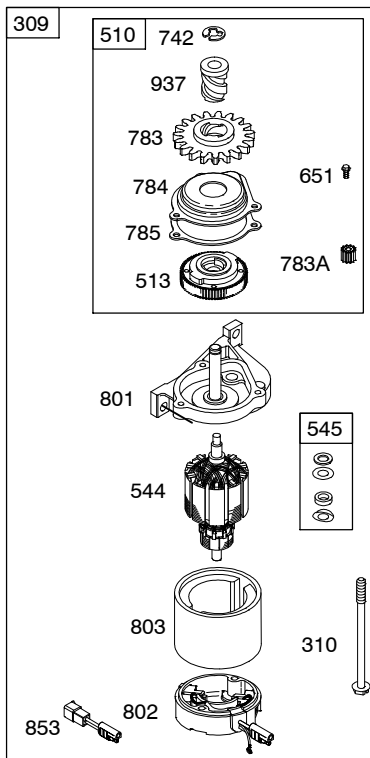

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft			691455 Crankshaft
2	399269	Kit-Bushing/Seal (Magneto Side)			----- Note -----			Used on Type No(s). 0006, 0018, 0523.
3	★299819S	Seal-Oil (Magneto Side)			691451 Crankshaft			694849 Crankshaft
4	493279	Sump-Engine			Used on Type No(s). 0004, 0010, 0011, 0015, 0050, 0060, 0121, 0135, 0138, 0148, 0153, 0158, 0159, 0169, 0172, 0173, 0199, 0243, 0329, 0454, 0475, 0479, 0487, 0491, 0555, 0615, 0660, 0826, 1064, 1172, 1724, 1728, 1729, 1750, 1767, 1791, 1802, 1807, 1817, 1820, 1822, 1824, 1833, 1963, 2003, 2004, 2011, 2016, 2021, 2022, 2034, 2041, 2091, 2388.		Used on Type No(s). 0005, 0114, 0131, 0179, 0188, 2013.	
		----- Note -----						695242 Crankshaft
		498983 Sump-Engine						Used on Type No(s). 0026.
5	691160	Head-Cylinder						696009 Crankshaft
7	★∅692249	Gasket-Cylinder Head						Used on Type No(s). 0031, 0115, 0139, 0181, 0182, 0183, 0184, 0204, 0206, 0216, 0219, 0220, 0224, 0231, 0233, 0236, 0240, 0241, 0329, 0678, 0933, 1840, 1841.
8	695250	Breather Assembly						791061 Crankshaft
9	★∅696125	Gasket-Breather						Used on Type No(s). 0030, 0116, 0209, 0225, 0227, 0230, 0234, 0237.
10	691125	Screw (Breather Assembly)						694478 Crankshaft
11	691781	Tube-Breather						Used on Type No(s). 0521, 0538.
12	★692232	Gasket-Crankcase						691454 Crankshaft
13	690912	Screw (Cylinder Head)						Used on Type No(s). 1706.
15	691680	Plug-Oil Drain (Square Socket)						694079 Crankshaft
								Used on Type No(s). 1701.
								795499 Crankshaft
								Used on Type No(s). 0222, 0256.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728-8

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
20	★399781S	Seal-Oil (PTO Side)	26	795431	Ring Set (Standard) (Used After Code Date 07090300).	58	697316	Rope-Starter (Cut To Required Length)
22	691092	Screw (Crankcase Cover/ Sump)			----- Note -----			----- Note -----
23A	691987	Flywheel ----- Note ----- 691992 Flywheel Used on Type No(s). 0004, 0005, 0006, 0007, 0010, 0030, 0050, 0114, 0116, 0122, 0131, 0164, 0169, 0179, 0188, 0209, 0222, 0225, 0227, 0230, 0234, 0237, 0256, 0523, 0826, 0933, 1064, 1137, 1802, 1807, 1822, 1849, 2013, 2016.			791098 Ring Set (Standard) (Used Before Code Date 07090400).			791362 Rope-Starter Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0234.
24	222698S	Key-Flywheel	27	691866	Lock-Piston Pin	60	281434S	Grip-Starter Rope
25	795429	Piston Assembly (Standard) (Used After Code Date 07090300). ----- Note ----- 791097 Piston Assembly (Standard) (Used Before Code Date 07090400). 795430 Piston Assembly (.020" Oversize) (Used After Code Date 07090300). 791326 Piston Assembly (.020" Oversize) (Used Before Code Date 07090400).	28	499423	Pin-Piston (Standard)	65	690837	Screw (Rewind Starter)
			29	499424	Rod-Connecting (Standard)	78	691108	Screw (Flywheel Guard)
			32	691664	Screw (Connecting Rod)	81	691740	Lock-Muffler Screw
			32A	695759	Screw (Connecting Rod)	95	691636	Screw (Throttle Valve)
			33	262651S	Valve-Exhaust	97	493267	Shaft-Throttle (Metal) ----- Note -----
			34	262652S	Valve-Intake			696565 Shaft-Throttle (Plastic)
			35	691270	Spring-Valve (Intake)			795881 Shaft-Throttle Used on Type No(s). 0007, 0122.
			36	691270	Spring-Valve (Exhaust)	98A	493280	Kit-Idle Speed
			37	694086	Guard-Flywheel	104	●691242	Pin-Float Hinge
			40	692194	Retainer-Valve	108	691182	Valve-Choke
			43	691997	Slinger-Governor/Oil	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- Note -----
			45	690548	Tappet-Valve			790844 Valve-Choke (Used Before Code Date 08031300).
			46	691449	Camshaft	109	494218	Shaft-Choke
			50A	794305	Manifold-Intake	109A	498593	Shaft-Choke
			51	★272199S	Gasket-Intake	109B	795936	Shaft-Choke (Used After Code Date 08031200). ----- Note -----
			51A	★794306	Gasket-Intake			790843 Shaft-Choke (Used Before Code Date 08031300).
			54	691650	Screw (Intake Manifold)			
			55	691421	Housing-Rewind Starter			

★ Included in Engine Gasket Set-Ref. No.358.
● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.
⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
3728-9 Assemblies include all parts shown in frames. 07/14/2008

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
117	498978	Jet–Main (Standard) ----- Note ----- 692677 Jet–Main (Standard) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761. 494870 Jet–Main (Standard) (Used Before Code Date 07020700). Used on Type No(s). 0761, 3761.	118	497466	Jet–Main (High Altitude) ----- Note ----- 497315 Jet–Main (High Altitude) Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.	125	498170	Carburetor (Primer System) ----- Note ----- 694882 Carburetor (Primer System) (Used After Code Date 07020600). Used on Type No(s). 0154, 0680, 0761, 1749, 1837, 1850, 1917, 2035, 3761.
117A	498981	Jet–Main (Standard) ----- Note ----- 697355 Jet–Main (Standard) Used on Type No(s). 0007, 0122.	118A	497315	Jet–Main (High Altitude) ----- Note ----- 692677 Jet–Main (High Altitude) Used on Type No(s). 0007, 0122.	125A	792253	Carburetor (Choke System) ----- Note ----- 790978 Carburetor Used on Type No(s). 1746, 1801, 1802, 1803, 1804, 1805. 795882 Carburetor Used on Type No(s). 0007, 0122.
117B	691428	Jet–Main (Standard) (Used After Code Date 07020600). ----- Note ----- 697355 Jet–Main (Standard) (Used Before Code Date 07020700).	118B	695042	Jet–Main (High Altitude) (Used After Code Date 07020600). ----- Note ----- 692677 Jet–Main (High Altitude) (Used Before Code Date 07020700).	125B	794304	Carburetor (Autochoke System) (Used After Code Date 07020600). ----- Note ----- 790845 Carburetor (Used Before Code Date 07020700).
			121	498260	Kit–Carburetor Overhaul			

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊘ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

3728–10

Assemblies include all parts shown in frames.

07/14/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION				
127	●694468	Plug–Welch	209A	795883	Spring–Governor Used on Type No(s). 0007, 0122.		691852	Spring–Governor Used on Type No(s). 0150, 0151, 0154, 0155, 0158, 0159, 0163, 0164, 0168, 0180, 0182, 0183, 0184, 0230, 0231, 0233, 0234, 0240, 0241, 0680, 1706, 1727, 1728, 1729, 1739, 1740, 1748, 1749, 1794, 1807, 1814, 1818, 1820, 1821, 1822, 1823, 1824, 1825, 1830, 1831, 1832, 1833, 1835, 1840, 1841, 1844, 1846, 1847, 1914, 1958, 2006, 2010, 2015, 2016, 2021, 2023, 2035, 4135, 4825, 4830.				
130	696564	Valve–Throttle										
130A	691203	Valve–Throttle										
133	398187	Float–Carburetor	209B	699056	Spring–Governor ----- Note ----- 691292 Spring–Governor Used on Type No(s). 0115, 0116, 0117, 0135, 0139, 0145, 0146, 0147, 0153, 0161, 0172, 0175, 0176, 0181, 0199, 0204, 0206, 0209, 0216, 0219, 0220, 0222, 0224, 0225, 0227, 0236, 0237, 0247, 0256, 0329, 0555, 0568, 0933, 0951, 0985, 0992, 1003, 1006, 1009, 1037, 1133, 1163, 1164, 1172, 1724, 1733, 1734, 1737, 1738, 1750, 1767, 1791, 1808, 1810, 1816, 1817, 1826, 1827, 1829, 1837, 1839, 1845, 1849, 1850, 1852, 1853, 1904, 1941, 1963, 1965, 1966, 1992, 1995, 2003, 2004, 2008, 2011, 2012, 2014, 2017, 2022, 2027, 2034, 2041, 2148, 2149, 2304, 4135.							
134	●398188	Kit–Needle/Seat										
137	◆693981	Gasket–Float Bowl										
146	690979	Key–Timing										
163	★●272653	Gasket–Air Cleaner										
187	791766	Line–Fuel (Cut to Required Length)										
187A	791873	Line–Fuel (Molded)										
188	693399	Screw (Control Bracket)										
190	690940	Screw (Fuel Tank)										
202	691829	Link–Mechanical Governor										
								691290 Spring–Governor Used on Type No(s). 0005, 0114, 0131, 0169, 0179, 0188, 2013. 791157 Spring–Governor Used on Type No(s). 1746, 1801, 1803, 1804, 1805. 691835 Spring–Governor Used on Type No(s). 1802. 790944 Spring–Governor Used on Type No(s). 0523. 795879 Spring–Governor Used on Type No(s). 0007, 0122.				

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

⊗ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
217	690354	Spring-Choke Return	227	690783	Lever-Governor Control	300	692038	Muffler
222	790143	Bracket-Control (Remote/Manual Friction)(Primer)	231	691636	Screw (Choke Valve)			----- Note -----
222A	692021	Bracket-Control (Remote, Choke A Matic, Non Compliance)	236	691826	Link-Lockout			790828 Muffler
		----- Note -----	265	690798	Clamp-Casing			Used on Type No(s).
		790982 Bracket-Control	265A	691024	Clamp-Casing			0030, 0031, 0114,
		Used on Type No(s).	265B	692179	Clamp-Casing			0121, 0132, 0133,
		1746, 1801, 1803,	267	691044	Screw (Casing Clamp)			0140, 0143, 0144,
		1804, 1805.	268	691025	Casing-Control Wire (Cut to Required Length)			0150, 0151, 0158,
222C	692150	Bracket-Control (Variable Speed) (5 Position Manual Choke)	269	691026	Wire-Control (Cut to Required Length)			0159, 0161, 0164,
		----- Note -----	270	691027	Nut (Control Wire Casing)			0165, 0166, 0168,
		795880 Bracket-Control	271	691028	Lever-Control			0172, 0173, 0175,
		Used on Type No(s).	276 ♦	271716	Washer-Sealing			0177, 0180, 0181,
		0007, 0122.	287	690940	Screw (Dipstick Tube)			0183, 0200, 0216,
222D	791128	Bracket-Control (Fixed Speed)	291	790830	Thermostat			0219, 0220, 0222,
222E	692982	Bracket-Control (Manual Friction, 5 Position Manual Choke)						0224, 0225, 0227,
								0230, 0231, 0233,
								0234, 0236, 0237,
								0240, 0241, 0245,
								0247, 0248, 0251,
								0256, 0378, 0454,
								0475, 0487, 0491,
								0548, 0555, 0615,
								0625, 0660, 0662,
								0675, 0677, 0678,
								0709, 0849, 0867,
								0875, 0880, 0893,
								0932, 0933, 0985,
								0992, 1003, 1006,
								1024, 1044, 1045,
								1047, 1055, 1133,
								1163, 1164, 1184,
								1706, 1738, 1807,
								1808, 1823, 1825,
								1827, 1831, 1845,
								1847, 1849, 1851,
								1963, 1965, 2011,
								2015, 2016, 2017,
								2021, 2022, 2034,
								2041, 3709, 3849,
								4135, 4825.
								792677 Muffler
								Used on Type No(s).
								0329, 1003, 1844.
								496106S Muffler
								Used on Type No(s).
								0187, 0251.
								790830 Muffler
								Used on Type No(s).
								4830.
								300A 494343S Muffler

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
304	695892	Housing-Blower ----- Note ----- 493293 Housing-Blower Used on Type No(s). 0015, 0016, 0018, 0025, 0060, 0062, 0115, 0139, 0147, 0162, 0173, 0204, 0206, 0244, 0479, 1701, 1727, 1728, 1733, 1734, 1740, 1767, 1791, 1794, 1801, 1803, 1804, 1805, 1810, 1814, 1821, 1832, 1833, 1840, 1904, 1914, 1958, 1992, 1995, 2003, 2004, 2006, 2010, 2023, 2304, 2388, 3841. 493294 Housing-Blower Used on Type No(s). 0004, 0005, 0006, 0007, 0010, 0050, 0116, 0122, 0131, 0169, 0179, 0187, 0188, 0209, 0242, 0521, 0523, 0538, 0826, 0878, 1064, 1137, 1729, 1802, 1822, 1839, 1926, 1941, 2013, 2014, 2027, 3139, 3140.			790826 Housing-Blower Used on Type No(s). 0031, 0121, 0133, 0144, 0150, 0151, 0158, 0159, 0161, 0163, 0165, 0168, 0172, 0175, 0177, 0180, 0200, 0216, 0219, 0231, 0233, 0236, 0240, 0241, 0245, 0247, 0248, 0378, 0454, 0487, 0491, 0548, 0555, 0615, 0625, 0675, 0677, 0678, 0709, 0849, 0867, 0875, 0880, 0893, 0909, 0923, 0985, 0992, 1003, 1006, 1024, 1044, 1045, 1047, 1055, 1111, 1133, 1135, 1163, 1164, 1184, 1706, 1748, 1816, 1825, 1827, 1829, 1831, 1835, 1844, 1845, 1846, 1853, 1963, 1965, 2011, 2021, 2022, 2041, 3709, 3849, 4135, 4825, 4830.				790983 Housing-Blower Used on Type No(s). 0132, 0140, 0143, 0166, 0181, 0183, 0220, 0224, 0475, 0660, 0662, 0880, 0893, 0933, 1738, 1739, 1808, 1823, 1826, 1847, 2015, 2017. 791291 Housing-Blower Used on Type No(s). 0030, 0114, 0164, 0222, 0225, 0227, 0230, 0234, 0237, 0256, 1807, 1849, 2016, 2034. 791135 Housing-Blower Used on Type No(s). 0329.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊗ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	334	691061	Screw (Magneto Armature)	523	499621	Dipstick
306	690450	Shield-Cylinder	337	802592S	Plug-Spark (Resistor)	524	★692296	Seal-Dipstick Tube
306A	790836	Shield-Cylinder				525	495265	Tube-Dipstick
307	690345	Screw (Cylinder Shield)			----- Note -----	529	691923	Grommet
309	695550	Motor-Starter (Used Before Code Date 07052900).			697451 Plug-Spark (EMS)	544	690786	Armature-Starter
309A	795092	Motor-Starter (Used After Code Date 07052800).	346	690661	Screw (Spark Arrester)	545	492919	Washer Set
310	692327	Bolt (Starter Motor)	347	691396	Switch-Rocker	562	92613	Bolt (Governor Control Lever)
332	690662	Nut (Flywheel)	356	692390	Wire-Stop	563	691138	Screw (Debris Guard Screen)
333	802574	Armature-Magneto ----- Note ----- 790817 Armature- Magneto Used on Type No(s). 0224, 0487, 0761, 1045, 1817, 2034, 3761.	356B	693010	Wire-Stop	564B	698589	Screw (Control Cover)
333A	793353	Armature-Magneto ----- Note ----- 793354 Armature- Magneto Used on Type No(s). 0121, 0150, 0151, 0154, 0158, 0159, 0163, 0164, 0168, 0172, 0680, 0875, 0893, 0909, 1111, 1164, 1706, 1739, 1748, 1749, 1750, 1807, 1808, 1816, 1823, 1824, 1825, 1826, 1827, 1829, 1831, 1835, 1837, 1844, 1845, 1846, 1847, 1849, 1850, 1853, 1917, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2035, 2041, 4825, 4830.	356D	496381	Wire-Stop	564	690664	Screw (Control Cover)
			356G	695283	Wire-Stop	578	398153	Wire-Assembly
			356H	690791	Wire-Stop	578A	696031	Wire-Assembly
			356J	691423	Wire-Stop	584	697734	Cover-Breather Passage
			358	794307	Gasket Set-Engine	585	★691879	Gasket-Breather Passage
			363	19069	Flywheel Puller	592	690800	Nut (Rewind Starter)
			365	691688	Screw (Carburetor)	597	691696	Screw (Pawl Friction Plate)
			383	89838S	Wrench-Spark Plug	601	791850	Clamp-Hose
			404	690272	Washer (Governor Crank)	601A	691038	Clamp-Hose
			425A	690670	Screw (Air Cleaner Cover)	604	691757	Cover-Control
			443A	692523	Screw (Air Cleaner Primer Base)	604B	790703	Cover-Control
			445A	491588S	Filter-Air Cleaner Cartridge	604C	792418	Cover-Control
			455	791960	Cup-Flywheel	604D	793770	Cover-Control
			456	692299	Plate-Pawl Friction	608	497680	Starter-Rewind ----- Note -----
			459	281505S	Plate-Ratchet			791363 Starter- Rewind Used on Type No(s). 0132, 0133, 0143, 0144, 0165, 0166, 0175, 0181, 0234, 0479, 0487, 0491.
			474	691991	Alternator			
			497	690664	Screw (Stop Switch Bracket)			
			500	691086	Washer (Key Switch)			
			505	691251	Nut (Governor Control Lever)			
			510	795093	Drive-Starter			
			513	692358	Clutch-Drive			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
613	691340	Screw (Muffler) ----- Note ----- 790833 Screw (Muffler) Used on Type No(s). 0030, 0031, 0114, 0121, 0132, 0133, 0140, 0143, 0144, 0150, 0151, 0158, 0159, 0161, 0164, 0165, 0166, 0168, 0172, 0173, 0175, 0177, 0180, 0181, 0183, 0200, 0216, 0219, 0220, 0222, 0224, 0225, 0227, 0230, 0231, 0233, 0234, 0236, 0237, 0240, 0241, 0245, 0247, 0248, 0251, 0256, 0378, 0454, 0475, 0487, 0491, 0548, 0555, 0615, 0625, 0660, 0662, 0675, 0677, 0678, 0709, 0849, 0867, 0875, 0880, 0893, 0932, 0933, 0985, 0992, 1003, 1006, 1024, 1044, 1045, 1047, 1055, 1133, 1163, 1164, 1184, 1706, 1738, 1807, 1808, 1823, 1825, 1827, 1831, 1845, 1847, 1849, 1851, 1963, 1965, 2011, 2015, 2016, 2017, 2021, 2022, 2034, 2041, 3709, 3849, 4135, 4825, 4830. 792678 Screw (Muffler) Used on Type No(s). 0329, 1003, 1844.	615	690340	Retainer-Governor Shaft	741	795755	Gear-Timing (Plastic)
			616	698801	Crank-Governor			----- Note -----
			617	★◆270344	Seal-O Ring (Intake Manifold)			794388 Gear-Timing (Use Without Woodruff Key)
			621	692310	Switch-Stop			(Used After Code Date 07093000).
			627	792565	Bracket-Stop Switch			790345 Gear-Timing (Use Without Woodruff Key)
			627A	793211	Bracket-Stop Switch			(Used Before Code Date 07100100).
			633	◆691321	Seal-Choke/Throttle Shaft			691830 Gear-Timing (Uses Woodruff Key)
			633A	◆693867	Seal-Choke/Throttle Shaft	742	93941	Retainer-E Ring
			635	66538S	Boot-Spark Plug	745	691648	Screw (Brake)
			635A	793351	Boot-Spark Plug	783	691918	Gear-Pinion
			651	691660	Screw (Starter Gear Cover)	783A	691269	Gear-Pinion
			664	691087	Nut (Key Switch)	784	795095	Cover-Starter Gear
			668	★493823	Spacer	785	692352	Gasket-Starter Cover
			670	692294	Spacer-Fuel Tank	789B	792685	Harness-Wiring
			676	396548	Deflector-Muffler	801	690782	Cap-Drive
			676C	493871	Deflector-Muffler	802	695267	Cap-End
			676D	497682	Deflector-Muffler	803	695266	Housing-Starter
			676E	393760	Deflector-Muffler	832	499034	Guard-Muffler
			677	690661	Screw (Muffler Deflector)	832A	691424	Guard-Muffler
			684	690345	Screw (Breather Passage Cover)	832B	497683	Guard-Muffler
			689	691855	Spring-Friction	832E	793568	Guard-Muffler
			692	690572	Spring-Detent	836	690664	Screw (Muffler Guard)
			697	691127	Screw (Drive Cap)	836B	691147	Screw (Muffler Guard)
			703	696309	Clip	836C	790745	Screw (Muffler Guard)
			718	690959	Pin-Locating	842	★691031	Seal-O Ring (Dipstick Tube)
						843	691884	Sleeve-Lever (Speed Control)
						843A	691895	Sleeve-Lever (Choke)
						847	692047	Dipstick/Tube Assembly
613A	691653	Screw (Muffler)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

126T00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
851	493880S	Terminal-Spark Plug	923	691994	Brake	925	795403	Cover-Linkage
851A	692424	Terminal-Spark Plug	923A	695891	Brake			(Used After Code Date
853	695268	Adapter-Wire	923	691994	Brake			07072200).
868	697338	Seal-Valve	923A	695891	Brake			----- Note -----
869	691155	Seat-Valve (Intake)			----- Note -----			690595 Cover-
870	690380	Seat-Valve (Exhaust)			695891 Brake			Linkage
871	262001	Bushing-Valve Guide (Exhaust)			(Used Before Code Date 08050100).			(Used Before Code Date 07072300).
		----- Note -----			Used on Type No(s).	930	691919	Guard-Rewind
		63709 Bushing-Valve Guide (Intake)			0011, 0101, 0117, 0133, 0134, 0135, 0138, 0199, 0251, 0454, 0487, 0491, 0615, 0625, 0680, 0709, 0761, 0763, 0842, 0849, 0867, 0875, 0909, 1706, 1724, 1737, 1746, 1748, 1749, 1816, 1818, 1820, 1827, 1829, 1830, 1831, 1835, 1837, 1841, 1844, 1845, 1846, 1850, 1852, 1917, 1963, 1965, 1966, 2011, 2012, 2021, 2022, 2035, 2041, 2148, 2149, 3709, 3761, 3763, 3842, 3849, 4135.	935	499421	Switch-Interlock
883	★Ø691881	Gasket-Exhaust				937	691325	Spline-Starter
892	690646	Switch-Key				946	691738	Stop-Rope
910	691094	Stud (Alternator)				949	696306	Guard-Debris Screen
921B	692931	Cover-Blower Housing				957B	699985	Cap-Fuel Tank (Plastic)
921C	695889	Cover-Blower Housing				958	698183	Valve-Fuel Shut Off (Plastic)
921E	696262	Cover-Blower Housing				966B	792040	Base-Air Cleaner Primer
921F	697343	Cover-Blower Housing						----- Note -----
921G	790701	Cover-Blower Housing						795259 Base-Air Cleaner Primer
921H	790037	Cover-Blower Housing						Used on Type No(s). 1064.
921J	790036	Cover-Blower Housing				967A	493537S	Filter-Pre Cleaner
921K	699984	Cover-Blower Housing				968B	692298	Cover-Air Cleaner
921L	791026	Cover-Blower Housing				969	690700	Screw (Blower Housing Cover)
921M	792652	Cover-Blower Housing				969A	691138	Screw (Blower Housing Cover)
921N	792675	Cover-Blower Housing	923B	796136	Brake			Screw (Air Cleaner Primer Bracket)
921P	792687	Cover-Blower Housing			(Used After Code Date 08043000).	970	691669	Screw (Fuel Tank Plastic)
921R	793771	Cover-Blower Housing			Used on Type No(s).	975	493640	Bowl-Float
921U	794355	Cover-Blower Housing			0011, 0101, 0117, 0133, 0134, 0135, 0138, 0199, 0251, 0454, 0487, 0491, 0615, 0625, 0680, 0709, 0761, 0763, 0842, 0849, 0867, 0875, 0909, 1706, 1724, 1737, 1746, 1748, 1749, 1816, 1818, 1820, 1827, 1829, 1830, 1831, 1835, 1837, 1841, 1844, 1845, 1846, 1850, 1852, 1917, 1963, 1965, 1966, 2011, 2012, 2021, 2022, 2035, 2041, 2148, 2149, 3709, 3761, 3763, 3842, 3849, 4135.	976	694395	Primer-Carburetor
922	691831	Spring-Brake				977	498261	Gasket Set-Carburetor
922A	692135	Spring-Brake				990	691959	Key Set

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

Ø Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
994	398067	Arrestor-Spark	1095	498528	Gasket Set-Valve	1319	794467	Label-Warning
994B	792245	Arrestor-Spark	1119	692979	Screw (Alternator)	1330	270962	Manual-Repair
997	696310	Shield-Debris	1160	690345	Screw (Interlock Switch)	1386	790848	Vane-Air (Autochoke System)
1005	691346	Fan-Flywheel	1210	498144	Pulley/Spring Assembly (Pulley)	1387	790849	Spring-Air Vane
1019	694881	Kit-Label	1211	498144	Pulley/Spring Assembly (Spring)	1388	790850	Screw (Air Vane)
1036		Label-Emissions (Available From A Briggs & Statton Authorized Dealer)						
1058	277039	Operator's Manual						
1059	692311	Kit-Screw/Washer						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.