



Bringing it all together


# BT Baby Monitor 150

## User Guide



# Welcome...

to your BT Baby Monitor 150

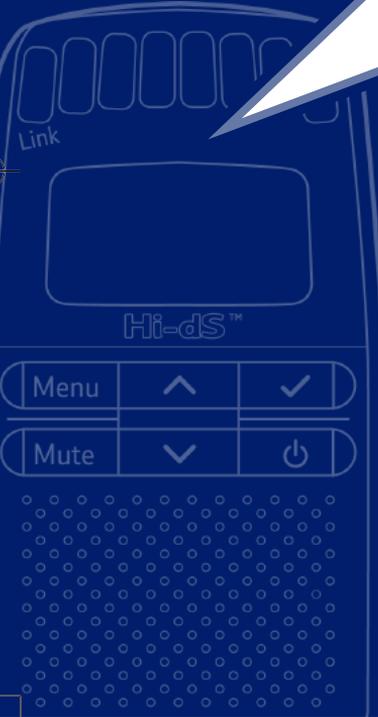- 
- Digital sound quality with high definition sound (Hi-dS™) lets you hear your baby breathe, gurgle, snuffle or cry with complete clarity.
  - Wireless range of up to 300m outdoors and up to 50m indoors (in ideal conditions) - giving you the freedom to move around with clear reception and no interference from other baby monitors.
  - Out of range warning.
  - Link light provides continuous confidence that the Parent unit is receiving a signal from the Baby unit and will alert you if the link is lost.
  - 5 lullabies or play your own music through the Baby unit.
  - Talk Back feature lets you instantly reassure and calm your baby.
  - Adjustable nightlight brightness on Baby unit.
  - Voice recording on Baby unit.
  - Torch on Parent unit.
  - Mains or battery operation.
  - Room temperature monitor.

This User Guide provides you with all the information you need to get the most from your BT Baby Monitor 150.

Please read this guide carefully and keep it for future reference.

#### **Need help?**

If you have any problems setting up or using your BT Baby Monitor 150 (or would like additional or replacement batteries), call the BT Baby Monitor Helpline 0808 100 6554\*.

Alternatively, you may also find the answer in 'Help' at the back of this guide.

#### **Got everything?**

- Baby unit
- Parent unit
- 2 x AA rechargeable batteries for Parent unit
- Parent unit charger
- 2 x mains power adapters (item code 045327)
- Travel bag
- Wall mounting bracket for the Baby unit

\* Calls made from within the UK mainland network are free.  
Mobile and international call costs may vary.

# In this guide

## Setting up

Parent unit .....	5
Baby unit .....	6
Check the connection .....	7

## Getting to know your Baby Monitor

Parent unit .....	8
Baby unit .....	11

## Using your BT Baby Monitor 150

Switching on/off .....	14
Changing Baby unit from battery to mains power .....	14
Adjust speaker volume .....	15
Talk Back .....	15
Adjust Talk Back volume .....	15
Paging .....	16
The Parent unit menu .....	16
Torch .....	17
Nightlight .....	17
Temperature .....	18
Adjust the temperature alert .....	18
Switch temperature alert on or off .....	19
Sensitivity .....	19
Select sensitivity level .....	20
Switch sound alert on or off .....	20
Switch vibrate alert on or off .....	20

Lullaby .....	21
Play lullaby .....	21
Stop lullaby .....	22
Record a lullaby .....	22
Delete a recorded lullaby .....	23
Connect an auxiliary player .....	23
Timer .....	23
Set countdown timer .....	23
Start countdown timer .....	24
Cancel countdown timer .....	24
Set count up timer .....	25
Cancel count up timer .....	25
Operate the count up timer .....	25
Set clock .....	26
Set 12 or 24 hour format .....	26
Reset .....	27

## Help .....


## General information

Cleaning .....	30
Guarantee .....	30
Product disposal .....	30
R&TTE .....	31
Declaration of Conformance .....	31

# Setting up

## Parent unit

1. Plug the mains power cable into the socket marked  on the back of the Parent unit charger.
2. Remove the battery compartment cover and insert the 2 x AA rechargeable batteries into the battery compartment on the Parent unit and replace the battery compartment cover as shown. You should always ensure you have inserted batteries in the Parent unit.

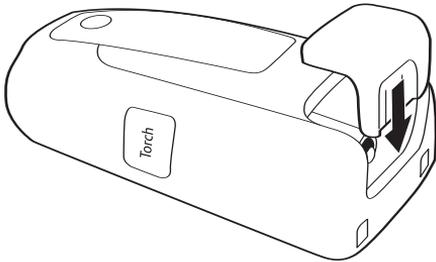

3. Slot the Parent unit into the charger, the red charging light comes on. Charge the batteries for 16 hours before switching on the Parent unit.

### IMPORTANT

Your BT Baby Monitor 150 is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision.

Make sure the Baby unit, Parent unit and mains adapter cable are kept out of reach of your baby – at least one metre away.

Never place the Baby unit inside your baby's cot, bed or playpen.

Never cover your Parent or Baby units (e.g. with clothes, towels or blankets).

Never use or place your Parent or Baby units in moist places or near water.

If travelling abroad, make sure that the voltage shown on the mains power adapter corresponds to the local mains power before connecting to the power supply.

There is a risk of explosion if the batteries are replaced by an incorrect type. Dispose of used batteries according to the instructions.

Always dispose of batteries in accordance with applicable waste disposal regulations, never in your household rubbish.

### Battery performance - Parent unit

Rechargeable batteries in the Parent unit give up to 14 hours continuous performance.

Please note however, that new batteries do not reach full capacity until they have been in normal use for several days.

If you experience any problems, please call the Helpline on 0808 100 6554\*

## 6 Setting up

Running rechargeable batteries right down at least once a week will help them last as long as possible. The charge capacity of rechargeable batteries will reduce with time as they wear out, so reducing the performance time of the Parent unit. Eventually they will need to be replaced. New batteries can be obtained from the BT Baby Monitor Helpline 0808 100 6554\*.

The Parent unit rechargeable batteries will lose charge over a period of time, even if switched off.

### Battery low warning – Parent unit

When the batteries are low – approximately within 1 hour and 30 minutes of running out – the Parent unit the  icon will come on.

If the batteries are completely flat the Parent unit will switch off.

### WARNING

The re-chargeable battery icon  in the battery compartment means that only re-chargeable batteries can be used.

Never use non-rechargeable batteries in your Parent unit. Use only the recommended type – 2 x AA rechargeable (1300mAh NiMH) batteries – using other types could permanently damage your unit.

Charge the batteries in accordance with the instructions given in this user guide.

The Parent unit can still be used when it is in the charger.

### Temperature range

The display shows temperatures between 7°C and 33°C.

## Baby unit

Once your Parent unit has been fully charged:


1. Plug the power cable into the socket marked  on the back of the Baby unit.

Connect the other end to the mains power and switch on.

### Using batteries

Your Baby unit also works on battery power, so that you can use it even when you are not near to a mains power socket or during a power cut.

1. Using your finger or a coin, turn the battery lock on the back of the Baby unit anticlockwise so the groove is vertical then lift off the cover.
2. Insert 4 x AA Alkaline batteries (not supplied) as shown.

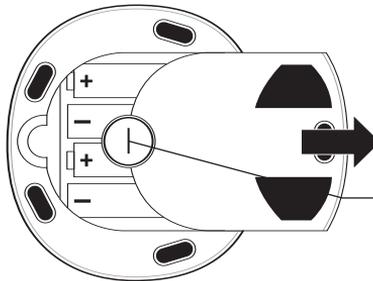

**Battery lock**  
Child tamper proof lock for the battery compartment.

If you experience any problems, please call the Helpline on 0808 100 6554\*

3. Replace the battery cover, turning the battery lock into the vertical position again to lock it.

## Check the connection

When both Units are switched on, the green link lights on both Units will come on.

If the link between the Units is broken at any time, the link lights will turn red and flash slowly.

At the Parent unit, you will also hear an alert signal (3 beeps every 30 seconds) to warn you that there is no communication between the Units. If this happens, check that the mains power is plugged in and switched on at the Baby unit.

Also check that the Units are within range of one another.

During continual use the Baby unit and Parent unit Charger power adaptors may become warm to the touch. This is normal and not something to be concerned about.

In the event of power failure, when the power is restored all your settings will remain unchanged.

However, the features on your BT Baby Monitor 150 have been designed to work normally at any temperature between 0°C and 40°C.

### **WARNING!**

Use only the mains power adapter supplied. Using an incorrect adapter may permanently damage your BT Baby Monitor 150.

The Baby unit will only work from the batteries if the mains power is off or disconnected.

### **Battery performance – Baby unit**

The recommended batteries are 4 x AA Alkaline. Not included.

With new batteries, your Baby unit will give up to 14 hours continuous performance with the night lights switched off. This will be less if the lights are switched on.

When the Baby unit is not being used and is disconnected from the mains power, you should ensure you remove the batteries. This will prevent the batteries discharging.


### **Battery low warning – Baby unit**

When the batteries are low – approximately within 30 minutes of running out – the Baby unit the  icon will come on. However, this will depend on the type of batteries used.

# Getting to know your Baby Monitor


## Parent unit

From the Parent unit you can listen to your baby and operate the Baby unit by remote control.

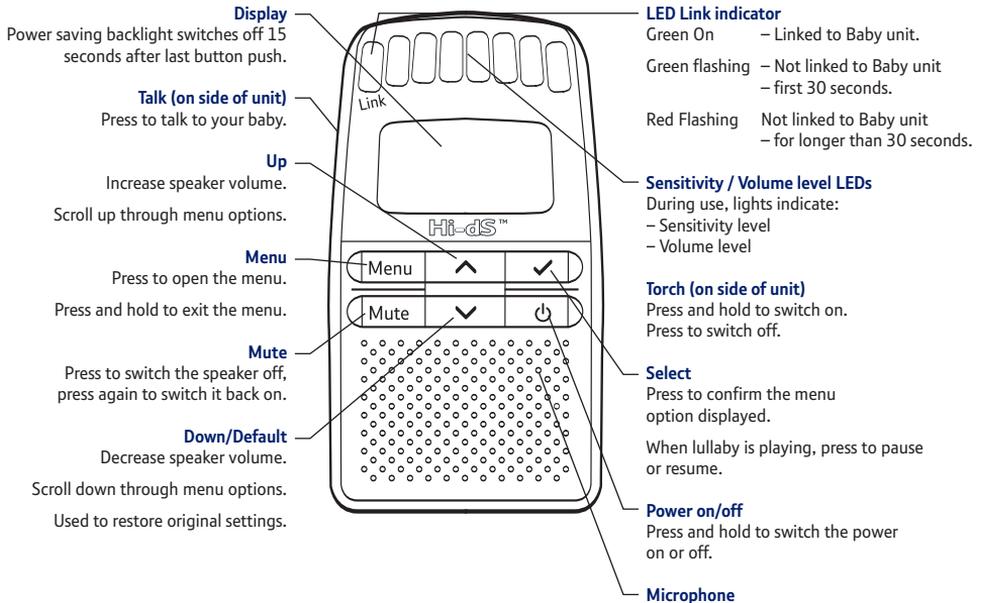

If you experience any problems, please call the Helpline on 0808 100 6554\*

## Parent unit display icons

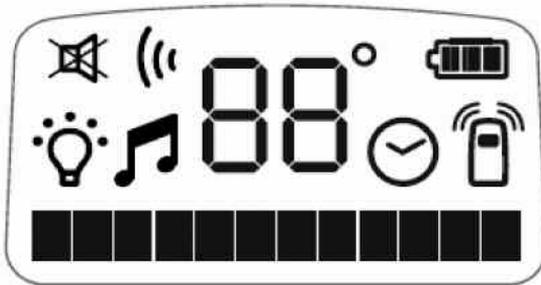

- Speaker is switched off.
- Sound alert is on.
- Full battery
- Mid charge
- Low charge
- Empty  
Scrolling bars when charging.
- Nightlight is on.
- Lullaby is playing.
- Temperature is within normal levels.
- Timer is on.
- Vibrate alert is on.


## 10 Getting to know your Baby Monitor

---

### Parent unit charger


#### Front

**Charging light**  
Indicates parent unit is charging.

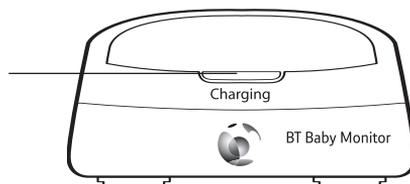

#### Back

**Power socket**  
For connection to mains power.

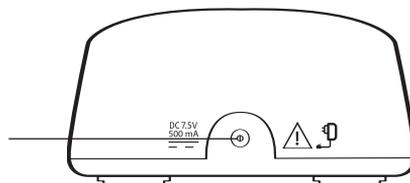

If you experience any problems, please call the Helpline on 0808 100 6554\*

## Baby unit

### Page

Press to page the Parent unit – useful for finding when it is misplaced.

### Brightness

Press to adjust the nightlight brightness (once nightlight is switched on). There are three levels.

### Nightlight

Press to switch nightlight on or off.

### Up/Register

Increase speaker volume. Use to enter registration mode.

### Down/Default

Decrease speaker volume. Used to restore original settings.

### Play/Stop

Press to play lullaby, press again to stop.

### Record

Used to record your voice to comfort your baby and to delete the recorded message.


### Link light

Green when linked to Parent unit.  
 Flashes if not linked - first 30 seconds.  
 Flashes when Talk is pressed on Parent unit.  
 Red flashing if not linked longer than 30 seconds.

### Power on/off

Press to switch on or off.

### Microphone

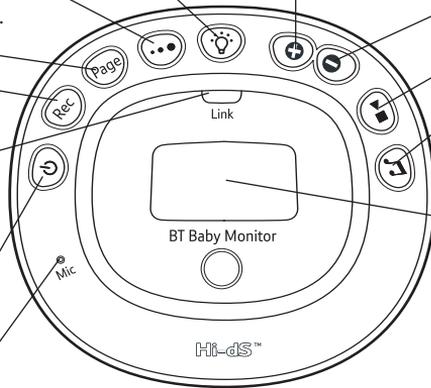

### Lullaby

Press to change the lullaby.


### Display

Power saving backlight switches off 15 seconds after last button push.


If you experience any problems, please call the Helpline on 0800 100 6554\*

## 12 Getting to know your Baby Monitor

### Back of Baby unit

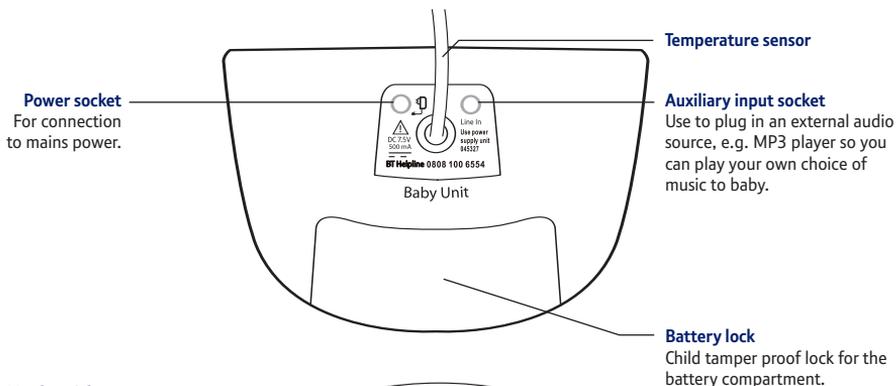


### Underside

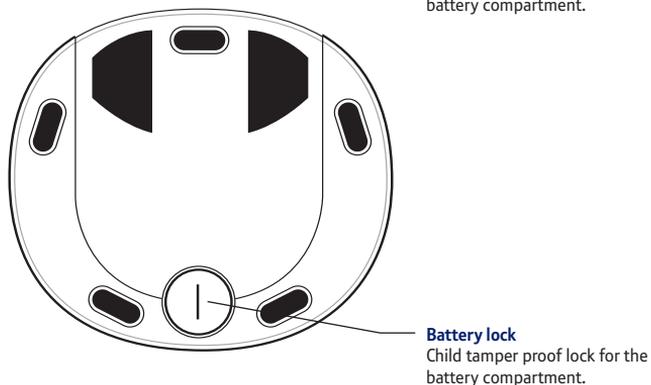

If you experience any problems, please call the Helpline on 0800 100 6554\*

## Baby unit display icons

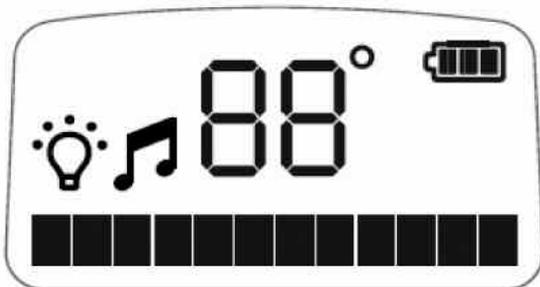

-  Battery full (icon not displayed when using mains power).
-  Battery half full.
-  Battery low.
-  Displayed when the nightlight is on.
-  Displayed when a lullaby is being played.
-  On when the temperature is normal. Flashing when it is too hot or too cold for baby.

### LED Link

- Green On Linked to Baby unit.
- Green flashing Not linked to Baby unit – first 30 seconds.
- Red Flashing Not linked to Baby unit – for longer than 30 seconds.

If you experience any problems, please call the Helpline on 0808 100 6554\*

# Using your BT Baby Monitor 150

## Helpline

If you have any problems using your BT Baby Monitor 150, call 0808 100 6554\*.

If you place the Parent and Baby units too close together you will hear a high pitched noise, this is normal. The units are designed to be located at a distance from one another, e.g. in separate rooms.

Do not press the Talk button when the Baby unit and Parent unit are positioned in the same room. High-pitch noise will be generated if the Talk button is pressed when Baby unit and Parent unit are close to each other or within 3 metres distance.

Put down / mute the Parent unit before you go into the nursery in order to prevent any high-pitched whistle / feedback.

## Switching on/off

### Switch on the Parent unit

1. Press and hold . The Link LED on the far left will illuminate. Keep pressing the  button until the 3 LEDs to the far right illuminate as well. The Parent unit is now switched on and will search for and link itself to the Baby unit.

### Switch on the Baby unit

1. To switch on, press . The Green Link light comes on to show that the unit is within range of the Parent unit.

### Switching off both units

1. To switch Off, press  until the display goes blank and the link light goes off. Please note, if there is an alert displayed, you will need to press the button twice.

### Changing Baby unit from battery to mains power

To conserve battery power on the Baby unit or when the batteries are low or flat, plug the Baby unit into the mains. If currently running on batteries and switched on, changing from battery to mains power will be instant and not affect any of the settings.

You can use the Parent unit to monitor baby while it is charging.

If you experience any problems, please call the Helpline on 0808 100 6554\*

## Adjust speaker volume

There are 5 volume levels (and off) on the Parent unit.  
The volume level is shown on the display bars,  
e.g. level 3 is shown ■■■□□.

1. Press  or . The volume level is displayed.

Changing the volume setting on the Baby unit affects the volume when you use the Talk Back feature and when playing a lullaby.

## Talk Back

You can use the Talk Back feature to comfort and reassure your baby.

Whilst using Talk Back you will not be able to hear your baby until you release  the button.

1. Press and hold  on the Parent unit to speak to baby.

The display on the Parent unit shows Talk and the green link lights on both Units flash.

2. Release  to hear your baby again.

### Adjust Talk Back volume

The Baby unit has 5 volume levels.

1. During Talk Back, press  or  on the Baby unit to increase or decrease the volume.

On the Parent unit, the volume can be switched off. The display shows Volume Off.

## 16 Using your BT Baby Monitor 150

---

### Paging

You can use the button on the Baby unit to find the Parent unit. This will also reset the speaker volume level, in case it has been switched off.

1. Press **Page** on the Baby unit. If the Parent unit volume was set to off, this will automatically reset the volume to the default volume. The paging alert will sound.
2. To stop the Page alert, press any button on the Parent unit, or press **Page** again on the Baby unit. If no button is pressed, the paging tone will stop after 2 minutes.

### The Parent unit menu

The **Menu** button on your Parent unit can be used to select and change the settings on the Baby unit without having to risk disturbing your baby.

You can access the settings by:

1. Press **Menu** then **▲** or **▼** to scroll through the options. Then press **✓** to confirm your choice.
2. Pressing **Menu** again will exit the current menu option or the unit will return to idle.

## Torch

1. Press and hold  to switch the torch on.  
Press  to switch off.

## Nightlight

Set a comforting nightlight with a choice of three brightness levels.

At the Baby unit

1. On the Baby unit, press  to switch the nightlight On or Off.
2. Press  repeatedly to select the brightness settings.

At the Parent unit:

You can switch the Nightlight On or Off.

1. Press , **Light On?** or **Light Off?** is displayed.
2. Press  to confirm. The Parent unit will then exit the menu automatically.

## 18 Using your BT Baby Monitor 150

### Pre-set temperature alert range

The Baby unit comes with pre-set minimum and maximum temperatures, so if the temperature falls below or goes above the setting an alert will sound and the display will also show **High** or **Low** as appropriate. Default is 14°C min. and 23°C max.

You can adjust the minimum / maximum setting.

The Minimum temperature setting can be between 10°C-19 °C.

The Maximum temperature setting can be between 22°C -30°C.

Healthcare professionals advise that the ideal temperature for your baby's room is between 16°C and 20°C.

### IMPORTANT!

The temperature sensor used in this BT Baby Monitor 150 is intended as a guide, to provide parents with an indication of the room temperature in which the unit has been placed. It is designed to operate within an approximate tolerance of +/- 1°C and is not intended to be as accurate as some medical devices.

## Temperature

Your BT Baby Monitor 150 constantly monitors the temperature in your baby's room and alerts you if it gets too hot or too cold. This temperature is displayed clearly on both the Baby and Parent units.

### Adjust the temperature alert

You can set a minimum and maximum temperature range so that your BT Baby Monitor 150 alerts you if the temperature goes above or below these settings. If this happens, the display will show **High** or **Low** as appropriate.

1. Press **Menu** scroll **▼** to **Temperature**. Press **✓**.
2. Scroll **▼** to **Range** and press **✓**.
3. Press **▲** or **▼** to change the minimum temperature setting. Press **✓**.
4. Press **▲** or **▼** to change the maximum temperature setting. Press **✓**.
5. Press **Menu** to return to the standby display.

If you experience any problems, please call the Helpline on 0808 100 6554\*

### Switch temperature alert on or off

1. Press **Menu** scroll **▼** to **TEMPERATURE**. Press **✓**.
2. **Alert on/off** is displayed, press **✓**.
3. The current available option will be displayed, either **Alert on?** or **Alert off?** Press **✓** to select the option displayed.
4. Press **Menu** to return to the standby display.

## Sensitivity

You can change the level of sensitivity on your BT Baby Monitor 150 to suit your baby. For example, if your baby is a particularly quiet sleeper, you can increase the sensitivity levels so that you are sure to hear if baby disturbs or becomes uncomfortable.

There are 5 different levels.

Level 5 is the most sensitive and the microphone in the Baby unit is always on.

At levels 1-4, the microphone will be voice activated by the noise baby makes.

## 20 Using your BT Baby Monitor 150

If you set the sensitivity level too low, only louder sounds in the baby's room will be picked up and communicated back to you via the Parent unit. The Unit will not pick up quieter background noises.

The default sensitivity setting is Level 5 – the microphone is permanently on.

### Sound level visual indicator

The noise level from baby's room is indicated by the LEDs on the Parent unit. So even if the loudspeaker is turned down, you can be alerted visually.

There are 7 LEDs noise indicators – 4 green and 3 red – covering a range of noise levels from 0dB up to 40dB.

### Alert tone and vibrating when the loudspeaker is off

If the Parent unit loudspeaker is turned off, and the noise level from baby's room reaches the 2nd red LED level, the unit will beep and vibrate to alert you.

You can switch the sound and vibrate alert settings on or off. The default setting for both is on.

### Select sensitivity level

1. Press **Menu** scroll **▼** to **Sensitivity**. Press **✓**.
2. Press **▲** or **▼** to select the level (1–5) you want. Press **✓**.
3. Press **Menu** to return to the standby display.

### Switch sound alert on or off

1. Press **Menu** scroll **▼** to **Sound alert**. Press **✓**.
2. The current available option will be displayed, either **Alert on?** or **Alert off?** Press **✓** to select the option displayed.
3. Press **Menu** to return to the standby display.

### Switch vibrate alert on or off

1. Press **Menu** scroll **▼** to **Vibrate**. Press **✓**.
2. The current available option will be displayed either **Vibrate off?** or **Vibrate on?** Press **✓** to select the option displayed.
3. Press **Menu** to return to standby.

If you experience any problems, please call the Helpline on **0808 100 6554\***

## Lullaby

The Baby unit plays lullabies to gently soothe your baby back to sleep. Each lullaby is played repeatedly for 15 minutes. Select one of the five melodies or select Play All for a medley of all 5 lullabies for 15 minutes.

You can also record your own lullaby or story lasting up to 2 minutes. To play your own recorded lullaby, select  from the menu list.

You can also plug in an external audio source like an MP3 or CD player and play music or audiobooks of your own choice. The auxiliary port is on the back of the Baby unit.

### Play lullaby

At the Baby unit:

1. Press . The most recently selected lullaby will be displayed.
2. Press  to start playing.

At the Parent unit:

1. Press  scroll  to Lullaby. Press .
2. Play? is displayed.

Press  to play the last selected Lullaby.

Or

If you experience any problems, please call the Helpline on 0808 100 6554\*

## 22 Using your BT Baby Monitor 150

Scroll  to Select New and press . Scroll  or  to Lullaby 1-5, Own, Aux or Play All and press .

During playback:

Pause - Press  to stop playback for up to 60 seconds.

Resume - Press  to resume a paused lullaby.

Stop - Press  on the baby unit to stop playback.

### Stop lullaby

1. When a lullaby is playing, press . The display shows **Stop Lullaby?**.
2. Press  to stop the lullaby.

If an auxiliary player is connected, this switches off the Baby unit speaker but does not switch off the auxiliary player.

### Record a lullaby

Record your own lullaby or story words up to 2 minutes long.

1. Press and hold . Begin recording after the beep. The display shows **REC** and the recording time,
2. To end recording, release .

To play your recorded lullaby, follow the steps for Play Lullaby on page 21 and select **Own**.

The Baby unit will stop monitoring during lullaby recording.

The recording must be at least 3 seconds long.

If you experience any problems, please call the Helpline on 0808 100 6554\*

### Delete a recorded lullaby

1. Press and hold **Rec**. After 2 seconds the display shows Deleted.
2. Release **Rec**.

### Connect an auxiliary player

Plug another player into your Baby unit, to play songs or stories.

At the Baby unit:

1. Plug your player to the auxiliary input socket on the back of the Baby unit.
2. Press the **PA** button repeatedly until you reach the AUX menu.
3. You can now use the external player.

## Timer

### Set countdown timer

1. Press **Menu** scroll **▼** to **Timer**. Press **✓**.
2. Display shows **Countdown**. Press **✓**.

Recording is only available when the memory is empty (after it is deleted).

To avoid deleting a recorded message, press **PA** on the Baby unit to check whether the **PA** prompt is displayed. If **PA** is displayed in the lullaby list, there is a recorded message.

#### Using the **Rec** button

When the recording memory is empty, a long press of the **Rec** button will start recording.

When there is a recorded message, a long press of the **Rec** button will delete it.

The timer can be set to countdown from 1 minute to 99hours 59 minutes. The **⌚** icon is displayed along with the countdown time.

## 24 Using your BT Baby Monitor 150

---

3. **Timer On?** is displayed. Press  to select **Set Time?** and press .
4. Press  or  to set the number of hours. Press . Press  or  to set the number of minutes. Press .
5. Press  to return to the previous menu level.

### Start countdown timer

1. Press  scroll  to **Timer**. Press .
2. Display shows **Countdown**. Press .
3. Display shows **Timer On**. Press .

The countdown timer is shown on the display and counts the seconds down from the time set.

### Cancel countdown timer

1. Press  scroll  to **Timer**. Press .
2. Display shows **Countdown**. Press .
3. Press  to display **Timer Off?** is displayed. Press .
4. Press  to return to the previous menu level.

### Set count up timer

1. Press **Menu** scroll **▼** to **Timer**. Press **✓**.
2. Scroll **▼** to **Count up**. Press **✓**.
3. **Timer On** is displayed. Press **✓**.
4. Press **✓** to start the count up timer.

### Cancel count up timer

1. Press **Menu** scroll **▼** to **Timer**. Press **✓**.
2. Scroll **▼** to **Count up**. Press **✓**.
3. Press **▲** or **▼** to display **Timer Off?** Press **✓**.
4. Press **Menu** to return to the previous menu level.

### Operate the count up timer

Use **✓** to operate the count up timer:

1. When the count up timer is stopped and **00:00:00** is displayed, press **✓** to start the counting.
2. When the count up timer is counting up, press **✓** to stop the timer, display shows the counted time steadily.
3. When the display shows the counted time steadily, press **✓** to reset to **00:00:00**.

The timer can be set to count up from 1 second to 99 hours 59 minutes.

The  icon is displayed along with the count up time.

If countdown is currently running, the count up timer will not be available, and vice versa. Only one of the timers can be used at one time.

## 26 Using your BT Baby Monitor 150

---

### Set clock

This sets the clock on both units.

1. Press **Menu** scroll **▼** to **Timer**. Press **✓**.
2. Scroll **▼** to **Clock** and press **✓**.
3. **Set Time** is displayed. Press **✓**.
4. Press **▲** or **▼** to set the hour then press **✓**.
5. Press **▲** or **▼** to set the minute then press **✓**.
6. Press **Menu** to return to the previous menu level.

### Set 12 or 24 hour format

1. Press **Menu** scroll **▼** to **Timer**. Press **✓**.
2. Scroll **▼** to **Clock** and press **✓**.
3. **Set Time** is displayed.
4. Scroll **▼** to **Format** and press **✓**.
5. Press **▲** or **▼** to select 12 or 24 hours. Press **✓** to confirm.
6. Press **Menu** to return to the previous menu level.

If you experience any problems, please call the Helpline on 0800 100 6554\*

## Reset

You can restore all the adjustable settings back to their original factory settings.

The Parent and Baby units are reset individually.

1. Press  to switch the unit off.
2. Press  again to switch the unit back on.
3. While the unit is switching on, press and hold  until you hear a beep. The unit will restore all the original factory settings.

# Help

## Helpline

If you have any problems using your BT Baby Monitor 150, call 0808 100 6554\*.

### Link light does not come on

- Check that both the Baby and Parent units are switched on.
- If using batteries check that they are correctly installed and that they are not drained.

### Link light is flashing green

- If you have pressed  to use the Talk Back feature, the link light will flash to indicate one-way communication between the units.
- The Units are searching for a communication link.
- Check they are within range of one another and that the mains power (or batteries) are properly connected.

If you experience any problems, please call the Helpline on 0808 100 6554\*

### **Link light is red**

- The link between your Units is broken. You will also hear an alert to let you know there is no communication between the Units. If this happens, check that the mains power (or batteries) is correctly connected and that the Units are within range of one another.

### **Parent unit remains silent or very quiet**

- The sensitivity setting may be too low, see page 19.
- You may have set the volume too low, see page 15.

### **You can hear a high pitched noise**

- The Units are too close to each other, or the volume setting is too high.

### **Talk back feature is not working**

- Check that the volume is loud enough at the Baby unit, see page 15.

# General information

## Cleaning

Both Units have splash resistant grilles and casing. To clean, wipe with a damp cloth.

## Guarantee

Your BT Baby Monitor 150 is guaranteed for a period of 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion the option to replace the BT Baby Monitor 150 or any component thereof, which is identified as faulty or below standard, or as a result of inferior workmanship of materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

### The conditions of this guarantee are:

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is required.
- The equipment is returned to BT or its agent as instructed.
- This guarantee does not cover the batteries and any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

## Within the 12 month guarantee period

If you experience difficulty using the product, prior to returning your product, please read the Help section beginning on page 28, or contact the BT Baby Monitor Helpline for assistance on 0808 100 6554\*.

In the unlikely event of a defect occurring, please follow the Helpline's instructions for replacement or repair.

## Outside of the 12 month guarantee period:

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's approved repair agent, on 0870 240 5029 or a local qualified repairer.

## Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

If you experience any problems, please call the Helpline on 0808 100 6554\*

### **Product disposal instructions for residential users**

When you have no further use for it, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

### **Product disposal instructions for business users**

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

## **R&TTE**

This product is intended for use within the UK.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

### **Declaration of Conformance**

Hereby, Vtech declares that this BT Baby Monitor 150 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The Declaration of Conformance for the BT Baby Monitor 150 is available by calling the BT Baby Monitor Helpline on 0808 100 6554\*.

## Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2008.  
Registered Office: 81 Newgate Street, London EC1A 7AJ.  
Registered in England No. 1800000.

Designed and produced by The Art & Design Partnership Ltd.  
Printed in China

BT Baby Monitor 150 (05/08) Issue 1

