


Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.

**Roundel, XL
INDOOR
PS (Pendant Swivel)
Visor and Non-Visor**


Exploded View and Part Call-Out

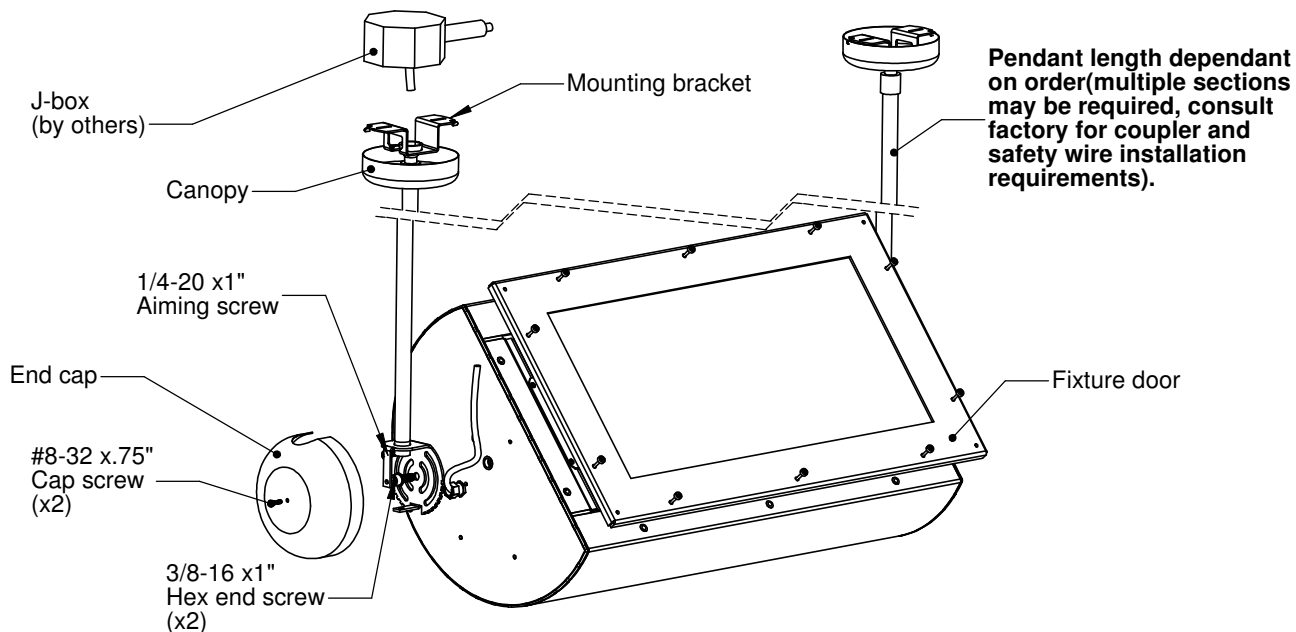

Attention:


All extra large fixtures require additional bracing/structure around J-box to support fixture.

1. Securing Power side Pendant to Ceiling

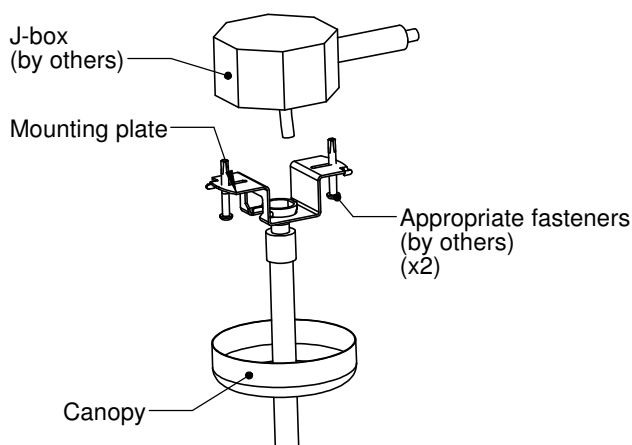

1. Remove canopy and allow it slide down pendant.
2. Using appropriate fasteners(by others), secure mounting plate to structure/ bracing around J-box.
3. For mounting plate dimensions refer to page three(3).

2. Securing non-Power side Pendant

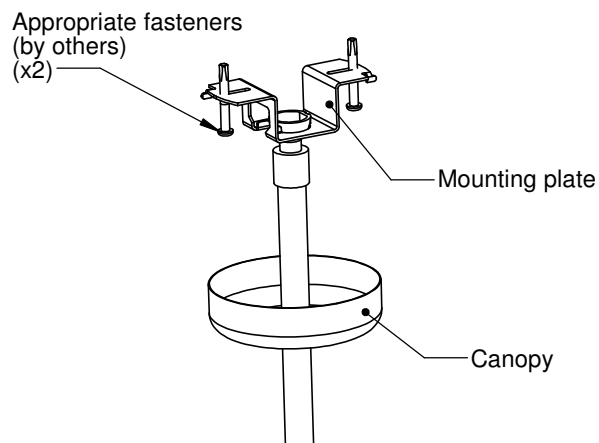


1. To mount non-power side pendant, use dimensions provided on page three(3).
2. Using appropriate fasteners(by others), secure mounting plate to structure/ bracing in ceiling.

Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.


Roundel, XL INDOOR PS (Pendant Swivel) Visor and Non-Visor

3. Mounting Fixture to Pendants

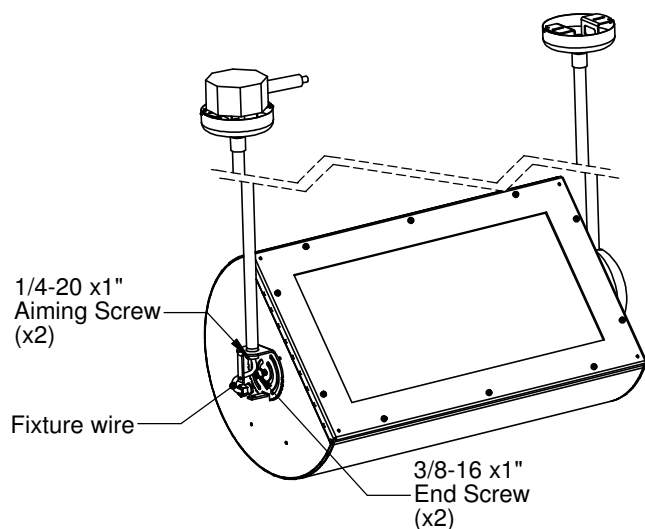


1. After hanging both pendants, carefully lift fixture head into place.
2. Secure fixture using both 3/8 -16 x 1" End screws.
3. Secure desired angle using 1/4-20 x 1" Aiming screws.

4. Wiring the Fixture

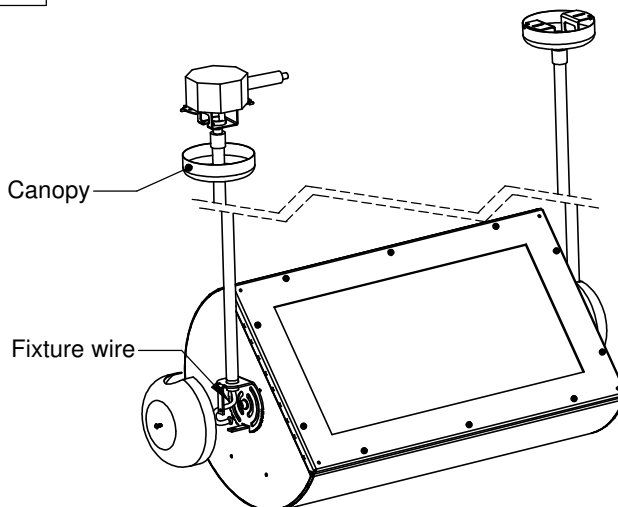

1. After securing the fixture head to the pendants, run fixture wire up pendant tube to J-box.
2. Attach appropriate wires ensuring all connections are properly matched.
3. Secure canopy to mounting plate.

5. Securing Safety Wires and Aiming the Fixture

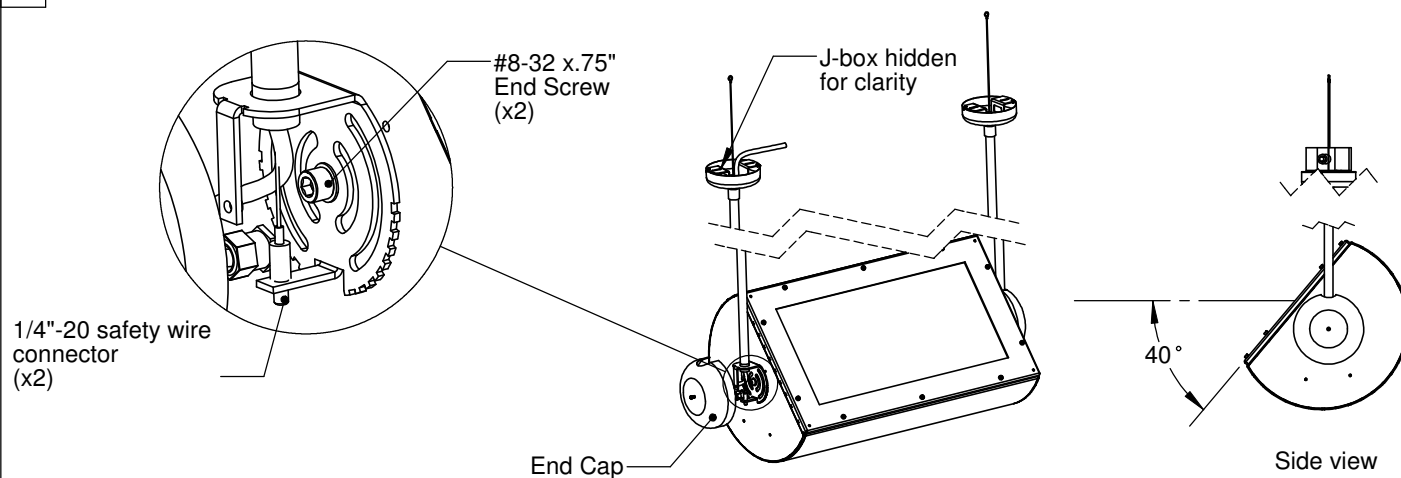


1. To secure safety wire to fixture, screw 1/4"-20 wire connector to bottom of pendant bracket.
2. Run safety wire up pendant tube and secure to structure in ceiling.
3. To adjust angle of fixture head, loosen both 1/4-20 x1" aiming screws.
4. Rotate fixture head to desired angle and secure with both 1/4-20 x1" aiming screws.
5. Replace end cap using 8-32 x.75" end screw.



Warning: Before starting any work ensure that all sources of power are turned off. All work must meet local/national codes and be performed by a certified electrician. **Do not** mount fixtures vertically.

Roundel, XL
INDOOR
PS (Pendant Swivel)
Visor and Non-Visor

Mounting Plate Dimensions In[mm]

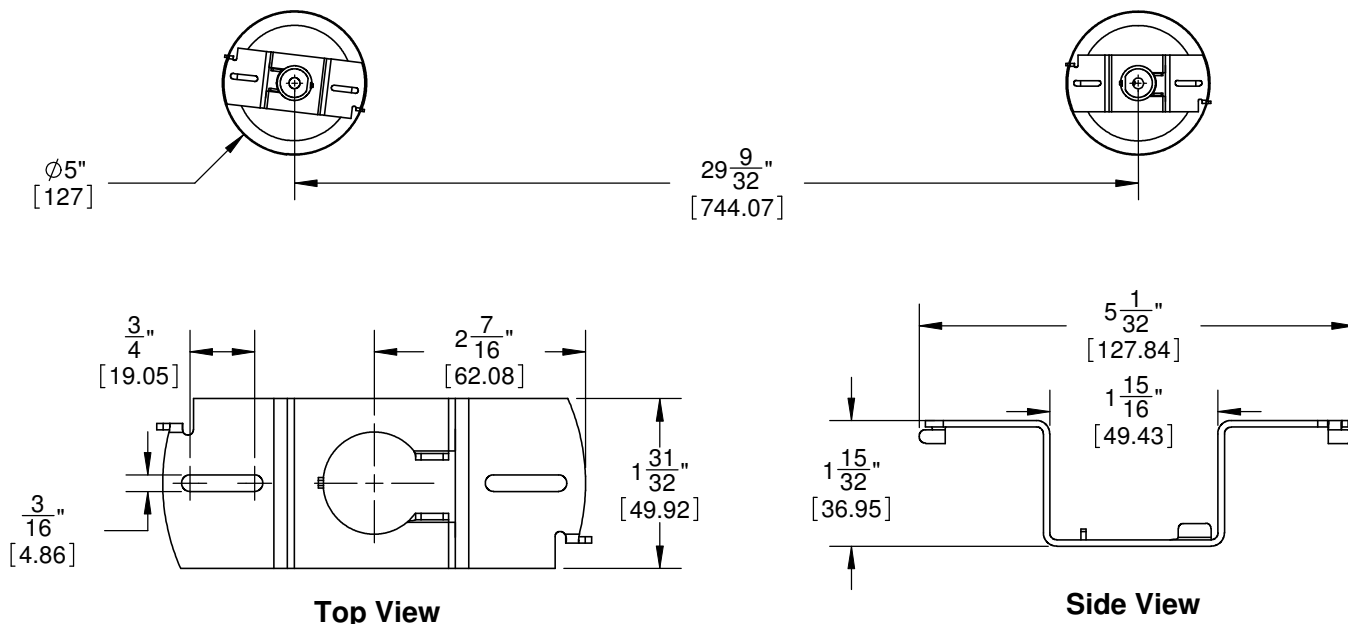

Lamping Size Chart
 (lamps provided by others)

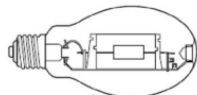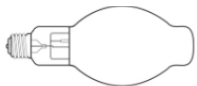FIXTURE SIZE (inches/ mm)	WATTAGE	# OF LAMPS	LAMP TYPE	LAMP DESCRIPTION	LAMP (not to scale)
27/ 685.8	250W	1	ED28	Metal Halide	 
27/ 685.8	400W	1	ED28/BT37	Metal Halide	
27/ 685.8	400W	2	ED28/BT37	Metal Halide	
27/ 685.8	750W	1	BT37	Metal Halide	
27/ 685.8	1000W	1	BT37	Metal Halide	