

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:C4X4MR

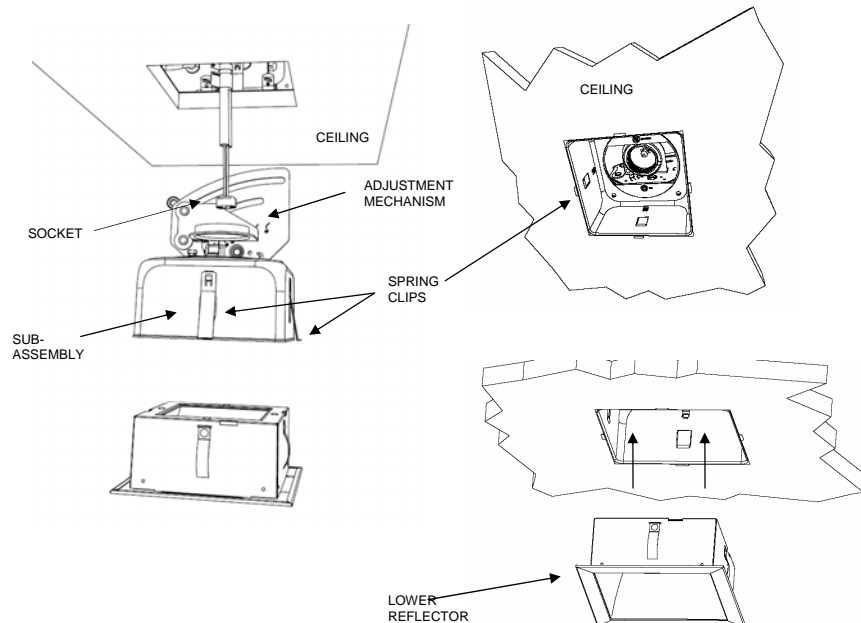
B0707

Page 1 of 2

INSTALLATION INSTRUCTIONS FOR 4" MATRIX RECESSED MR-16 DOWNLIGHT, ADJUSTABLE ACCENT and LENSED WALLWASH TRIMS.

CAUTION: (RISK OF FIRE) DO NOT INSTALL INSULATION ABOVE NOR WITHIN 3 INCHES (76mm) OF ANY PART OF THE LUMINAIRE (LIGHTING FIXTURE)

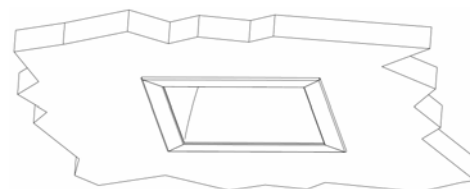
CAUTION: USE ONLY ROUGH-IN SECTIONS PROVIDED BY LIGHTOLIER. USE OF OTHER MANUFACTURERS' ROUGH-IN KITS WILL VOID THE UNDERWRITERS LABORATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.



Adjustable Accent Trim:

This trim is provided with a lampholder assembly, lamp adjustment mechanism/sub-assembly and a lower reflector unit.

1. Separate LOWER REFLECTOR from SUB-ASSEMBLY. Set LOWER REFLECTOR aside.
2. Feed SOCKET through lamp opening as shown. Install SUB-ASSEMBLY into F.I.K. (in ceiling) by pushing through ceiling opening until flush with ceiling.
3. ** To install **MR16 Incandescent** lamp, see LAMPING INSTRUCTIONS FOR MR16 INCANDESCENT instructions on page 2.
** To install **HID MR16** please refer to the lamping instructions that ship with the lampholder in the HID frame.
4. Lamp tilt angle is adjusted via screw marked "TILT".
5. To adjust rotational position of lamp, loosen screw marked "ROTATION", and manually rotate lamp assembly until desired position is reached. Tighten screw to lock.
6. Install LOWER REFLECTOR into SUB-ASSEMBLY until flange is flush with ceiling.

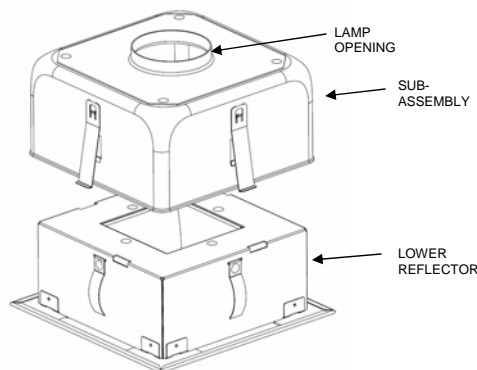


FINISHED INSTALLATION

Downlight Trim:

This trim is provided with a downlight sub-assembly, lampholder assembly, and a lower reflector unit.

1. Separate LOWER REFLECTOR from SUB-ASSEMBLY. Set LOWER REFLECTOR aside.
2. Feed SOCKET through lamp opening as shown above. Install SUB-ASSEMBLY into F.I.K. (in ceiling) by pushing through ceiling opening until flush with ceiling.
3. ** To install **MR16 Incandescent** lamp, see LAMPING INSTRUCTIONS FOR MR16 INCANDESCENT instructions on page 2.
** To install **HID MR16** please refer to the lamping instructions that ship with the lampholder in the HID frame.
4. Install LOWER REFLECTOR into SUB-ASSEMBLY until flange is flush with ceiling.



LIGHTOLIER®

LIGHTOLIER A GENLYTE COMPANY
631 Airport Road, Fall River, MA 02720

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

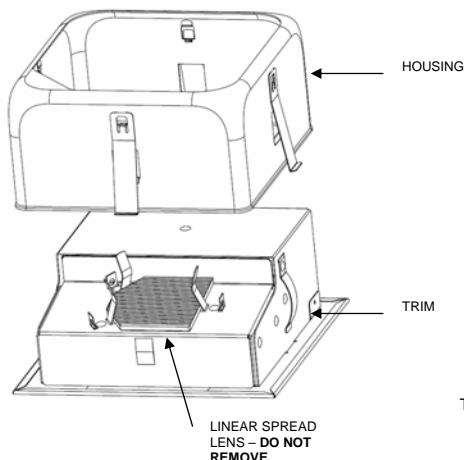
This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electric shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTALLATION INSTRUCTIONS FOR 4" MATRIX RECESSED MR-16 DOWNLIGHT, ADJUSTABLE ACCENT and LENSED WALLWASH TRIMS.

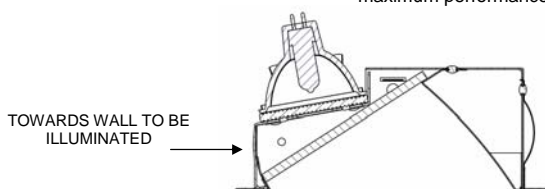
CAUTION: (RISK OF FIRE) DO NOT INSTALL INSULATION ABOVE NOR WITHIN 3 INCHES (76mm) OF ANY PART OF THE LUMINAIRE (LIGHTING FIXTURE)

CAUTION: USE ONLY ROUGH-IN SECTIONS PROVIDED BY LIGHTOLIER. USE OF OTHER MANUFACTURERS' ROUGH-IN KITS WILL VOID THE UNDERWRITERS LABRATORIES LISTING AND COULD CONSTITUTE A FIRE HAZARD.

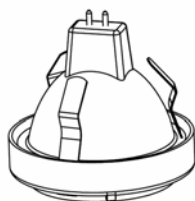
**Wallwash Finishing Sections:**

This Finishing Section is provided with a housing, a custom linear spread lens, and a wallwasher trim unit

1. Separate TRIM from HOUSING. Set TRIM aside.
2. Install HOUSING into F.I.K. (in ceiling) by pushing through ceiling opening until SPRING CLIPS are flush with ceiling. See instructions on other side.
3. Install appropriate lamp as detailed below.
4. Install TRIM into HOUSING until flange is flush with ceiling. TRIM must be oriented as shown in order to provide maximum performance.

**LAMPING INSTRUCTIONS**

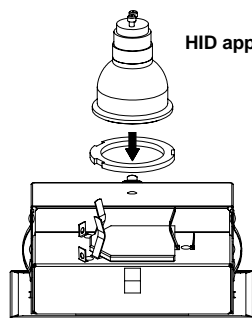
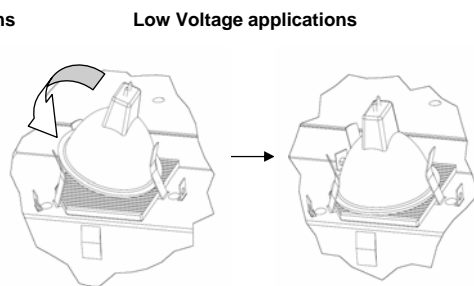
ALWAYS ADHERE TO MAXIMUM WATTAGE
LIMITATIONS SPECIFIED ON FINISHING
SECTION LABELING

**Typical Lampholder Assembly**

(Supplied with Downlight and Adjustable Accent finishing sections, along with (1) product-specific glass lens)

* To install HID MR16 please refer to the lamping instructions that ship with the lampholder in the HID frame.

1. Install lamp into (3) springs as shown.
2. Up to (2) optional 2" accessories may be installed into this type of lampholder. Refer to appropriate product specification sheets for any accessory limitations, if any.
3. Connect lamp socket (in F.I.K.) to lamp pins.
4. Install into lamp opening in trim housing.

**HID applications****Low Voltage applications****Wallwash Lamp Installation**

*** HID applications place ring that ships standard with wall wash trim, over lens as illustrated above. Continue with steps 1-5.**

1. Install lamp into (3) springs as shown.
2. Wallwash trims are supplied with (1) linear spread lens. DO NOT REMOVE this lens, as it is critical for proper lamp seating and photometric performance.
3. (1) optional 2" accessory may be installed on top of this spread lens. HID applications will NOT accept any accessories. Refer to appropriate product specification sheets for any accessory limitations, if any.
4. Connect lamp socket (in F.I.K.) to lamp pins.
5. Install trim as shown elsewhere on this sheet.