



OPERATING INSTRUCTIONS FOR DIRECTOR USING A PROFESSIONAL CONTROLLER, DRCP

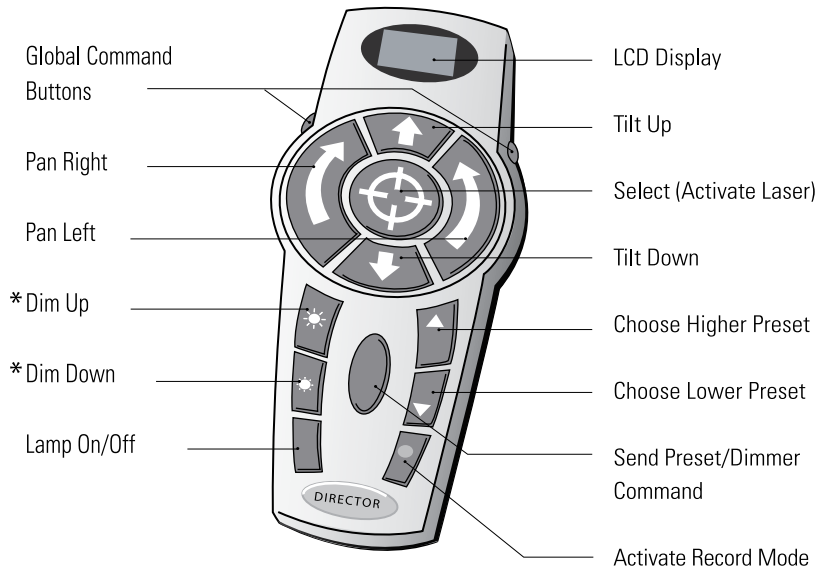

* For Low Voltage Directors only.

Director

Shown in Home position (HO)

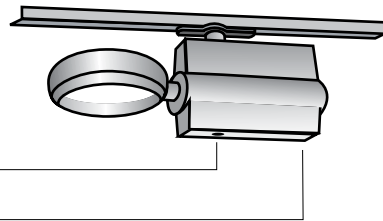


Laser sensor


LED indicator;
Red: when selected, Green: Global mode,
Red & Green Flash: Commands being received

A Basic commands (Pan, Tilt, Dim up, Dim Down, On/ Off)


Step 1: Use the laser pointer to select the light you want to control

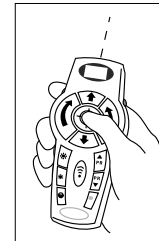


Press select button to switch on laser

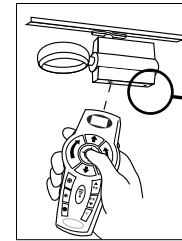

Point laser at sensor on bottom of Director

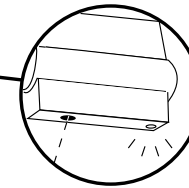


Red LED will light up when laser hits sensor

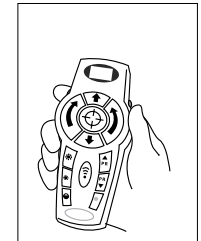


Release select button when red LED lights up

Step 2: To direct or dim light beam

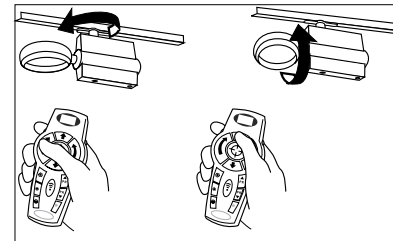


Use the arrow keys to pan or tilt the light beam. Point the controller at the light (you do not have to be accurate).

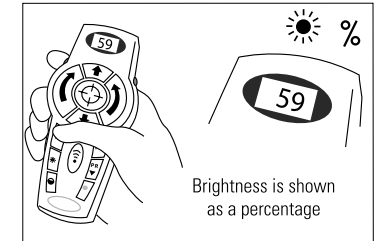


Brightness is shown as a percentage

Use dimming keys to adjust brightness, and the black & white circle to turn lamp on/off

Step 3: To move on to next Director

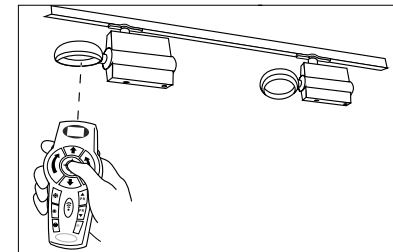

Press select button and point laser away from the sensor to deselect Director

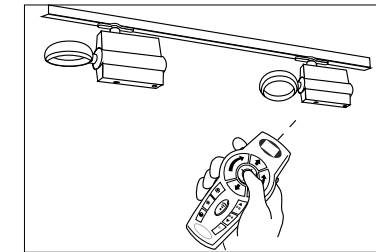


When LED on first Director goes out move on to the next one


OPERATING INSTRUCTIONS FOR DIRECTOR USING A PROFESSIONAL CONTROLLER, DRCP

B Advanced commands* (Record and Recall Presets)


Step 1: To record the position and dim setting of Director

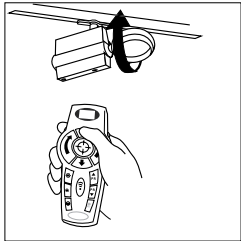


Select a light and Direct it to the position and dim setting you wish to record.

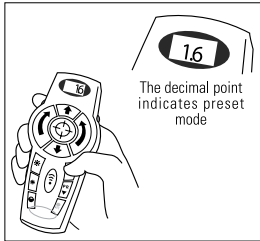


On the controller select the preset number you wish to record using PR▲ & PR▼ buttons. - There are 10 presets available between 0.1 and 1.0

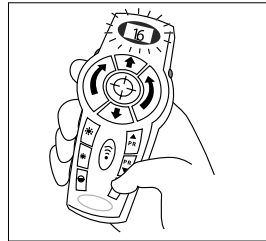

Press REC key and check that the display starts flashing.
NB display switches off after 10 seconds if no button is pressed

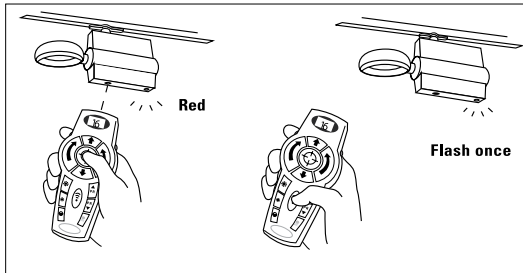


Reselect light (A, step 1) and press send button. The LED will flash to show the command has been received.

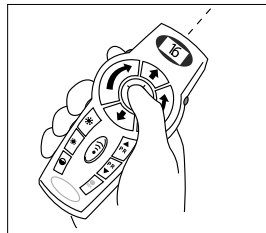


Now deselect to store the recorded position in the light. (A, step 3)
NB. Press REC again to cancel record mode unless you have other lights to program


Step 2: To recall a preset

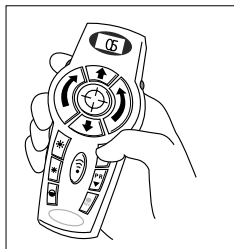

Use PR▲ & PR▼ buttons to choose the preset position you want to recall

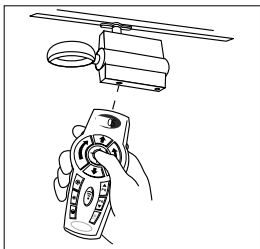

Select Director you want to recall (A, step 1)

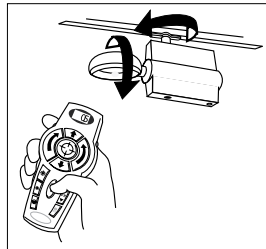

Press send and Director will move to preset position.
Director may go to home position first


C The Global Command *

The global command buttons allow you to record and recall presets for a group of Directors without the need to select them first with the laser pointer.


NB When global commands have been received the LED indicator is green for 15 seconds



Example 1. To record a particular scene

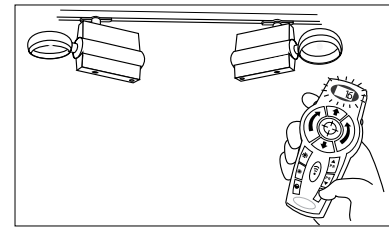


Set Directors as required (Pan, Tilt & Dim).
Select preset number for scene using PR▲ & PR▼, then press REC button and check LCD is flashing.

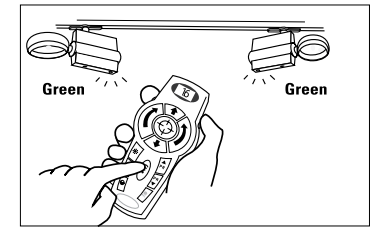


Now hold both Global command buttons while pressing send, and point controller at each Director until Green LED illuminates. Press REC again to cancel Record mode.

Example 2. To recall a preset scene

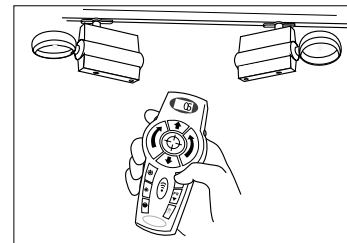

Use PR▲ & PR▼ buttons to choose a scene number. Then hold both Global command buttons while pressing send, and point controller at each Director until Green LED illuminates.

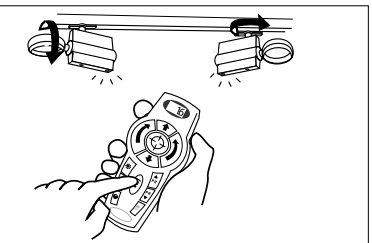

Example 3. To control brightness with Global command

To set all the lights to the same brightness, use the dimming keys to select a percentage value, eg. 40 % brightness, then whilst holding both Global command buttons press send and point controller until each Director displays green LED.

This dimming control can be used with a single Director selected by a laser in a similar way.