

INSTALLATION MANUAL



USA

Universal Swivel Mount for Carts and Stands*

NORTH AMERICA

3130 East Miraloma Avenue
Anaheim, CA 92806 USA
USA and Canada –
Phone: 800-368-9700
Fax: 800-832-4888

EUROPE

Swallow House,
Shilton Industrial Estate,
Shilton, Coventry, England CV79JY
Phone: +44 (0) 2476 614700
Fax: +44 (0) 2476 614710

AUSTRALIA, NEW ZEALAND, OCEANIA (DISTRIBUTOR)

P.O. Box 295
Mordialloc Victoria 3195
Australia
Phone: 03 9586 6330
www.premiermounts.com.au

Other Locations – Phone: 001.714.632.7100; Fax: 001.714.632.1044

©Premier Mounts 2007

9532-005-001-02

* Base and Poles not included.



Table of Contents

WARNING STATEMENTS - 2 -
 WARRANTY - 3 -
 PARTS LIST* - 3 -
 INSTALLATION TOOLS - 3 -
 THREAD DEPTH INDICATOR - 5 -
 SUPPORT TUBE INSTALLATION - 6 -
 ATTACHING THE UPPER USA MOUNTING BRACKET - 6 -
 INSTALLING THE DISPLAY ON THE SUPPORT TUBES - 7 -
 USA ADJUSTMENT - 8 -
 TECHNICAL SPECIFICATIONS - 8 -

Warning Statements

WARNING: PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.

WARNING: THE FLOOR STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST 320 LBS. IF NOT, THE FLOOR STRUCTURE MUST BE REINFORCED. PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN, AS OUTLINED IN THE INSTALLATION INSTRUCTIONS, MUST BE ADHERED TO. FAILURE TO DO SO COULD RESULT IN SERIOUS PERSONAL INJURY, OR EVEN DEATH. THIS MOUNT'S MAXIMUM WEIGHT CAPACITY IS 160 LBS.. IF THIS WEIGHT IS EXCEEDED, DAMAGE TO THE MOUNT AND/OR UNIT MAY OCCUR.

WARNING: SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE ASSEMBLY OF THIS PRODUCT. USE PROPER SAFETY GEAR AND TOOLS FOR THE ASSEMBLY PROCEDURE TO PREVENT PERSONAL INJURY.

WARNING: PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE ASSEMBLY INSTRUCTIONS SHOULD BE READ AND COMPLETELY UNDERSTOOD. THE ASSEMBLY INSTRUCTIONS MUST BE READ TO PREVENT PERSONAL INJURY AND PROPERTY DAMAGE. KEEP THESE ASSEMBLY INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.



Indicates that the power plug is to be disconnected from the power outlet.



Contact Premier Mounts with any questions.



Safety precautions must be taken at all times.



Warning and Caution statements.



Do not install on a structure that is prone to vibration, movement or chance of impact. Failure to do so could result in damage to the plasma display and/or damage to the mounting surface.



Do not install near heater, fireplace, direct sunlight, air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the display and could increase the risk of fire.



At least two qualified people should perform the assembly procedure. Injury and/or damage can result from dropping or mishandling the display.



WARNING WHEN USING THE PSD-BWL OR PSD-BWLb NESTING CART, DO NOT ATTACH EQUIPMENT WEIGHING MORE THAN 75LBS. ABOVE THE 60" MARKED LINE ON THE SUPPORT POLES. DOING SO MAY CAUSE THE NESTING CART TO TIP OVER, RESULTING IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY.



Warranty

Limited Lifetime Warranty

What and Who is Covered by this Limited Warranty and for How Long

Premier Mounts warrants this product to be free from defects in material and workmanship for the lifetime of the original owner of this product. The limited warranty is only valid for the original purchaser of the product.

What Premier Mounts Will Do

At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no extra charge, but you must pay any labor cost.

What is Not Covered; Limitations

Premier Mounts disclaims any liability for damage to mounts, adapters, displays, projectors, other property, or personal injury resulting from, in whole or in part, from improper installation, modification, use or misuse of its products. Premier Mounts disclaims all other warranties express or implied, warranties of merchantability and fitness for a particular purpose. Premier Mounts is not responsible for incidental or consequential damages, including but not limited to, inability to use its products or labor costs for removing and replacing defective products or parts. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

WHAT CUSTOMERS MUST DO FOR LIMITED SERVICE WARRANTY

If you discover a problem that you think may be covered by the warranty you must report it in writing to the address below within thirty (30) days. Proof of Purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchasers name, address, and telephone number. General inquiries may be addressed to Premier Mounts Customer Service Department at 1-800-368-9700. Warranty claims will not be accepted over the phone or by fax.



Premier Mounts
ATTN: Warranty Claim
3130 E. Miraloma Ave.
Anaheim, CA 92806

How State Law Applies

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Parts List*

NOTE: The USA Universal Swivel Arms for carts and stands are shipped with all proper installation hardware and components. Verify parts before beginning installation. If there are parts missing and/or damaged, please stop the installation and contact Premier Mounts (800-368-9700).

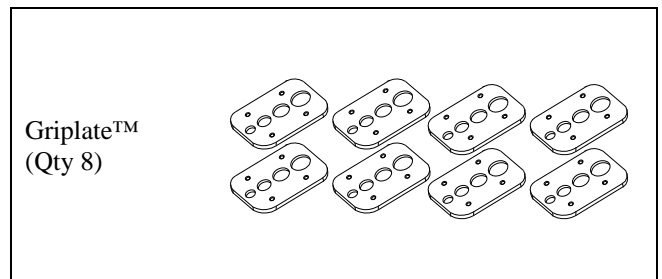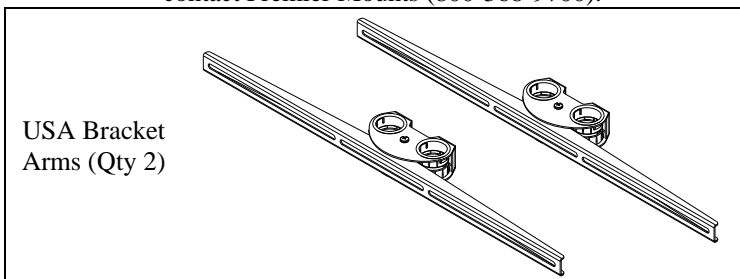

* Parts List is continued on Page 4.


Installation Tools

5/32" Allen Wrench (Supplied)
Level (Supplied)


Thread Depth Indicator (Supplied)



Mounting Hardware

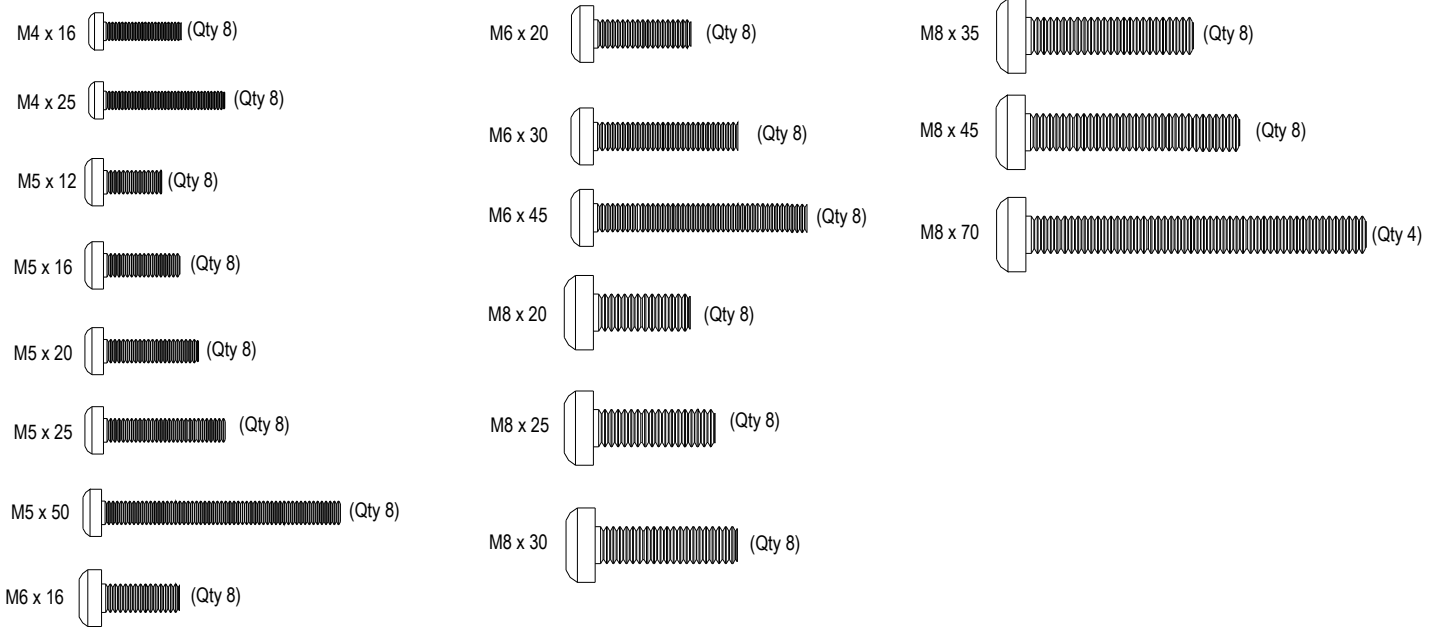

NOTE: The nylon spacers may be stacked to achieve proper spacing.

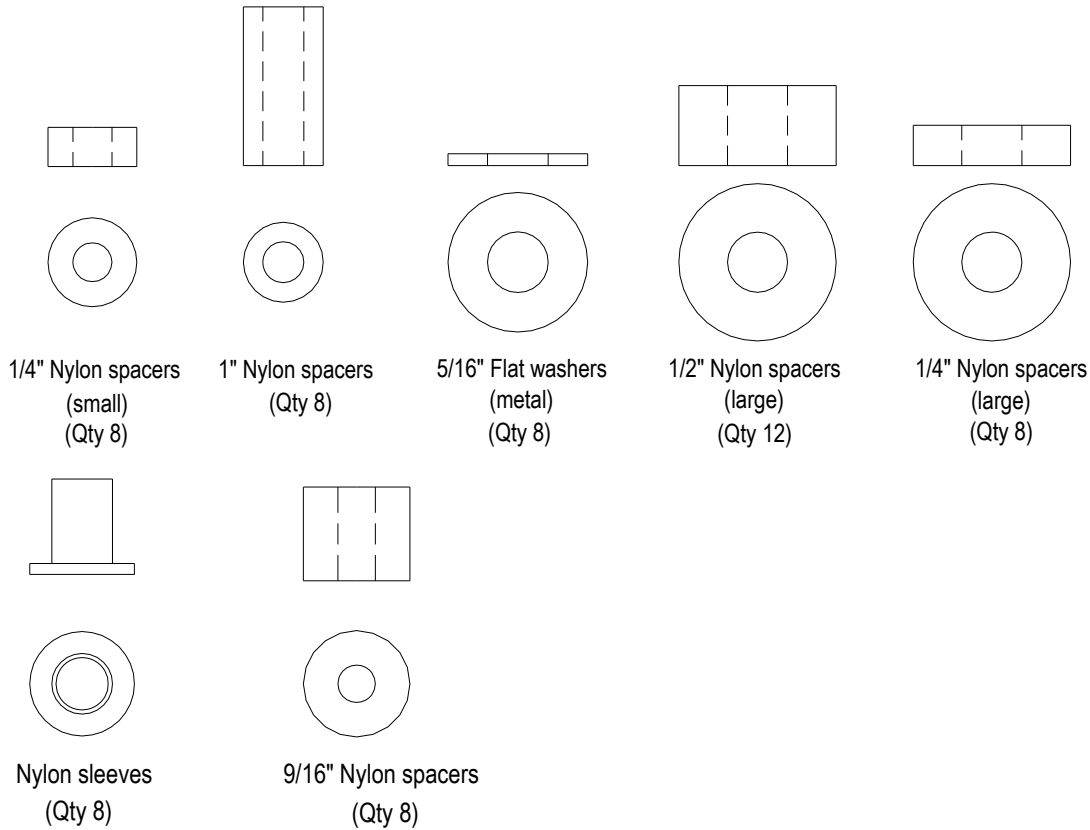



Thread Depth Indicator

1. Insert the thread depth indicator (supplied) through the thread inserts found on the back of the flat panel to make sure the inserts measure the same full depth and mark it (Figure 1).
2. Locate the correct diameter screw for the thread insert. Compare your marking to the screws (supplied).
3. If your selected screw is longer than the marking on the thread depth indicator, **DO NOT USE** this screw.
4. The screw length must not bypass the marking. Select another screw size (Figure 2 and 3), until you find one that comes closest to your mark without going past.

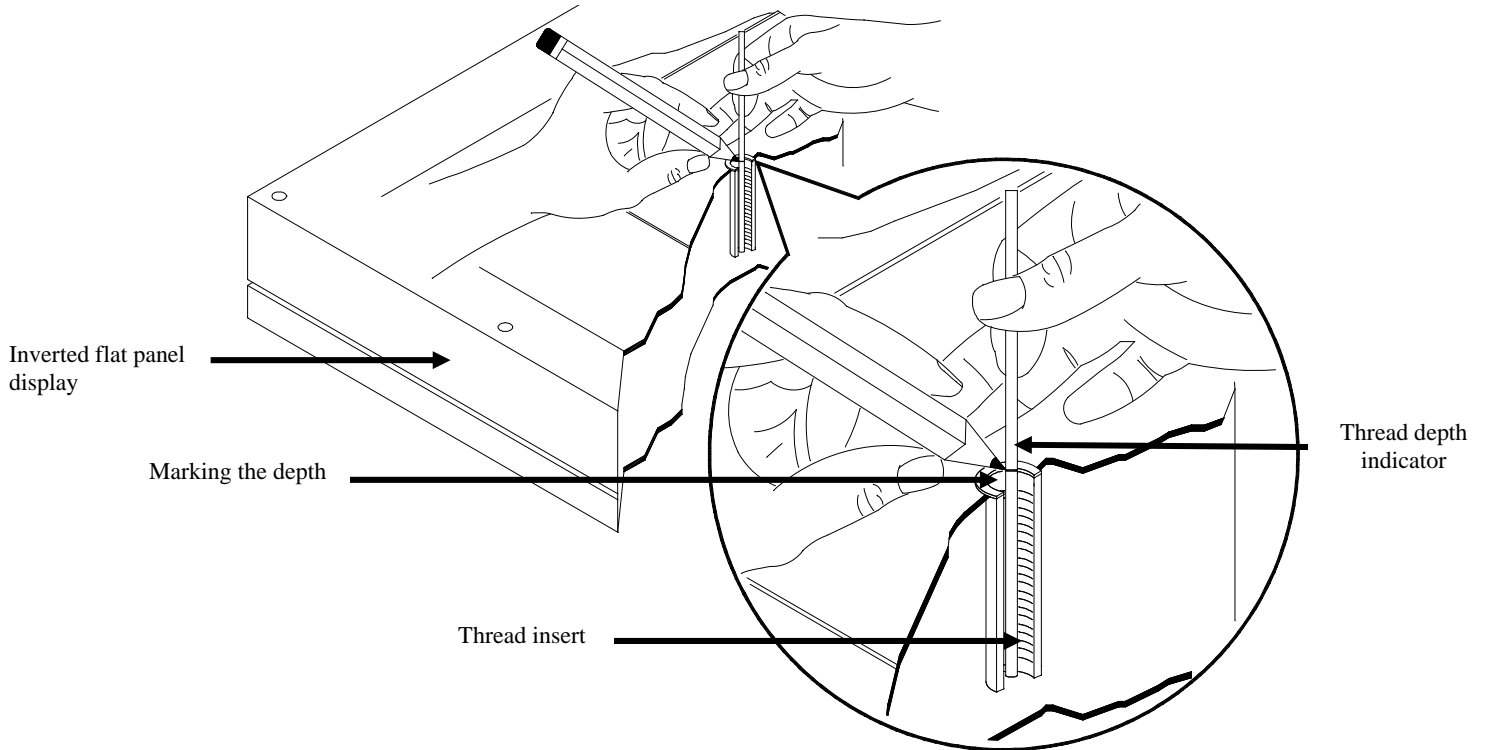


Figure 1

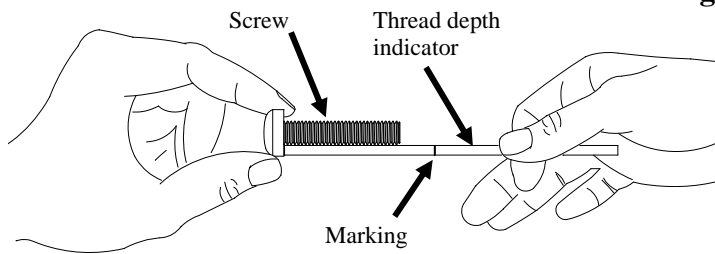


Figure 2

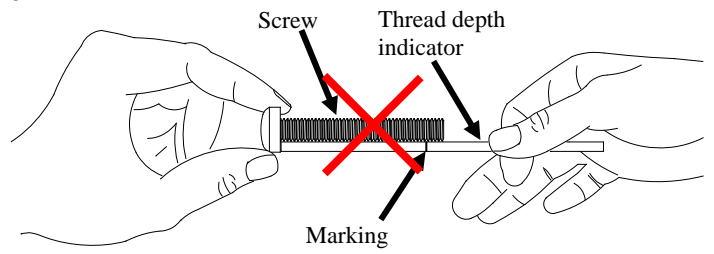



Figure 3



Support Tube Installation

NOTE: Please refer to the base installation instructions for the assembly of the base and the support tubes. The support tubes and base must already be assembled.

NOTE: If the optional shelf has been purchased, the shelf must be attached prior to attaching the USA bracket arms. Please refer to the shelf installation instructions. When working with the shelf, take precautions not to scratch it.

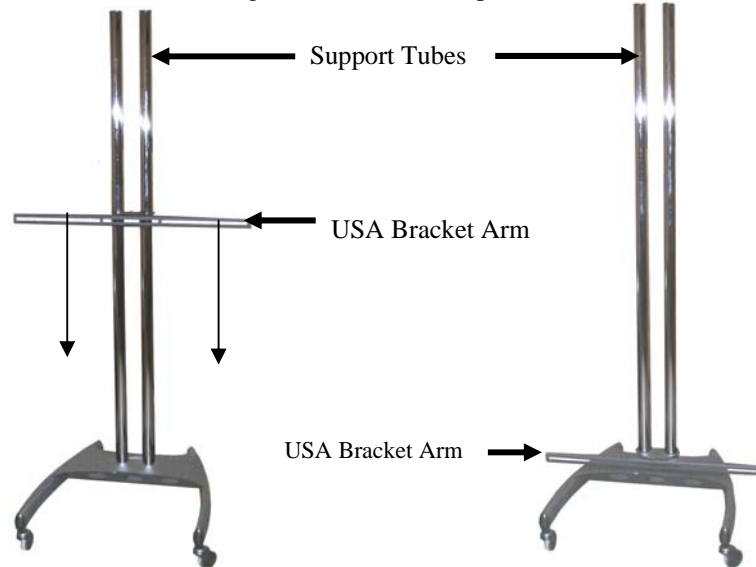


1. Slide one of the USA bracket arms over and down the support tubes. This will be the lower bracket arm.

NOTE: The USA lower mounting bracket can rest on the optional shelf, or base, prior to upper bracket installation.

Attaching the Upper USA Mounting Bracket

1. Place the display on a soft, flat surface. Locate the mounting points that are located on the back of the display.
 2. Once the mounting points are located, place the upper USA mounting bracket over the mounting points.
 3. Center the mounting bracket arm on the back of the display.
- NOTE:** Please refer to 'Thread Depth Indicator Use' on Page 5 to determine the correct hardware.
4. Once the desired position has been determined, place the griplates over each mounting point (flat side down) and secure them using the appropriate hardware (see Page 4). If nylon spacers are needed, place the spacer over the mounting point, between the display and the USA mounting bracket, insert the appropriate hardware and tighten the screw.
 5. At this time, center the USA mounting bracket on the display and tighten the mounting screws.

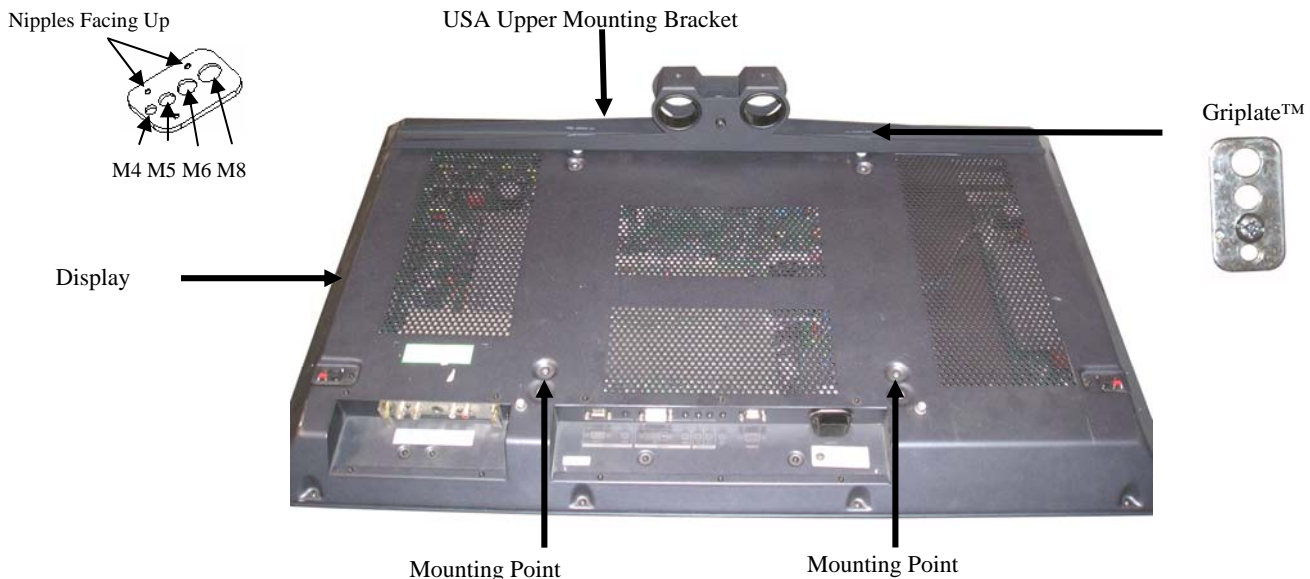




Installing the Display on the Support Tubes



WARNING:

THE FOLLOWING STEPS MUST BE PERFORMED USING THREE PEOPLE. FAILURE TO DO SO WILL RESULT IN PHYSICAL DAMAGE TO THE DISPLAY AND/OR THE PERSONNEL PERFORMING THESE STEPS.

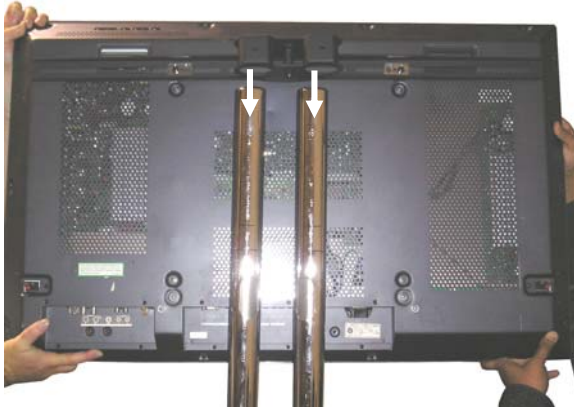



1. Two people, one on each side, must pick up the display.
2. Align the upper USA mounting bracket above the two support tubes and lower the unit down.

NOTE: In some cases, the support tubes will not voluntarily align with the upper USA mounting bracket. In these cases, the third person must squeeze, or spread, the support tubes together. Once the holes and the support tubes are aligned, lower the unit onto the support tubes.




3. After the appropriate height has been determined, use the 5/32" Allen wrench (supplied) to tighten the two set screws on each side of the mounting bracket.

Attaching the Lower USA Mounting Bracket

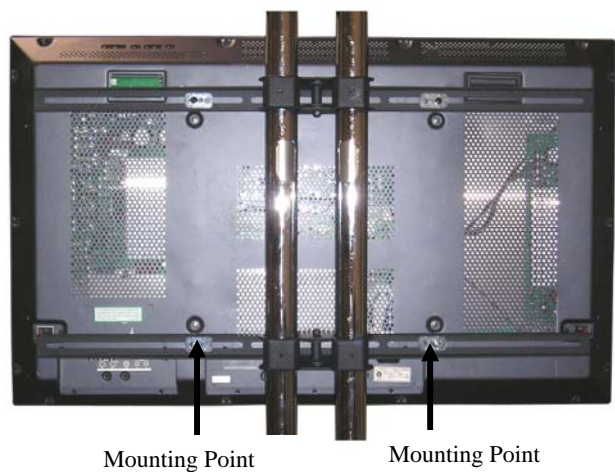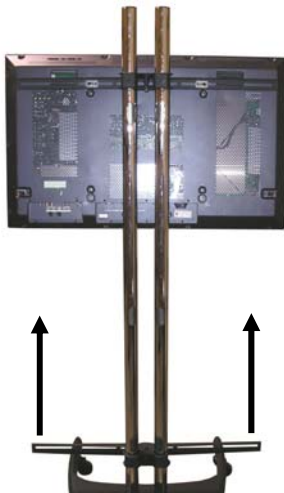

1. Lift the lower USA mounting bracket until it is even with the display.
2. Line up the lower USA mounting bracket with the mounting points that are located on the back of the display.

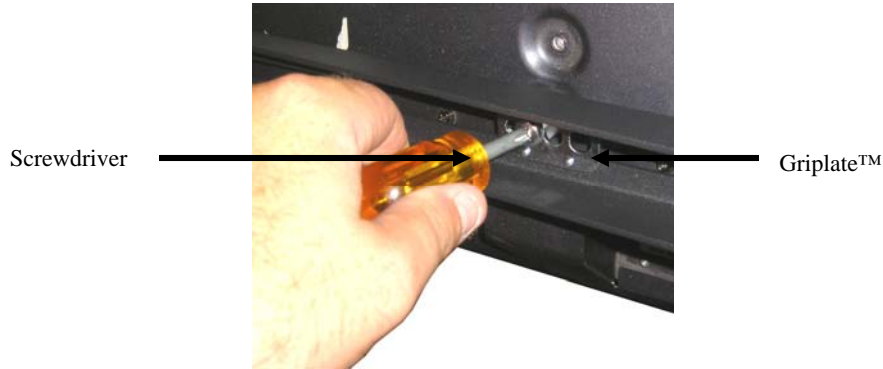

3. Once the mounting points are aligned with the lower USA mounting bracket, place a Griplate™ over each mounting point (flat side down) and secure them using the appropriate hardware (see Page 6).
4. At this time, tighten all hardware.



WARNING: THREE PEOPLE MUST PERFORM THE FOLLOWING STEP; TWO PEOPLE TO HOLD THE DISPLAY, AND ONE TO TIGHTEN/LOOSEN THE SET SCREWS.

5. To adjust the overall height of the unit loosen the set screws located on the upper and lower USA arms. Tighten the set screws down when the adjustment is complete.

USA Adjustment

The USA mounting brackets can swivel up to 15° to the left or 15° to the right by pushing or pulling the display.

CAUTION: WHEN ADJUSTING THE USA MOUNTING BRACKETS, DO NOT APPLY ANY PRESSURE TO THE SURFACE OF THE DISPLAY. ADJUST THE DISPLAY BY PLACING YOUR HANDS ON THE OUTER EDGES OF THE DISPLAY.

Technical Specifications

All measurements are in inches (mm).

