

# C846i C842

## Owner's Manual Addendum

This addendum accompanies the *C842 or C846 Owner's Manual* and describes the changes that have occurred with the introduction of the C846i product.

On the C846i, new labels appear on the display, but do not change the functionality of the unit. The owner's manual uses the words *course* and *course selection*, while the labels display *programs* and *program selection*. To lessen confusion, please remember that wherever you come across the word "course" in the owner's manual, you need to replace it with the word "program."

### OPTIONAL POWER ADAPTER

With the C842 or C846i product, if you choose to purchase the optional power adapter, you must also purchase the internal cable kit. This kit supplies a cable, bracket and fasteners that allow the power adapter to connect to the lower electronics board.

**CAUTION: The internal cable kit requires installation by an authorized service person. Do not attempt installation on your own as you could void the Precor limited warranty.**

If you need assistance, please see *Obtaining Service* in your owner's manual.


**Diagram 1** *Loosen nut to adjust seat tilt.*

Seat

Nut

Wrench

Seat Post

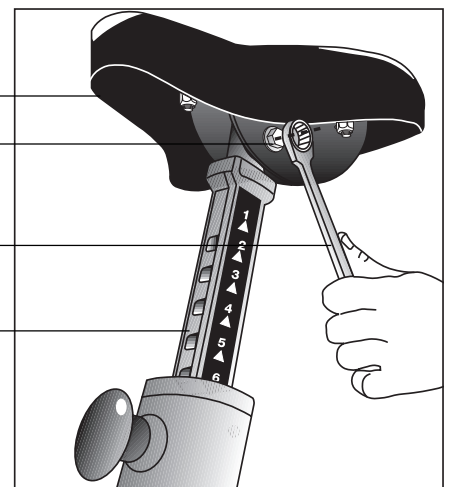

### SEAT ADJUSTMENT

On the C846i and C842, you can adjust the seat tilt by taking the following steps:


1. Loosen the nut beneath the seat using a 17 mm (1<sup>1</sup>/<sub>16</sub>-inch) box-end wrench or crescent wrench. Refer to Diagram 1.

**Diagram 2** *Tilt the seat forward or backward.*

Seat adjustment

Nut

Seat Post

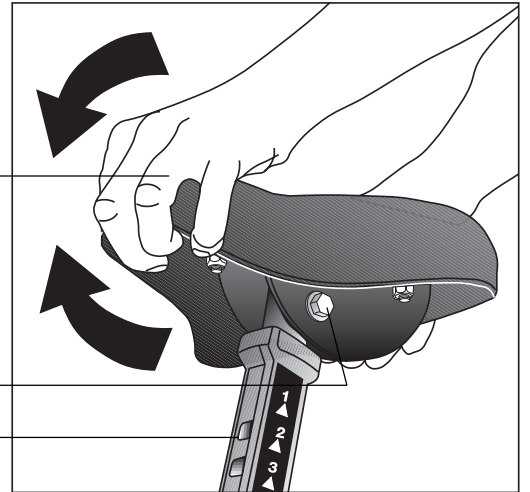

2. Adjust the seat's tilt (forward or back). See Diagram 2.
3. Wrench tighten the nut.
4. Apply pressure to the seat to make sure that it doesn't move. Readjust and retighten the nut, if necessary.