

© Copyright 2013. Black Box Corporation. All rights reserved. Black Box® and the Double Diamond logo are registered trademarks of BB Technologies, Inc. Any third-party trademarks appearing in this manual are acknowledged to be the property of their respective owners. AVSW-DVI8X1, version 2

> FREE! Live, 24/7 Tech Support is just 30 seconds away. 724-746-5500 | blackbox.com

Chapter 1: Specifications/Chapter 2: Overview

1. Specifications

Enclosure — Metal

Maximum Video Resolution — Full HD 1080p (1920 x 1080), WUXGA (1920 x 1200)

Number of DVI Inputs — (8)

Remote Control Support — Yes

Serial Control Support —Yes

User Controls — (1) EDID copy push button, (8) port selection buttons

Connectors — Input: (8) DVI (digital only), (8) audio jacks;

Output: (1) DVI (digital only), (1) audio jack

Indicators — (9) LEDs: (1) dual-color for Power and Video,

(8) LEDs for video input

Power — Consumption: 6.5 W

Size — 1.7"H x 17.1"W x 4.7"D (4.3 x 43.5 x 12 cm)

2. Overview

2.1 Features

- Select (1) DVI + Audio from (8) DVI + Audio sources.
- Control via front-panel push buttons, IR remote control, or serial control. • EDID Copy function ensures optimal screen resolution.
- LED shows the active status of DVI + Audio sources.
- HDTV compatible
- Protects content via HDCP.
- Supports up to Full HD 1080p/1920 x 1200 resolution.
- Compatible with most of the popular screen resolutions to XGA, SXGA, UXGA, WSXGA, Full HD. WUXGA system.

Chapter 4: Operation

4. Operation

LED Indicator

The Power LED turns green when the video switch is powered on. When a video port is selected, its corresponding Port LED turns yellow.

Push Button

Press the corresponding button to select a port.

EDID Setting

In some cases, display problems may occur because of incorrect Extended Display Identification (EDID) communication between the display monitor and the unit. This function allows the system either to read the necessary EDID information from the unit, or to copy EDID from EDID-compliant displays.

Default Setting

To reset to the default EDID:

Step 1: Press and hold the "EDID Copy" button on the unit and release the button RIGHT AFTER the Power LED flashes red (6-7 seconds).

Step 2: The LED lights steady red and green indicating that the EDID default setting is completed.

Copy (New) Monitor EDID

When using a monitor (EDID-compliant) for display, the unit's EDID Copy function will enable EDID communication between the monitor and the unit for optimal video quality. Follow these

Step 1: Power on the unit.

Step 2: Connect the EDID-compliant monitor to the switch and power on the monitor.

Step 3: Press the "EDID Copy" button for 3–5 seconds, and release the button RIGHT AFTER the Power LED flashes green

Step 4: The Power LED flashes red and green alternately, then lights green indicating that the copy is successful.

NOTE: If the Power LED flashes red, the reason could be:

- 1 The monitor is not connected
- 2. The monitor is not powered on.
- 3. The EDID data of the monitor is not applicable.

AVSW-DVI4X1

724-746-5500 | blackbox.com

Page 5

Chapter 2: Overview

2.2 What's Included

8 x 1 DVI and Audio Switch (AVSW-DVI8X1s):

- Video switch
- Rear bracket
- Screw kit
- Foot pad
- IR remote controller
- Power supply and power cord
- This user manual

Optional:

• Audio cable

2.3 Hardware Description

Figure 2-1 shows the front and back panels of the AVSW-DVI8X1. Table 2-1 describes its components

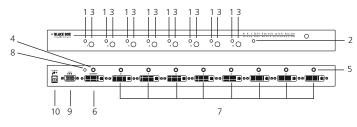


Figure 2-1. 8X1 DVI and Audio switch front and back panels.

Chapter 5: IR Remote Control/Chapter 6: Serial Control

5. IR Remote Control

The remote control operates within a 1.5-ft. (5-m) range of the DVI switch. To select a source device with a remote control, press the number button (1–8) to directly switch to the corresponding port.

NOTES:

- 1. Remove the battery protector on the remote control before operation.
- 2. On the remote control, only buttons 1–8 are activated. The rest of the buttons are reserved for other models



Figure 5-1. Remote control

6. Serial Control

The DVI and audio switches' built in serial interface enables users to control the switch via a PC, serial controller devices, or home theater system. The controller's serial port should be configured as shown in Table 6-1

Table 6-1. Serial parameters settings.

Parameter	Setting
Baud Rate	9600
Data Bits	8
Parity	None
Stop Bits	1
Flow Control	None

To select a source device via serial interface, select the number that corresponds to the port. For example, send "1" to switch to Port 1.

AVSW-DVI4X1

Number in

Fig. 2-1

724-746-5500 | blackbox.com

Component

(8) Input LED indicators

(1) Power LED indicator

(8) Audio ports (Input)

(8) Video ports (Input)

EDID Copy button

Serial port

Power supply

(8) Push buttons

Chapter 2: Overview

Table 2-1. 8X1 DVI and Audio switch components.

(1) Audio port (Output) Connects to a speaker.

(1) Video port (Output) Connects to a display

Description

On Yellow when port 1–8 is selected.

On Green when power to the unit is on

Off when port 1–8 is not selected.

Off when power to the unit is off

Press buttons 1-8 to select a port.

Connect to audio sources 1-8.

Connect to video sources 1-8.

Connects to a computer for serial control.

Copy a monitor's FDID

Applies power to the unit

Page 6

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500) FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746 Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018 Web site: www.blackbox.com • E-mail: info@blackbox.com

Chapter 3: Installation

3. Installation

Support

- Before installation, power off all devices that will be connected to this system.
- Make sure that all devices you will connect are properly grounded.
- Place cables away from fluorescent lights, air conditioners, and machines that are likely to generate electrical noise

NOTE: If no screen displays, follow these steps:

- 1. Make sure the device cables are correctly and firmly attached.
- 2. Set your display device's input source as DVI.
- 3. Check the PC BIOS configuration for the video output settings.
- Installation Steps
- switch. Plug a set of audio jacks from the speaker to the switch's speaker port.
- Use an audio cable to connect the speaker port from the input side of the switch to the corresponding output port on the source device.

- 5. If necessary, apply EDID Copy process to the unit.
- NOTE: When each video source is powered on, make sure it has a display pointing to it for EDID communication. If a source does not have a display pointing to it, a video image might not



4. Connect your computer to the display DIRECTLY to check if the video signal gets through. 1. Use a video cable (DVI) to connect the display to the video output port on the back of the 2. Use a video cable (DVI) to connect the source device to the video input port on the switch. 3. Plug the power supply into the switch and power on the switch. 4. Turn on the display (monitor, projector, or TV) and then power on the source device(s).

10