


American DJ® User Instructions


DR. DMX DMX TESTER

SPECIFICATIONS:

- DMX512 output
- 12 Channel memory
- Auto power off w data protection
- Battery or ac adaptor
- Battery power indicator
- Fader for flash control

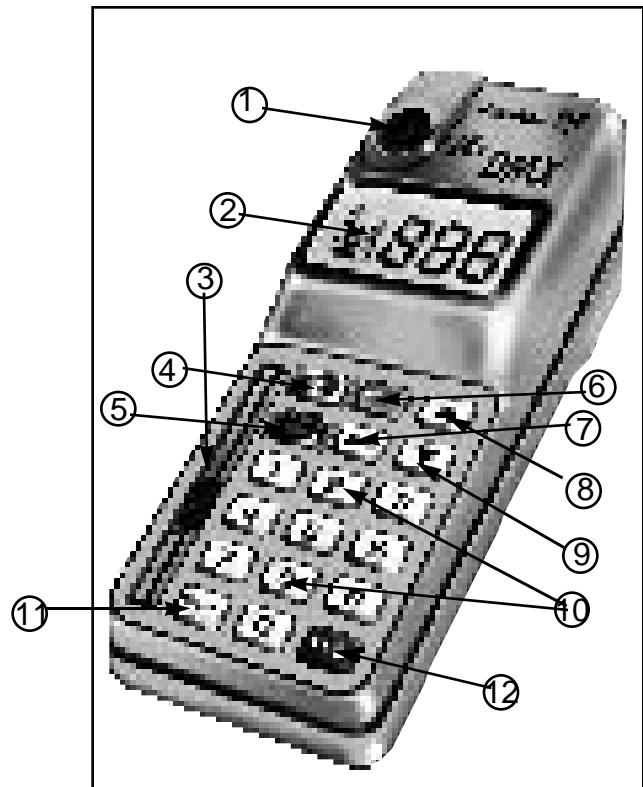

1. Laser pointer switch
2. LCD display
3. Fader slide
4. Power on / off key
5. IR on / off key
6. Hold key
7. Clear key
8. Up key
9. Down key
10. Number keys (0-9)
11. Flash key
12. Yes key

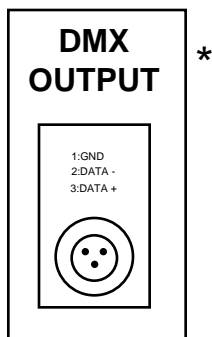

* Make sure of DMX polarity of your unit .
Smartec Intelligent lighting is opposite polarity

OPERATING INSTRUCTIONS

Make sure fresh batteries are in unit or a proper type ac adapter is used.

1. Press and hold POWER key (**Fig. 4**) for 1 sec. LCD will come on.

2. Select DMX channel of unit to be tested (e.g. if you need channel 16 press number key 1 & 6 (**Fig. 10**)) then press YES key (**Fig. 12**) for conformation.

3. Adjust FADER SLIDE (**Fig. 3**) or press FLASH key (**Fig, 11**) (The FLASH key is the same as maximum position on the FADER SLIDE).

If you pressed the wrong number and pressed the YES key, you can delete the wrong number. Enter the number you want to delete then press clear to delete that number

4. If you need more than one channel activated (e.g. you want to see the color wheel selection so you need the shutter open and the lamp on) Select the shutter channel (step 2