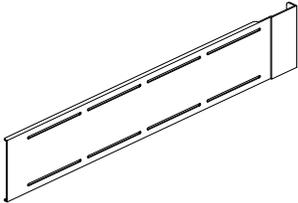
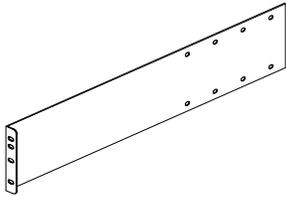
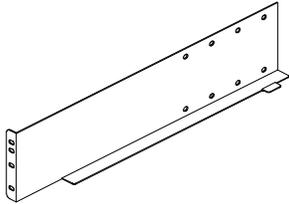
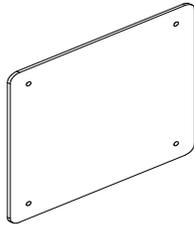


T3 Rack Mount Kit

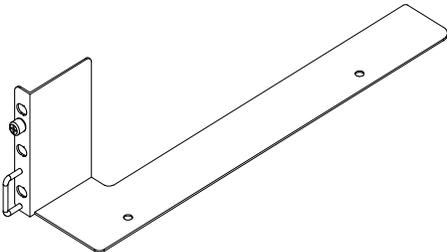
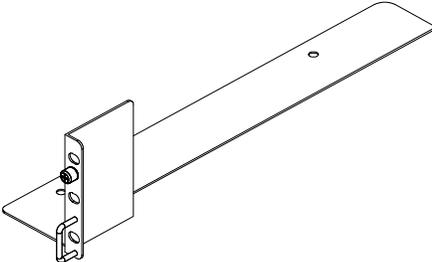
Installation Instructions
for the Sun Microsystems StorEdge T3 Array

T3-R19-H

Kit Contents

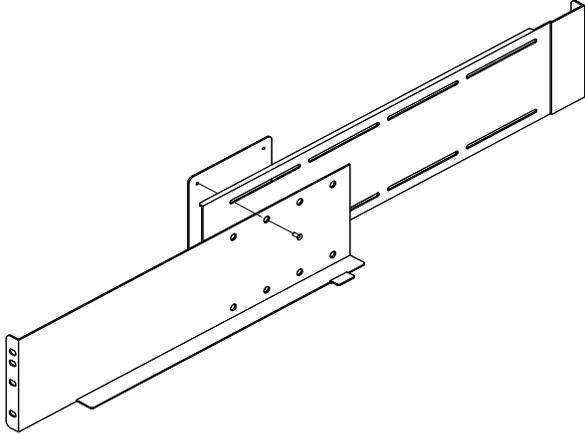
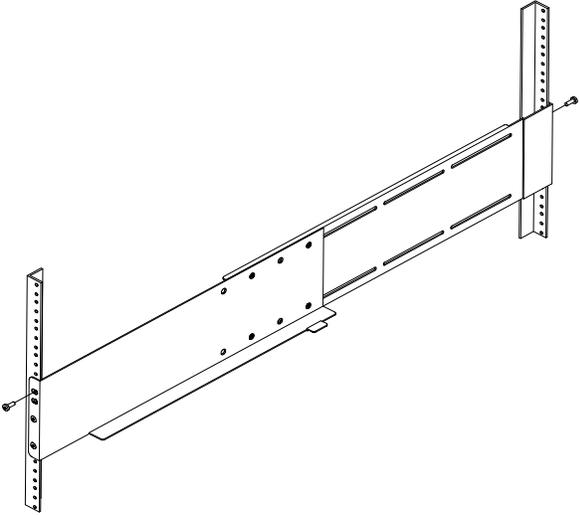
List #	Part #	Part Name	Quantity	Detail
1	SH03001	Rear Mounting Bracket	2	
2	SH03002	Right Front Mounting Bracket	1	
3	SH03003	Left Front Mounting Bracket	1	
4	SH03004	Back Plate	2	

T3 Rack Mount Kit Installation Instructions

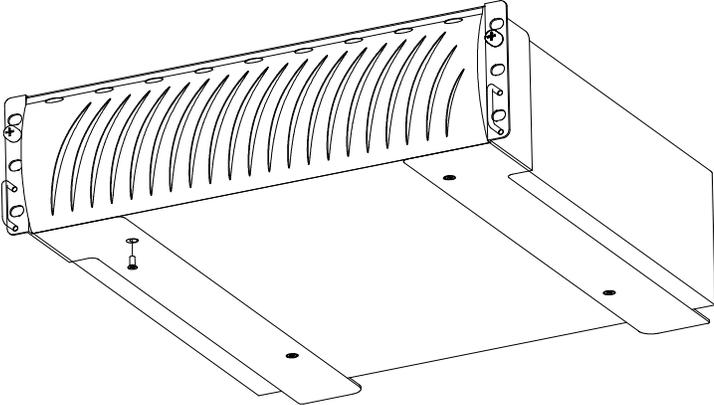
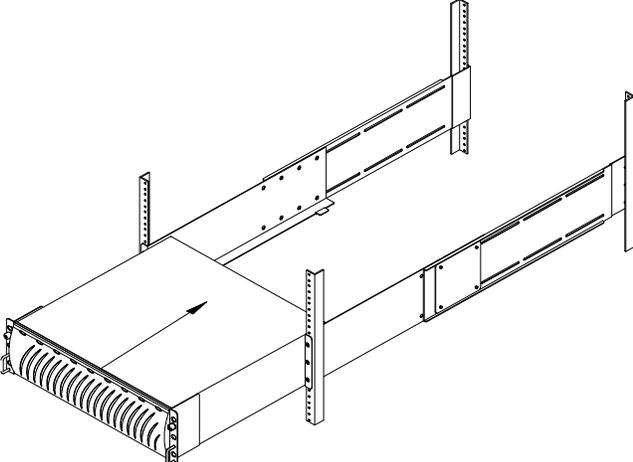
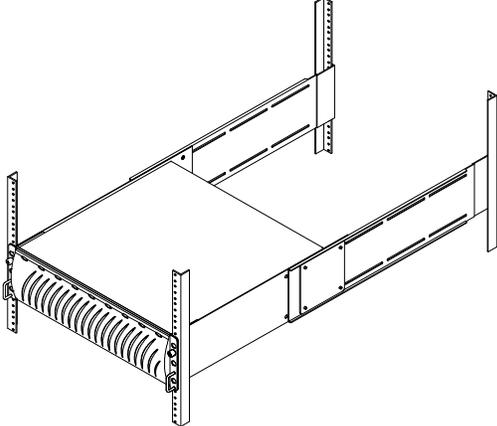
List #	Part #	Part Name	Quantity	Detail
5	SH03005	Left Chassis Mount	1	
6	SH03006	Right Chassis Mount	1	
7	SH03007	Hardware Packet <ul style="list-style-type: none"> • 8-32 x 3/8" Flathead Screw (9) • 10-32 x 1/4" Flathead Screw (5) • 10-32 x 1/2" Panhead Screw (14) <p>Note: The T3 hardware packet contains some extra screws and nuts.</p>	1	

T3 Rack Mount Kit Installation Instructions

Installation Instructions

Step	Detail
<p>1. Measure the distance from the front rack rail to the rear rack rail.</p> <p>Distance = _____</p> <p>2. Assemble the left front mounting bracket, rear mounting bracket, and back plate in the order as shown. Set the front and rear mounting brackets at the distance measured in step 1.</p> <p>3. Secure the left front mounting bracket and rear mounting bracket to the back plate using four 8-32 x 3/8-inch flat head screws.</p> <p>Note: Do not tighten the back plate screws at this point.</p> <p>4. Repeat steps 1 through 3 to assemble the right front mounting bracket, rear mounting bracket, and back plate.</p>	 <p>The diagram illustrates the assembly of the mounting brackets and back plate. It shows a long, narrow metal rail with a front flange and a rear flange. A back plate is being attached to the rear flange. Two mounting brackets are being positioned on the rail, one near the front flange and one near the rear flange. The back plate is secured to the rail with four screws, two on each side. The mounting brackets are also secured to the back plate with screws.</p>
<p>5. Install the left front mounting bracket, rear mounting bracket, and back plate (assembled in step 2) in the left side of the rack enclosure.</p> <p>Note: Make sure that the mounting flange on the front mounting bracket is on the bottom.</p> <ul style="list-style-type: none">• Attach the front mounting bracket to the front left rack rail using three 10-32 x 1/2-inch pan head screws. Use the first, third, and fourth screw holes on the front mounting bracket.• Attach the rear mounting bracket to the rear left rack rail using three 10-32 x 1/2-inch pan head screws. <p>6. Once the assembly is secure in the rack enclosure, tighten the back plate screws (the screws installed in step 3).</p> <p>7. Repeat steps 5 and 6 to install the right front mounting bracket, rear mounting bracket, and back plate in the right side of the rack enclosure.</p>	 <p>The diagram shows the assembly from the previous step being installed into a rack enclosure. The assembly is being inserted into a slot in the enclosure. The front mounting bracket is being attached to the front rail of the enclosure, and the rear mounting bracket is being attached to the rear rail. The back plate is being secured to the rear rail. The diagram shows the assembly being inserted from the left side of the enclosure.</p>

T3 Rack Mount Kit Installation Instructions

Step	Detail
<p>8. Remove the feet from the bottom of the StorEdge T3 array.</p> <p>9. Install the left mounting chassis on the bottom left side of the T3 array and secure with two 10-32 x 1/4-inch flat head screws.</p> <p>10. Install the right mounting chassis on the bottom right side of the T3 array and secure with two 10-32 x 1/4-inch flat head screws.</p>	 <p>The diagram shows a perspective view of the StorEdge T3 array. Two metal mounting chassis are being attached to the bottom left and right sides of the array. The chassis are secured with screws. The array has a ribbed front panel and a flat top surface.</p>
<p>11. Install the T3 array in the rack enclosure.</p> <ul style="list-style-type: none">• Approach the rack enclosure with the rear of the array facing the rack enclosure.• Make sure that the array is resting on top of the mounting flange on the left front mounting bracket.• Slide the array all the way into the rack enclosure until it stops.	 <p>The diagram shows a perspective view of the rack enclosure. The T3 array is being inserted into the enclosure. The array is resting on top of the mounting flange on the left front mounting bracket. The array is being pushed into the enclosure until it stops.</p>
<p>12. Secure the T3 array in the rack enclosure by tightening the two thumbscrews on the left and right chassis mounts.</p>	 <p>The diagram shows a perspective view of the rack enclosure. The T3 array is now secured in the enclosure. The array is resting on top of the mounting flange on the left front mounting bracket. The array is secured by tightening the two thumbscrews on the left and right chassis mounts.</p>

Warranty

LIMITED WARRANTY AND WARRANTY DISCLAIMER - Seller warrants that the System will be free from defects in materials and workmanship for a period of one (1) year from date of delivery to customer premises. Seller's sole liability and Customer's sole and exclusive remedy for any breach of this warranty is, at Seller's option and expense, to repair or replace any defective System that is returned to it by Customer. Seller will have no obligation under this section to the extent any defect in the System is caused by or is attributable to negligence, accident, misuse, abuse, use of the System than in accordance with Seller's documentation or user manual, modifications, alterations or repairs to the System made by a party other than Seller, or actions of third parties or like events outside Seller's reasonable control. EXCEPT AS EXPRESSLY SET FORTH IN THIS SECTION, TO THE EXTENT PERMITTED BY APPLICABLE LAW, SELLER DISCLAIMS ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUALITY, OR NONINFRINGEMENT, AND ANY WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE.

LIMITATIONS OF LIABILITY - IN NO EVENT WILL SELLER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, LOST PROFITS OR REVENUE, LOSS OF USE, LOST BUSINESS OPPORTUNITIES OR LOSS OF GOODWILL), OR FOR THE COSTS OF PROCURING SUBSTITUTE PRODUCTS, ARISING OUT OF OR IN CONNECTION WITH THESE TERMS OF SALE OR THE USE OF THE SYSTEM, WHETHER SUCH LIABILITY ARISES FROM ANY CLAIM BASED UPON CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, WHETHER OR NOT SELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. IN NO EVENT WILL SELLER'S TOTAL CUMULATIVE LIABILITY, FROM ALL CAUSES OF ACTION AND ALL THEORIES OF LIABILITY, EXCEED THE TOTAL AMOUNTS ACTUALLY PAID TO SELLER BY CUSTOMER UNDER THE ORDER THAT GIVES RISE TO ANY LIABILITY HEREUNDER.