




1

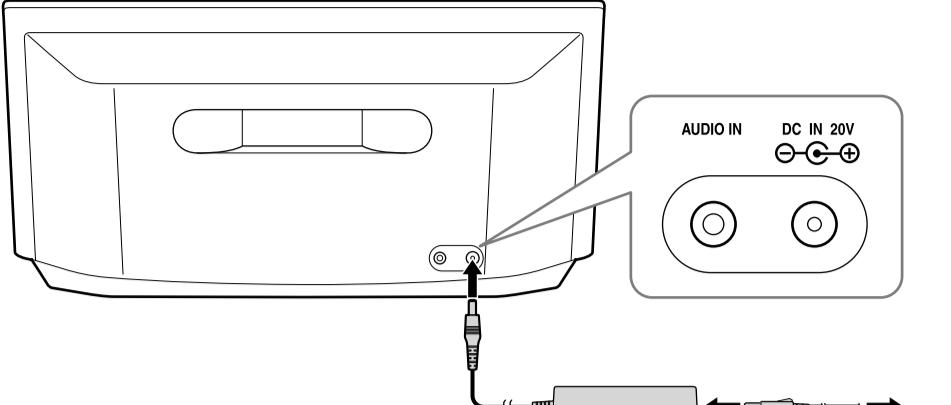




2

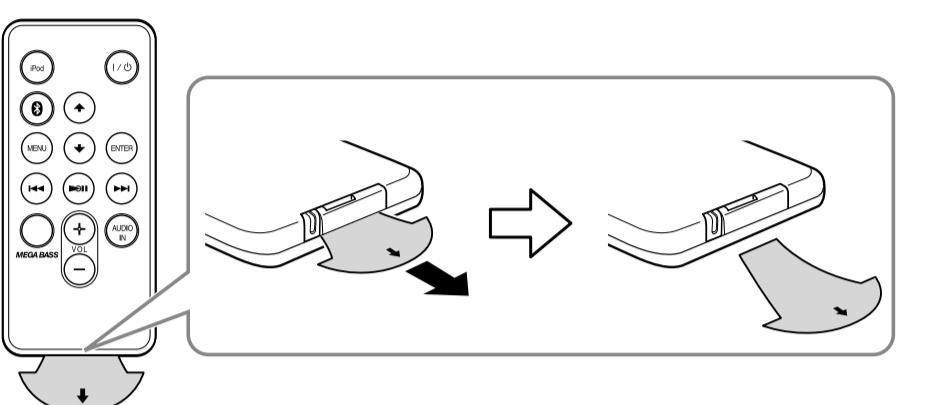

3

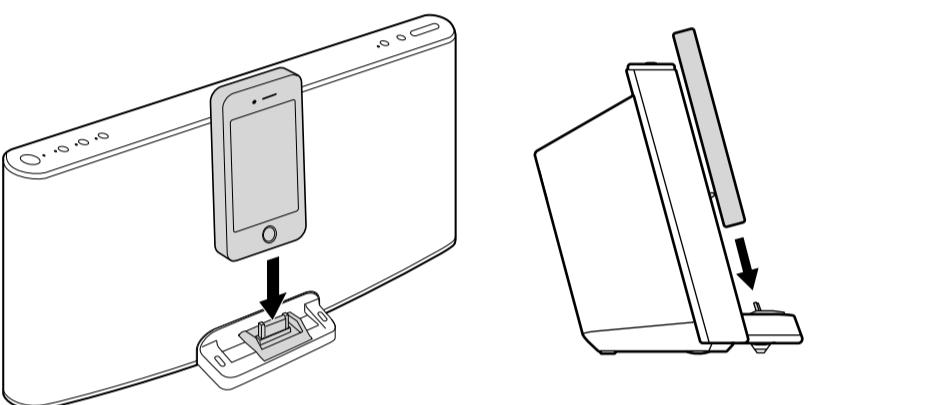


4

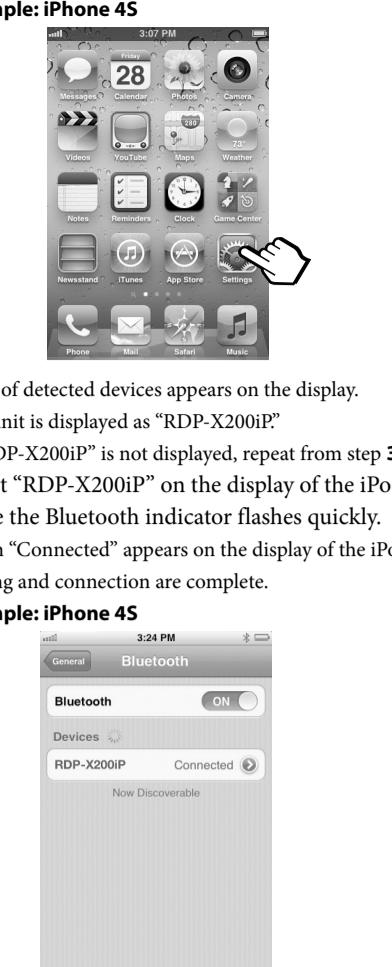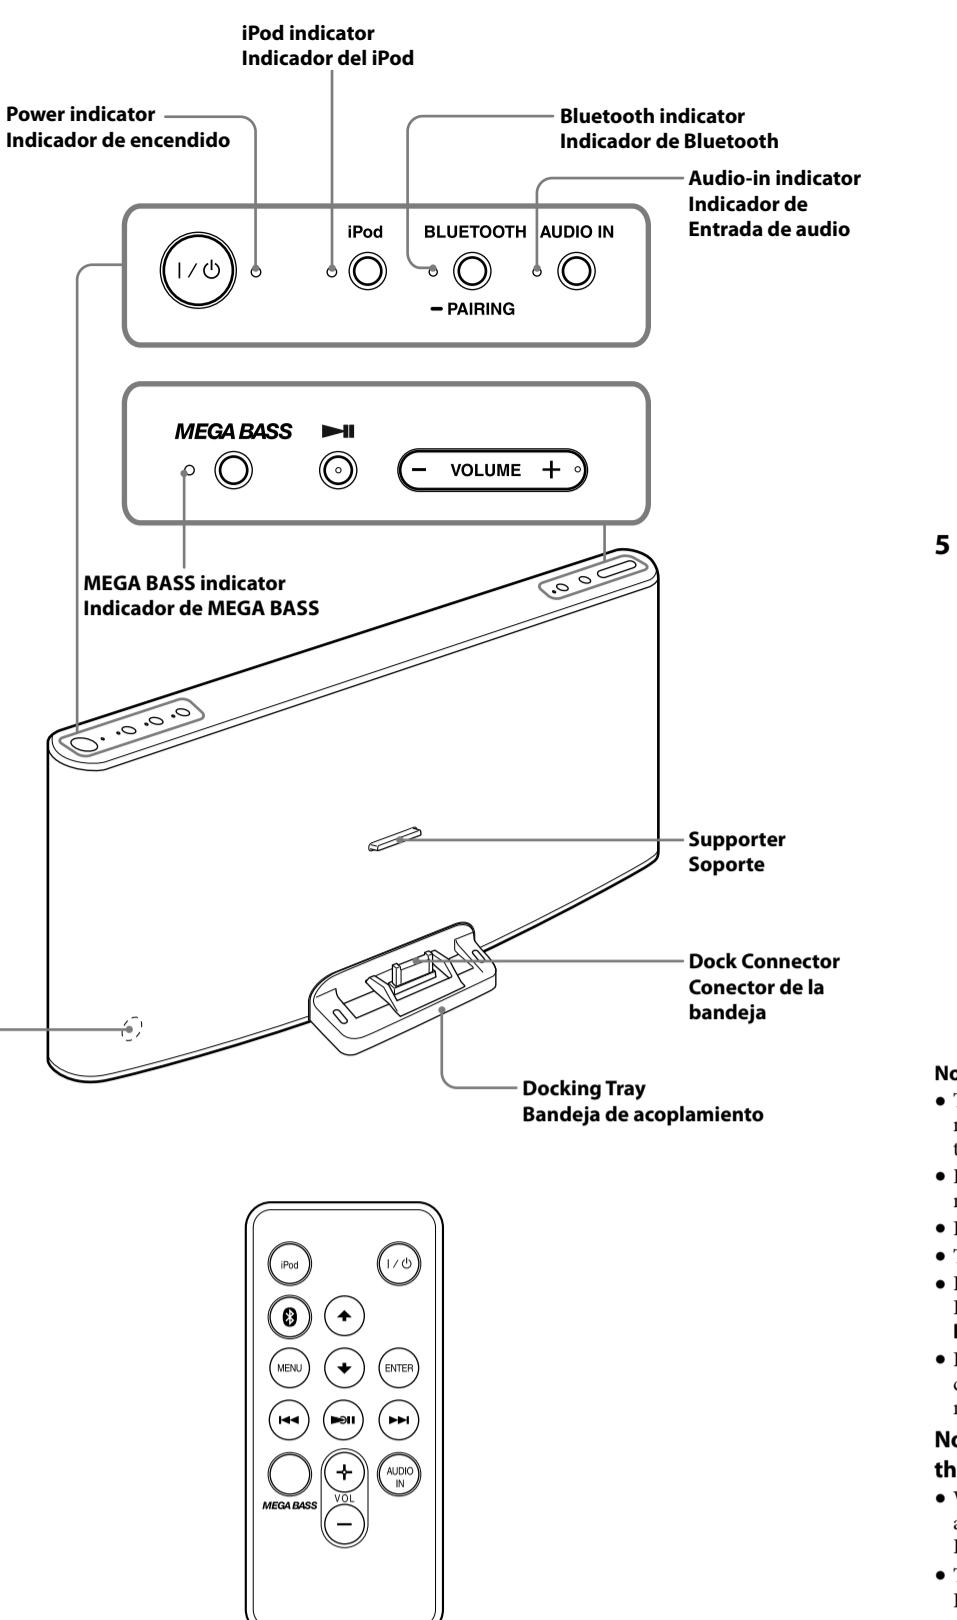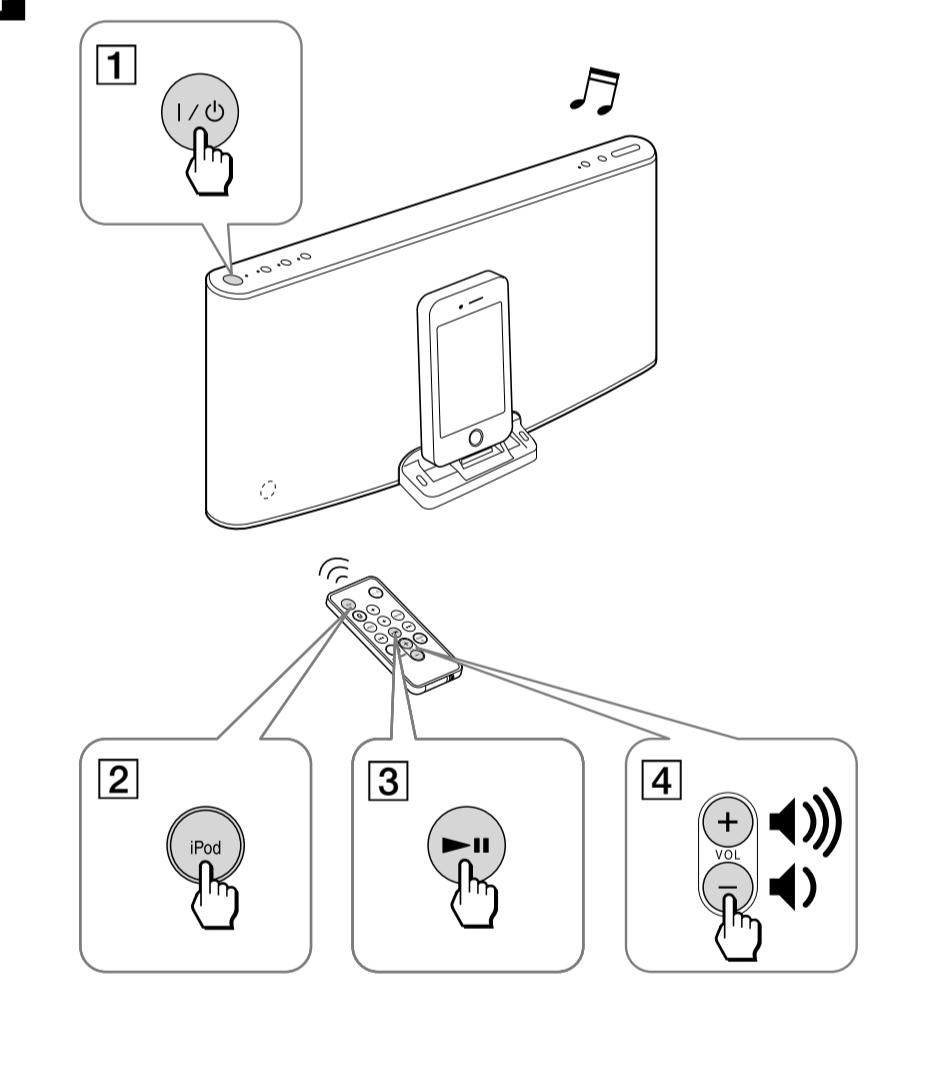

- You can set up to 10 alarms, using songs in iPod or Preset Sound in D-Sappli for the alarm sound.
- Music Play Timer allows you to play/pause desired music at a desired time. Sleep Timer allows you to specify a time at which to stop music playback. Alarm, Music Play Timer and Sleep Timer work in combination with the power indicator.
- When connected to the unit, the following functions are available only when D-Sappli is activated.
- D-Sappli also includes a clock display enlarge feature.
- If the App to link with this unit is not downloaded to the iPod touch/iPhone/iPad, a pop-up message prompting you to download D-Sappli may appear repeatedly. Deactivate the App's link function to stop the pop-up message.
- To deactivate the App's link function: Connect the AC adapter, and then press I/O to turn off the unit. Remove the iPod touch/iPhone/iPad from the Dock Connector. While holding down PAIRING, also press and hold I/O on the unit for at least 2 seconds. (The power indicator flashes twice when deactivated.)
- To re-activate the App's link function, repeat the above steps. (The power indicator flashes once when activated.)

Example: iPhone 4S

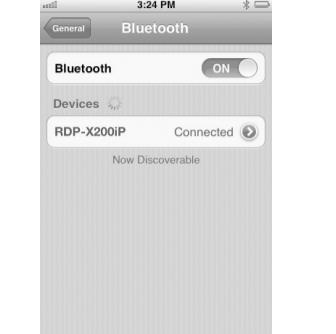

Notes

- The operation and display may differ depending on the model of iPod and/or software version. For details, refer to the user's guide of the iPod.
- Pairing mode is canceled after about 5 minutes. If pairing mode is canceled halfway, start over from step 3.
- If pairing is not complete, start over from step 3.
- To pair with another iPod, repeat steps 1 to 5.
- In step 3, if a double-beep sound is not heard or the Bluetooth indicator does not flash quickly, press and hold PAIRING (③ on the remote) again.
- If you turn off the unit or the iPod before the Bluetooth connection is complete, pairing information will not be saved, and pairing will not be completed.

Notes on pairing with a Bluetooth device other than iPod

- When pairing with a Bluetooth device other than iPod, after step 3, pass code input may be required in your Bluetooth device. In this case, input "0000".
- The operation and display may differ depending on the Bluetooth device and/or software version. For details, refer to the user's guide of the Bluetooth device.

To listen to sound

Keep the iPod and the unit within 10 meters (about 30 ft) of each other for this operation.

Check the following before operating the unit.

- The Bluetooth function of the iPod is on.

- Pairing of the unit and the iPod is complete. If pairing is not completed, perform pairing again. (See "To pair with an iPod".)

- Press I/O.

- 2 Press BLUETOOTH (③ on the remote) to turn on the Bluetooth function.

The last connected iPod will be reconnected automatically when the Bluetooth function is turned on.

- 3 Select your desired music, video, game, etc., to play on the iPod. For details, refer to the user's guide of the iPod.

Tips

- If the last connected iPod does not reconnect automatically, press BLUETOOTH (③ on the remote). If it still does not reconnect, select the model name of this unit from the iPod. (Perform steps 4 to 5 in "To pair with an iPod".)
- To connect an alternative iPod, which has previously been paired with this unit, press BLUETOOTH (③ on the remote) to disconnect the currently connected iPod. Then select the model name of the unit from the alternative iPod you want to connect.
- You can charge the iPod on the dock while listening to music via Bluetooth connection.
- If the volume level is low, adjust the volume of the Bluetooth device.

To finish listening

Terminate the Bluetooth connection by any of the following operations.

- Turn off the unit.
- Turn off the iPod.
- Press BLUETOOTH (③ on the remote), iPod, or AUDIO

- Operate the iPod to terminate the connection. For details, refer to the user's guide of the iPod.

To remove the iPod

For details, see "How to handle an iPod".

To charge an iPod

You can use the unit as a battery charger for an iPod. Charging begins when the iPod is connected to the unit. The charging status appears in the display on the iPod. For details, refer to the user's guide of the iPod.

To clear the list of models already-paired and memorized in the unit

- 1 Press I/O.

- 2 Press BLUETOOTH (③ on the remote) to turn on the Bluetooth function.

- 3 Press and hold BLUETOOTH and VOLUME + on the unit at the same time.

The MEGA BASS indicator flashes.

Notes

- You can perform step 3 to clear the list even during Bluetooth connection.
- This operation cannot be performed when the unit is pairing.

- To pair with this unit again, delete the model name of this unit from the iPod and perform pairing again. (See "To pair with an iPod".)

Connecting optional components

You can enjoy the sound from an optional component, such as a portable digital music player, through the speakers of this unit. Be sure to turn off the power of each component before making any connections.

- 1 Firmly connect the line output jack of the portable digital music player (or other component) to the AUDIO IN jack on the back of the unit, using a suitable audio connecting cable (not supplied).

- 2 Press I/O to turn on the unit.

- 3 Press AUDIO IN to activate the Audio-in function.

The Audio-in indicator lights up.

- 4 Play the connected component.

The sound from the connected component is output from the speakers of this unit.

Notes

- The necessary type of audio connecting cable depends on the optional component. Be sure to use the correct type of cable.

- If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the connected component.

Other useful functions

Reinforcing the bass sound

Press MEGA BASS. The MEGA BASS indicator lights up. To return to normal sound, press the button again.

About App

A dedicated Dock App for iPod touch/iPhone/iPad available at Apple App Store. Search for "D-Sappli" and download the free App to find out more about the functions.

D-Sappli includes various timer functions: Alarm, Music Play Timer and Sleep Timer.

- You can set up to 10 alarms, using songs in iPod or Preset Sound in D-Sappli for the alarm sound.

Music Play Timer allows you to play/pause desired music at a desired time. Sleep Timer allows you to specify a time at which to stop music playback. Alarm, Music Play Timer and Sleep Timer work in combination with the power indicator.

When connected to the unit, the following functions are available only when D-Sappli is activated.

D-Sappli also includes a clock display enlarge feature.

- If the App to link with this unit is not downloaded to the iPod touch/iPhone/iPad, a pop-up message prompting you to download D-Sappli may appear repeatedly. Deactivate the App's link function to stop the pop-up message.

- To deactivate the App's link function: Connect the AC adapter, and then press I/O to turn off the unit. Remove the iPod touch/iPhone/iPad from the Dock Connector. While holding down PAIRING, also press and hold I/O on the unit for at least 2 seconds. (The power indicator flashes twice when deactivated.)


- To re-activate the App's link function, repeat the above steps. (The power indicator flashes once when activated.)

Español


Operaciones

Cómo manejar un iPod

Para colocar un iPod

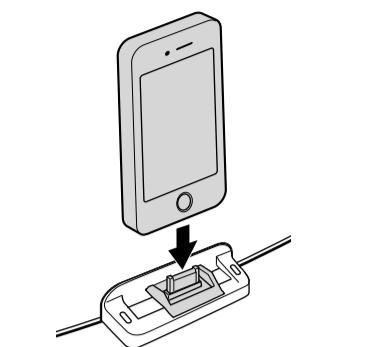

Para extraer un iPod

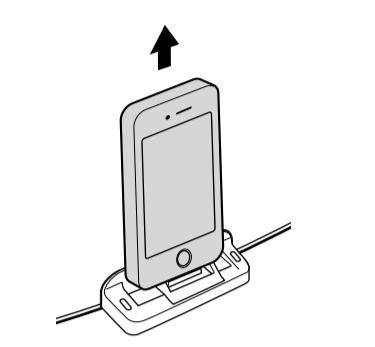

Para asociar a un iPod

Mantenga el iPod y la unidad a una distancia de 1 metro (3 pies) uno del otro para esta operación.

- Pulse I/O.
- Pulse BLUETOOTH (③ en el control remoto) para encender la función Bluetooth cuando el indicador de Bluetooth esté apagado.
- El indicador de Bluetooth parpadea lentamente.

- Mantenga presionado BLUETOOTH (③ en el control remoto).
- Cuando se inicie la asociación, escuchará un sonido de dos tonos y el indicador de Bluetooth parpadea rápidamente.

- El modo de asociación de la unidad está activado.

Notas

- El tipo de cable de conexión de audio requerido depende del dispositivo opcional. Asegúrese de utilizar el cable correcto.
- Si el nivel del volumen es bajo, ajuste primero el volumen de la unidad. Si el volumen sigue siendo demasiado bajo, entonces ajuste el volumen del componente conectado.

Otras funciones útiles

Refuerzo de los sonidos graves

Pulse MEGA BASS. El indicador MEGA BASS se enciende. Para volver al sonido normal, pulse el botón de nuevo.

Para encender/apagar la unidad

Pulse I/O (Encendido/En espera).

El indicador de alimentación se ilumina al encender la unidad.

Ajuste del volumen

Pulse VOLUME +/- (VOL +/- en el control remoto).

Sugerencia

- El botón de encendido parpadea tres veces en verde cuando el sonido se ajusta en el volumen máximo o mínimo.

Manejo de un iPod en la bandeja

- Coloque el iPod en el conector de la bandeja.

El conector de la bandeja puede inclinarse un poco.

Para más detalles, consulte "Cómo manejar un iPod".

- 2 Pulse I/O.

- 3 Presione iPod para activar la función para iPod. Se enciende el indicador del iPod.

- 4 Pulse II.

El iPod comienza la reproducción.

Si el iPod no comienza la reproducción, opere directamente desde el iPod.

Puede utilizar el iPod conectado mediante los botones de la unidad o del propio iPod.

Para escuchar el sonido

Mantenga el iPod y la unidad a una distancia de 10 metros (cerca de 30 pies) uno del otro para esta operación.

Antes de operar la unidad, compruebe lo siguiente.

- La función Bluetooth del iPod está encendida.

- Si la asociación entre la unidad y el iPod se ha completado. Si la asociación no se completa, repita el proceso. (Consulte "Para asociar a un iPod".)

- 1 Pulse I/O.

- 2 Pulse BLUETOOTH (③ en el control remoto) para encender la función Bluetooth.

El iPod conectado por última vez se volverá a conectar automáticamente cuando se active la función Bluetooth.

- 3 Seleccione la música, el video, los juegos, etc. que desea reproducir en el iPod. Para obtener más información, consulte el manual del usuario del iPod.

Sugerencias

- Si el último iPod conectado no se vuelve a conectar automáticamente, si aún no se ha completado la asociación del modelo de iPod, realice los pasos 4 a 5 descritos en "Para asociar a un iPod".

- Para conectar a un iPod alternativo, que ya ha sido asociado previamente a esta unidad, pulse BLUETOOTH (③ en el control remoto) para desconectar el iPod conectado. A continuación, seleccione el nombre del modelo de la unidad desde el iPod alternativo al que desea conectar.

- Puede cargar el iPod en la bandeja mientras escucha música mediante la conexión Bluetooth.

- Si el nivel de volumen es bajo, ajuste primero el volumen de la unidad. Si el volumen sigue siendo muy bajo, ajuste el volumen del dispositivo Bluetooth.

Para terminar de escuchar

Finalice la conexión Bluetooth mediante cualquiera de las siguientes operaciones.

- Apague la unidad.

- Apague el iPod.

- Pulse BLUETOOTH (③ en el control remoto), iPod, o AUDIO IN.

- Utilice el iPod para finalizar la conexión. Para obtener más información, consulte el manual del usuario del iPod.

Para borrar la lista de modelos ya asociados y memorizados en la unidad

- 1 Pulse I/O.

- 2 Pulse BLUETOOTH (③ en el control remoto) para encender la función Bluetooth.

- 3 Mantenga presionado BLUETOOTH y VOLUME – simultáneamente en la unidad.

El indicador MEGA BASS parpadea.

Notas

- Puede realizar el paso 3 para borrar la lista, incluso durante la conexión Bluetooth.
- Esta operación no puede llevarse a cabo cuando se está asociando la unidad.
- Para asociar esta unidad de nuevo, elimine el