

# Safe Embrace® Convertible Car Seat


Model Number: 79700, 79702

## **Chest Clip Replacement Instructions**


### **Remove the Existing Chest Clip**




 Lift the harness release lever and pull the shoulder straps out as far as you can on the front of the car seat.

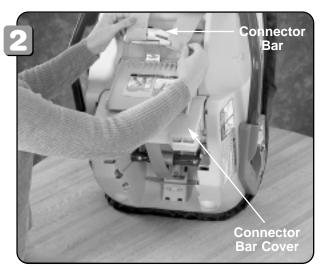


- Open the connector bar cover on the back of the car seat.
- Pull the connector bar up.
- Remove each shoulder strap from each end of the connector bar.

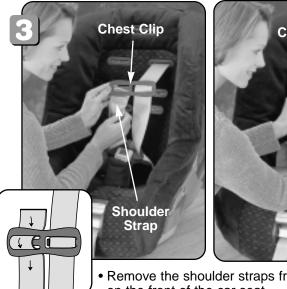

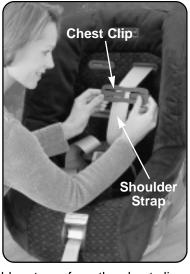

 Remove the shoulder straps from the chest clip on the front of the car seat.


#### Replace with New Chest Clip

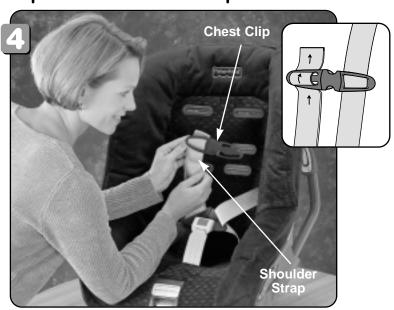

- Position the chest clip pieces so that the buckle and tongue face each other. Fasten the chest clip.
- Thread a shoulder strap through one side of the chest clip, as shown. Make sure the shoulder strap is not twisted.
- Repeat this procedure to thread the other shoulder strap through the other side of the chest clip.



 Re-insert the shoulder straps into the shoulder strap slots.

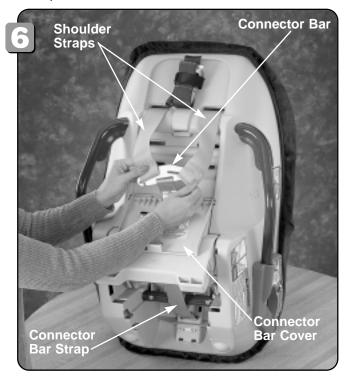

- Pull the connector bar up on the back of the car seat.
- Re-attach the shoulder straps to the connector bar.
   Make sure the shoulder straps are not twisted.
- Make sure the connector bar strap is not twisted.
- Close the connector bar cover.

**Hint:** It is easier to close the connector bar cover if you pull the shoulder straps out as far as you can on the front of the car seat.

#### **Chest Clip Use**

**IMPORTANT!** The chest clip is only recommended for toddler forward facing use.



• Buckle the chest clip.



 Position the chest clip so that it is in line with your child's armpits.

Please refer back to your Safe Embrace® Convertible Car Seat Owner's Manual, which was enclosed with your car seat, for warnings, important information, setup and use instructions. If you have further questions, please call Fisher-Price® Consumer Affairs, toll-free at 1-800-432-KIDS, between 8 AM and 6 PM, Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.