




# BULKHEAD PARTS




For Model: LER3622PQ1

(Designer White)

COMPACT  
ELECTRIC DRYER

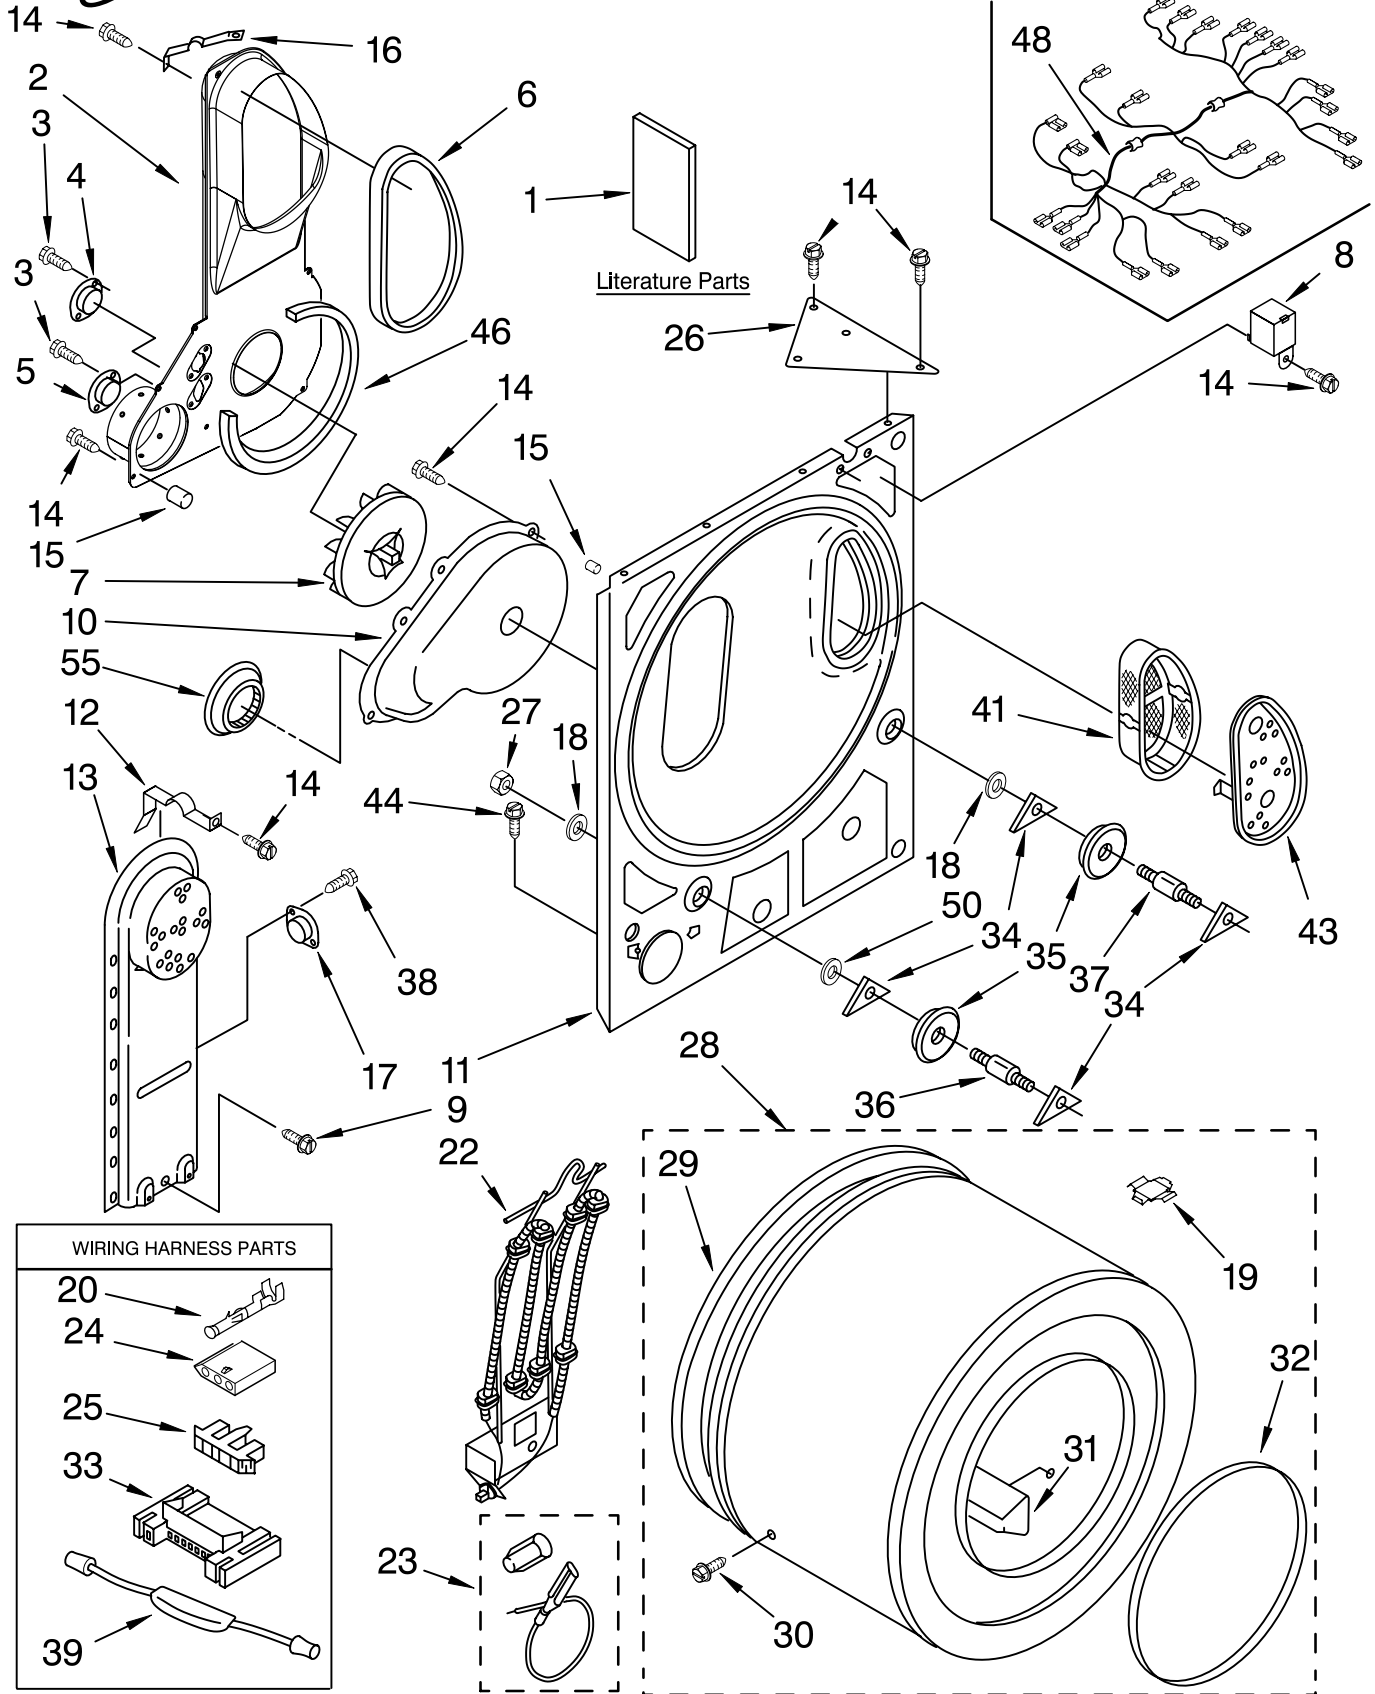

### WIRING HARNESS PARTS

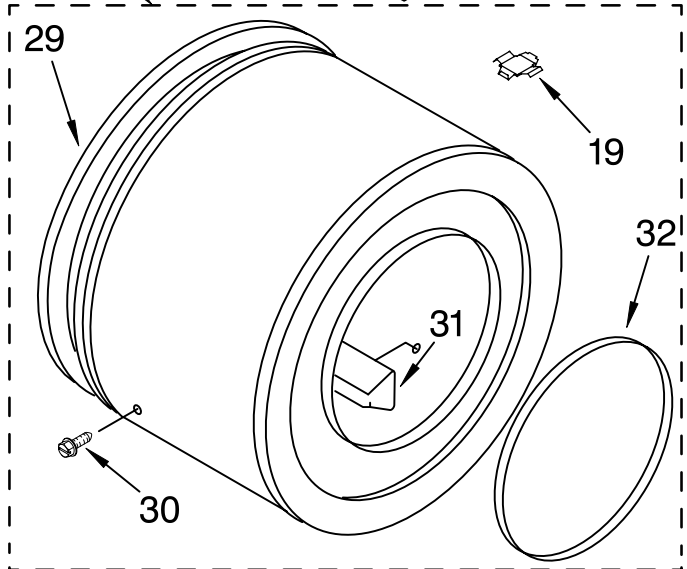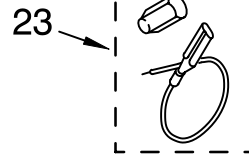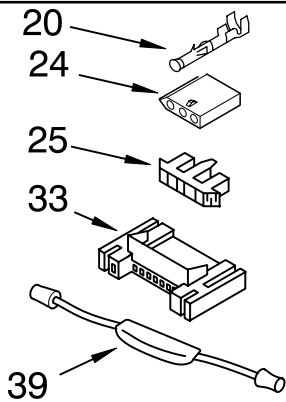

# BULKHEAD PARTS

For Model: LER3622PQ1

(Designer White)


Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1		Literature Parts	14	343641	Screw, 10-16 x 1/2	29	345648	Seal, Rear
	8562114	Use & Care Guide	15	359702	Cap, Screw	30	97787	Screw, 11-16 x 3/4
	9830513	Label, Operating Instructions	16	9830393	Clip	31	685207	Baffle, Drum (3)
	9831749	Label, Wiring Diagram	17	3404154	Thermostat, 200°F (93.3°)	32	3394508	Ring, Bearing
2	8566189	Air Duct Assembly	18	348197	Washer, Support	33	3395683	Housing, Connector
3	3390646	Screw, 8-18 x 5/16	19	8066086	Drum Hole Plug	34	690997	Ring, Tri
4	3398128	Thermostat, Internal Bias	20	94614	Terminal	35	3397588	Roller, Support
5	3403607	Thermal Limiter 195°F (91C)	22	3403586	Heater Element	36	3399506	Shaft, L.H.
6	339956	Seal	23	279457	Wire Kit (For Heater Element Wiring Harness Repair)	37	3399507	Shaft, R.H.
7	696426	Wheel, Blower	24	3936144	Connector 3-Circuit	38	90767	Screw, 8-18 x 3/8
8	694419	Buzzer, Mini	25	3397269	Connector, Timer	39	3401077	Resistor Assembly
9	489463	Screw, 8-18 x 5/8	26	345325	Gusset (2)	41	8531964	Lint Screen
10	696419	Scroll, Fan	27	3359452	Nut, 3/8-16	43	8531967	Cover, Lint Screen
11	695931	Bulkhead	28	695943	Drum Assembly	44	342202	Screw, 10-16 x 1/4
12	3398161	Clip				46	8066094	Seal
13	3401380	Box, Heater				48	8299821	Harness, Wiring
						50	3388703	Washer, Support
						55	696302	Shield, Exhaust

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET PARTS

For Model: LER3622PQ1

(Designer White)

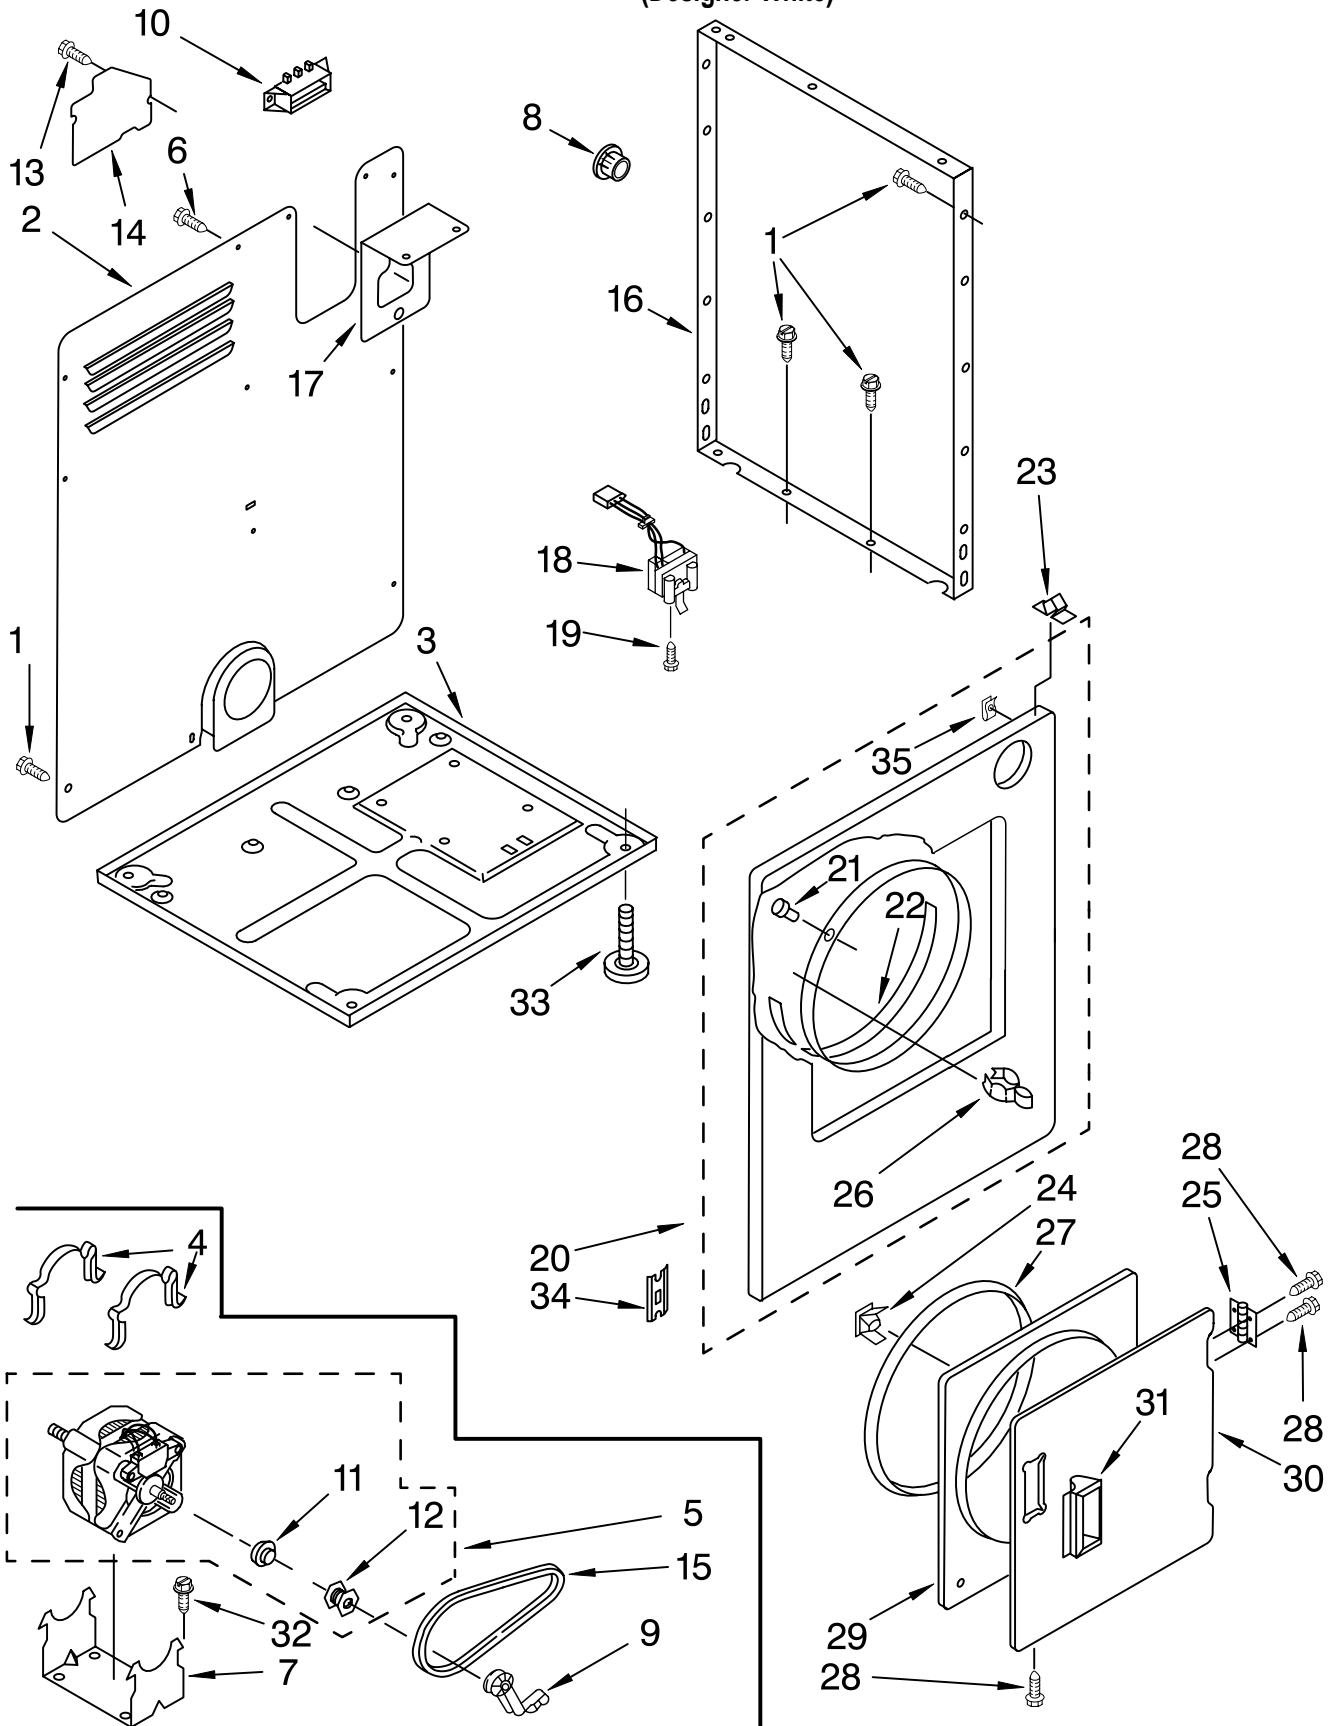

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET PARTS

For Model: LER3622PQ1

(Designer White)


<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	343641	Screw, 10-16 x 1/2
2	695201	Panel, Rear
3	348726	Base Assembly
4	660658	Clamp, Motor (2)
5	8538265	Motor, 60 Hz.
6	697776	Screw, Ground (10-32 x 5/8)
7	696541	Base, Motor
8	8066084	Bushing, Snap
9	691366	Idler & Pulley Assembly
10	3397659	Block, Terminal
11	3393657	Retainer, Belt
12	8066051	Pulley, Motor 60 Hz.
13	3393008	Screw, 10-16 x 1/2
14	3396795	Cover, Terminal Block
15	8066064	Belt, Drive
16	348705	Panel, Side (2)
17	690259	Support, Terminal Block
18	3406104	Door Switch Assembly
19	697773	Screw, 6-20 x 7/8
20	693943	Front Panel
21	685203	Clip, Felt Pad
22	8066123	Seal & Bearing Assembly
23	345670	Lock, Top
24	3389441	Catch, Door
25	348023	Hinge & Pin Assembly (2)
26	696144	Strike, Panel
27	3390734	Seal, Door
28	694091	Screw, 8-18 x 3/8
29	695656	Door, Rear
30	348205	Door, Front
31	8562104	Handle, Door
32	3390631	Screw, 10-16 x 3/8
33	233550	Foot (4)
34	3394083	Clip (2)
35	98234	Clip, Panel

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CONSOLE PARTS

For Model: LER3622PQ1

(Designer White)

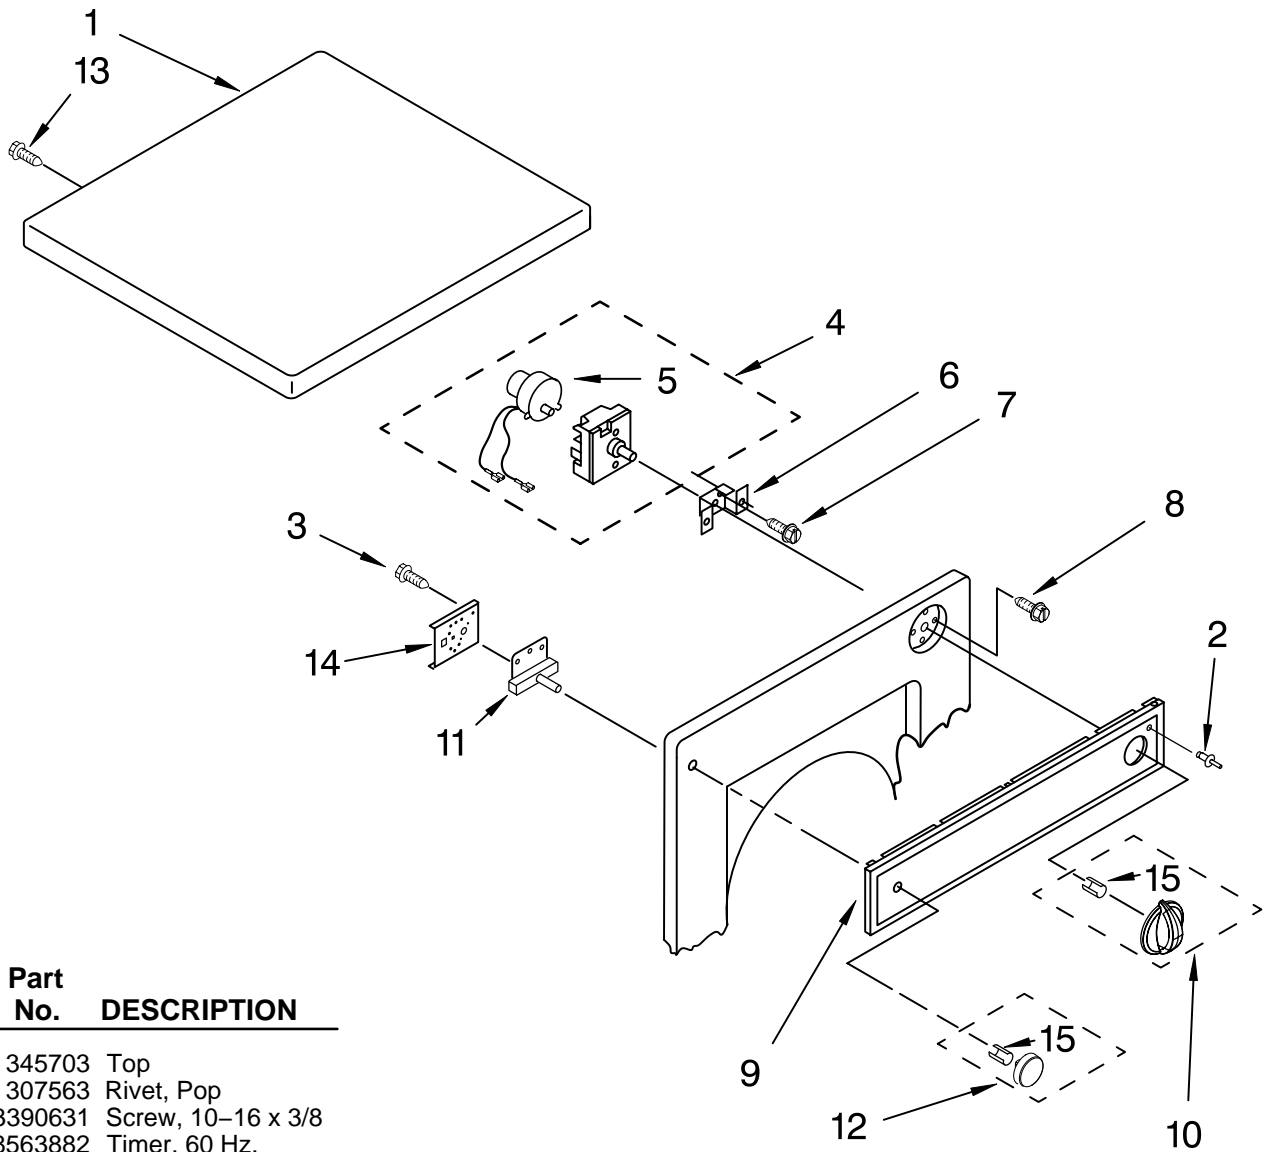

Illus. No.	Part No.	DESCRIPTION
1	345703	Top
2	307563	Rivet, Pop
3	3390631	Screw, 10-16 x 3/8
4	8563882	Timer, 60 Hz.
5		Timer Motor (Not Serviceable)
6	348171	Bracket, Timer
7	311865	Screw, 8-32 x 7/32
8	3390646	Screw, 8-18 x 5/16
9	8562102	Panel, Control
10	8544955	Timer Knob Assembly
11	3977456	Switch, Push-To-Start
12	8544939	Knob, Push-To-Start
13	343641	Screw, 10-16 x 1/2
14	3406860	Bracket, Front Panel
15	8536939	Clip, Spring

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS (NOT INCLUDED)

For Model: LER3622PQ1

(Designer White)

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>		
	72017	White
<b><u>PAINT, PRESSURIZED SPRAY (12 oz.)</u></b>		
	350938	Primer, Gray
	350930	White
<b><u>PAINT, BULK (1 qt.)</u></b>		
	799344	White (Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST