




# TOP AND CONSOLE PARTS

ELECTRIC DRYER

For Models: LER5624BW0, LER5624BN0  
(White) (Almond)

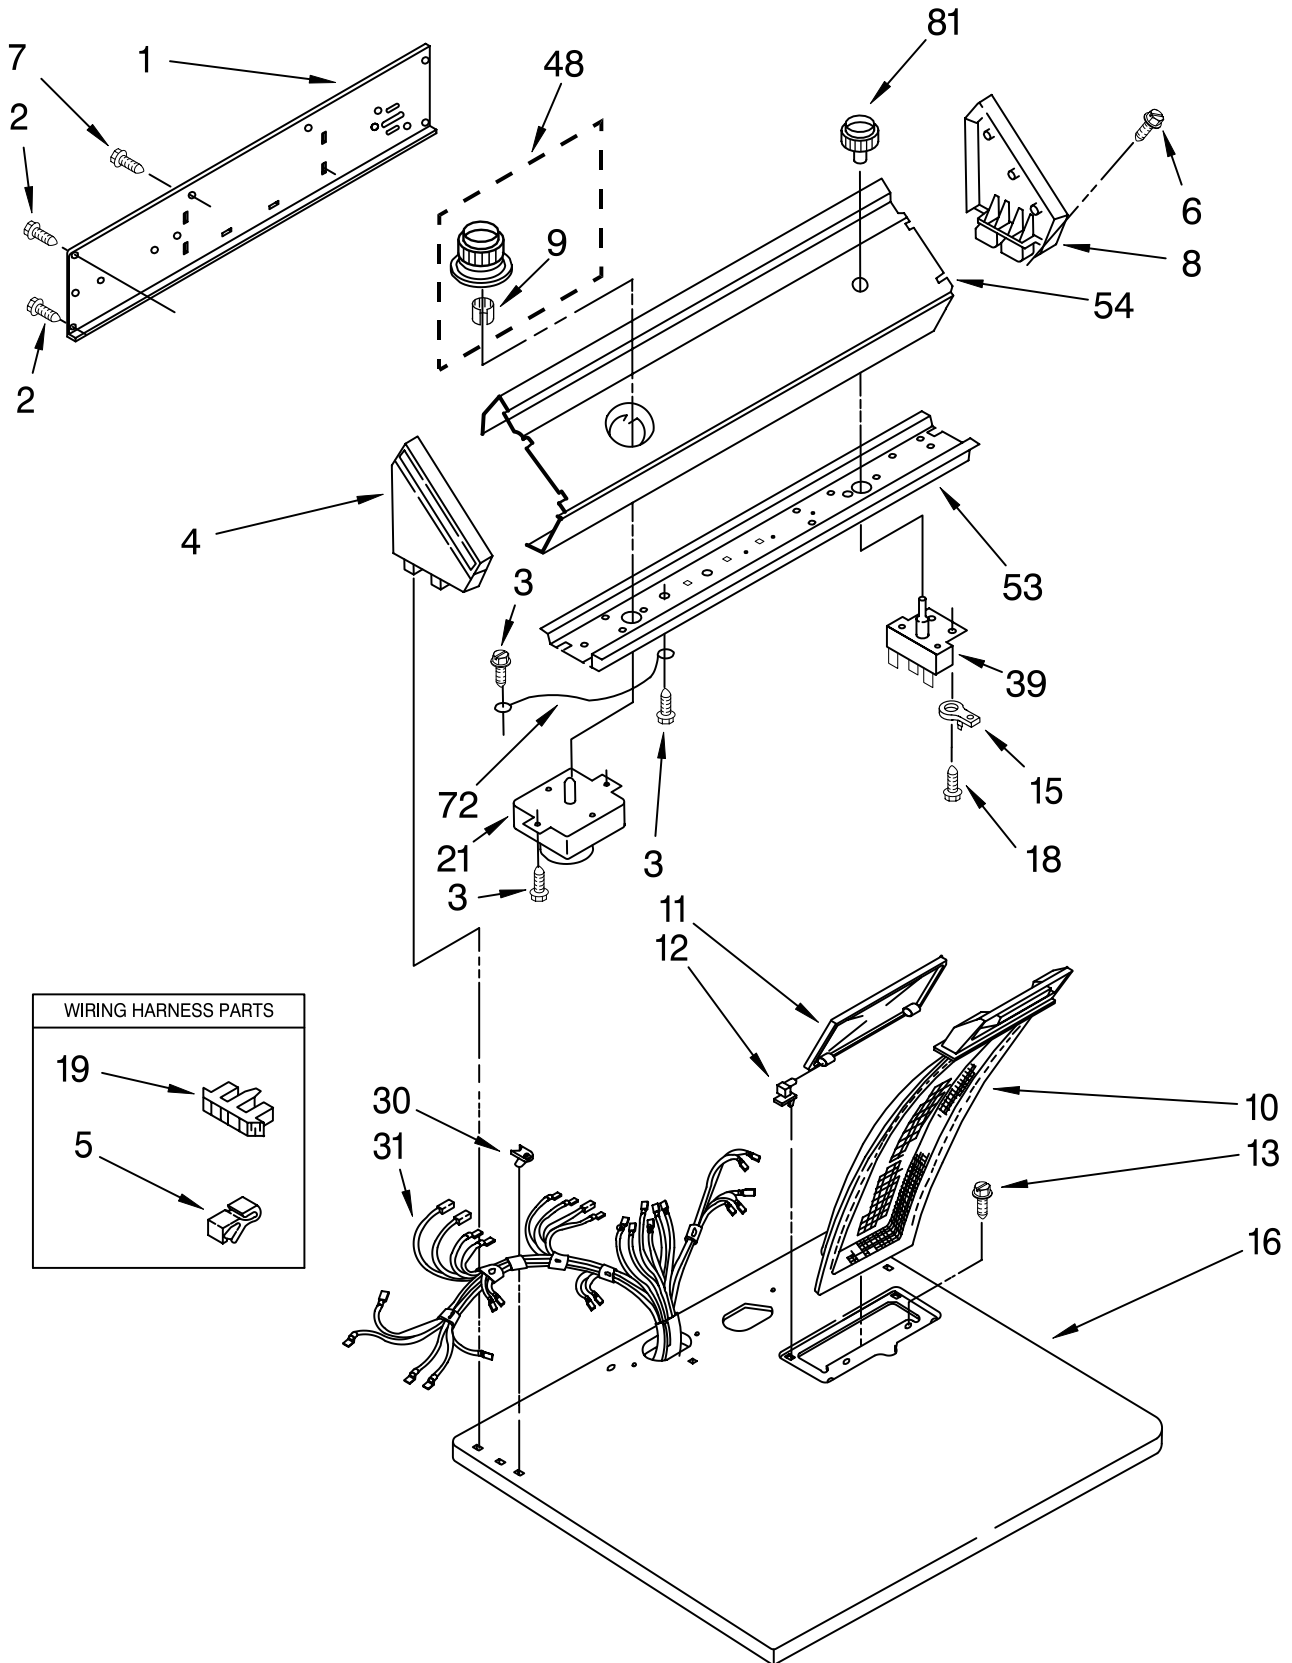

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CONSOLE PARTS

For Models: LER5624BW0, LER5624BN0  
(White) (Almond)


Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
1 3397545 Panel, Rear Console	10 339392 Screen, Lint	31 3396646 Harness, Wiring
2 693994 Screw, Hex Head	11 688150 White	39 660936 Switch, Push-To-Start
3 3390646 Screw, 8-18 x 5/16	689310 Almond	48 3396145 Timer Knob Assembly
4 3358531 Cap, End (L.H.) White	12 339229 Hinge, R.H.	53 3396293 Bracket, Control Panel, Control
3358532 Almond	339230 Hinge, L.H.	54 3397190 White
5 689180 Clip, Retainer	13 688983 Screw, 8-18 x 5/8	3397191 Almond
6 3353145 Screw, Console	15 3388706 Resistor	72 690853 Wire, Ground
7 693995 Screw, Hex Head	16 3396022 White	81 3396160 Knob, Push To Start
8 3358516 Cap, End (R.H.) White	3396023 Almond	
3358517 Almond	18 3390647 Screw, 8-18 x 1/2	
9 688805 Clip	19 3397269 Connector, Timer	
	21 3392250 Timer, 60 Hz.	
	30 357213 Nut, Push-In (2)	

## LITERATURE AND OPTIONAL PARTS

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
<b><u>LITERATURE PARTS</u></b>		
LIT3396303 Guide, Used & Care	<b><u>OPTIONAL PARTS NOT INCLUDED</u></b>	
LIT3397597 Instructions, Installation	<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>	
LIT3399125 Label, Wiring Diagram	72017 White	799344 White (Uncut)
	72107 Almond	978883 Almond(Uncut)
	<b><u>PAINT, PRESSURIZED SPRAY (13 oz.)</u></b>	
<b><u>Following May Be Purchased</u></b>	350930 White	
<b><u>DO-IT-YOURSELF REPAIR MANUALS</u></b>	350956 Almond	
	350938 Primer, Gray	
LIT677818 Dryer	350941 Leveler (Thinner)	

# CABINET PARTS

For Models: LER5624BW0, LER5624BN0  
(White) (Almond)

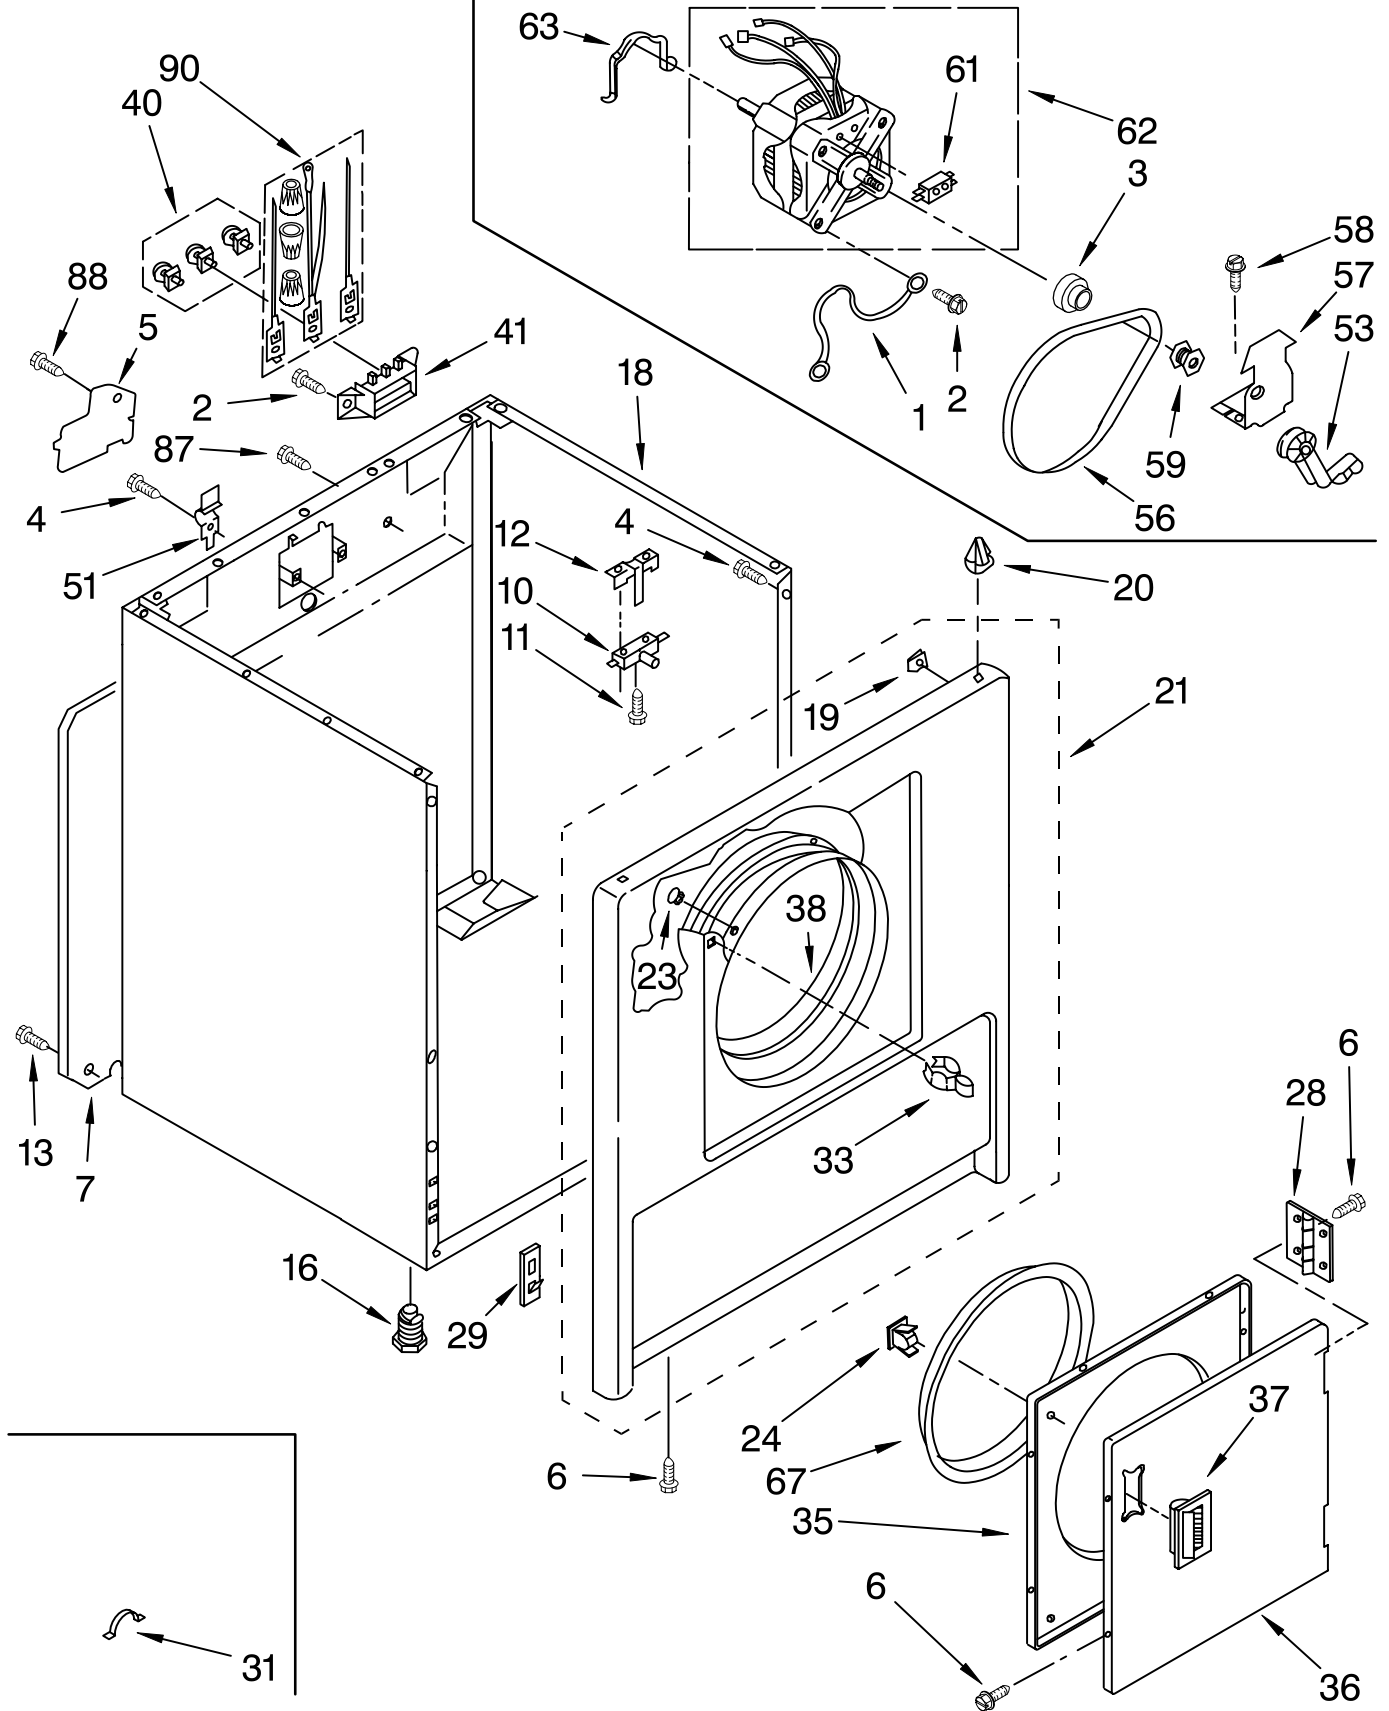

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET PARTS


For Models: LER5624BW0, LER5624BN0  
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	690236	Wire, Ground (Motor)	21		Upper Front Panel Assembly	53	691366	Idler & Pulley Assembly
2	3393008	Screw, 10-16 x 1/2		693197	White	56	660996	Belt, Drive
3	3393657	Restrainer, Belt		693198	Almond	57	348780	Base, Motor
4	343641	Screw, 10-16 x 1/2	23	685203	Clip, Felt Pad	58	172455	Bolt, 5/16-18 x 3/4
5	690893	Cover, Terminal Block	24	3389441	Catch, Door	59	3389627	Pulley, 60 Hz.
6	694091	Screw	28	348023	Hinge and Pin Assembly (2)	61	3388235	Switch, Motor
7	346368	Panel, Rear	29	3394083	Clip, Front Panel (2)	62	3391886	Motor Assembly 60 Hz.
10	347207	Switch, Door	31	98997	Clip, Harness			(Pulley Not Included With Motor)
11	98129	Screw, 6-20 x 1-3/8 (2)	33	696144	Strike, Door	63	660658	Clamp, Motor 343481 (Alt.) 685441 (Alt.)
12	691581	Lever, Door Switch	35	695656	Door, Rear	67	3390734	Seal, Door
13	693994	Screw, Rear Panel Mounting	36		Door Front	87	697776	Screw, 10-32 x 1/2 (External Ground)
16	3392100	Foot, Dryer (4)		348205	White	88	693995	Screw, 10-16 x 1/2
18		Cabinet		689314	Almond	90	279318	Terminal, Tinned & Brass (3) (Includes Illus. 40)
	3394109	White	37		Handle, Door			
	3394110	Almond		686711	White			
19	98234	Clip, Ground		689308	Almond			
20	690363	Lock, Front Top (2)	38	349462	Seal & Bearing Assembly			
			40	279393	Terminal Block Kit For Terminal Block			
			41	690261	Block, Terminal			
			51	238088	Hinge, Top (2)			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# BULKHEAD PARTS

For Models: LER5624BW0, LER5624BN0  
(White) (Almond)

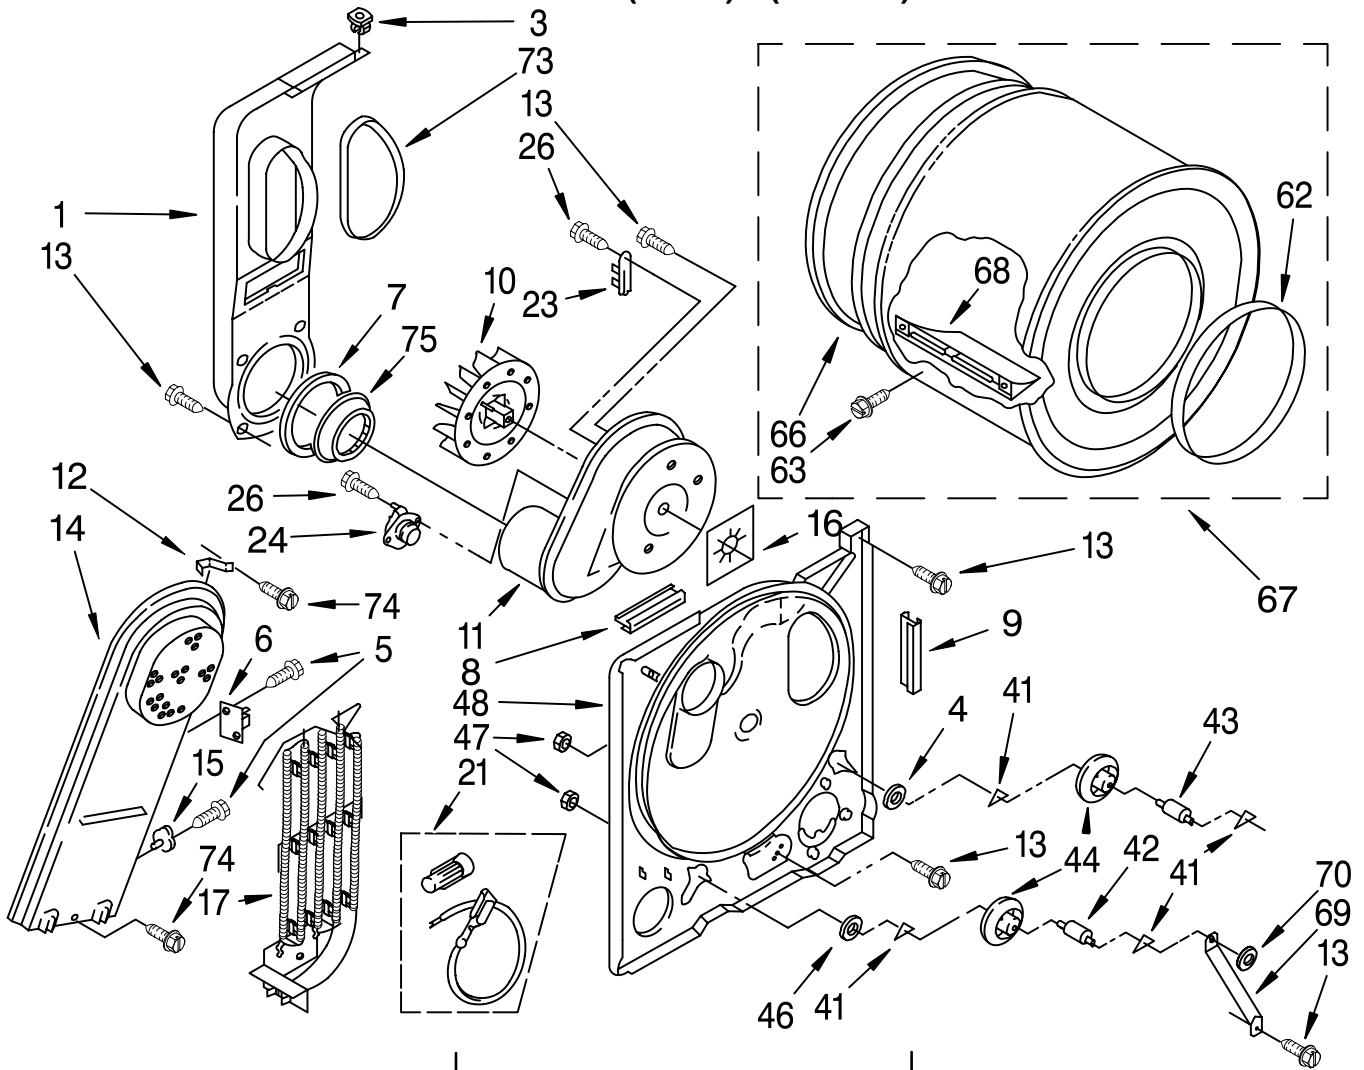

Illus. No.	Part No.	DESCRIPTION
1	694283	Lint Chute Assembly
3	98460	Nut, Push-In (2)
4	3388703	Washer, Support
5	90767	Screw, 8 x 3/8
6	3398671	Thermal, Cut-Off (Hi-Limit Thermostat Illus. No.15 Included)
7	347139	Seal, Lint Chute
8	686889	Pad, Cabinet
9	3392247	Pad, Blower Housing
10	694089	Wheel, Blower
11	695081	Housing, Blower
12	337272	Clip
13	343641	Screw, 10-16 x 1/2
14	695547	Box, Heater

Illus. No.	Part No.	DESCRIPTION
15	3390291	Thermostat, High Limit 250°F (121.1°C) (60 Hz.)
16	3392123	Seal, Blower Shaft
17	660982	Element, Heater (For 240 Volt Installation)
21	279457	Wire Kit (For Heater Element Wiring Harness Repair)
23	3392519	Fuse, Thermal
24	660039	Thermostat, 150°F / 66C

Illus. No.	Part No.	DESCRIPTION
26	695239	Screw, 8-18 x 3/8
41	690997	Ring, Tri
42	347364	Shaft, L.H.
43	339489	Shaft, R.H.
44	3397588	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8-16
48	685775	Bulkhead
62	3394508	Ring, Bearing
63	97787	Screw, 11-16 x 7/8
66	337449	Seal, Rear Drum
67	3396775	Drum Assembly
68	342847	Baffle, Drum
69	348945	Bracket, Support
70	90296	Clip
73	339956	Seal
74	687128	Screw, 10-16 x 1/2
75	696302	Shield, Exhaust

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST