

GOLDAIR

Operating Instructions

Electric Blanket



Models: GELUB Series Electric Blankets


General Care and Safety Guide

Thank you for choosing a Goldair Electric Blanket. This Goldair Electric Blanket has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the Electric Blanket.
2. Do not use an extension cord, power board or external timer with this product.
3. Do not operate this Electric Blanket with a damaged cord, plug or after the Electric Blanket malfunctions in any manner. Return to a qualified electrical person for examination, electrical service or repair.
4. This Electric Blanket is intended for household use only and not for commercial or industrial use.
5. Use this Electric Blanket only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
6. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
7. Do not use heavy or dense over blankets as they may lead to overheating of the Electric Blanket.
8. Do not trap or fold cords between bed slats, mattress, or springs, or against walls, headboards or bed frame as this may cause damage to the cord. Do not pinch, flex, or expose the heating wire. Damaged heating wire may cause a fire hazard or personal injury.
9. Do not use the Electric Blanket on a bed used by an infant, incapacitated person, paraplegic, quadriplegic, diabetic, anyone sensitive to heat or anyone who can not clearly understand the instructions and/or operate the controls.
10. This Electric Blanket is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Electric Blanket by a person responsible for their safety.
11. This product is not intended for medical use in hospitals.
12. Do not use this product on a damp mattress or on a water bed.
13. If you find any damage to your Electric Blanket, if your Electric Blanket does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. Repair work on the Electric Blanket by unqualified persons can cause serious risk to the user.
14. There are no user serviceable parts installed in the Electric Blanket.
15. Do not use on an adjustable bed.
16. Turn off the Electric Blanket and disconnect the power cord when not in use.
17. Do not dry clean the Electric Blanket. Do not use bleach or harsh cleaning fluids as the cleaning liquid may damage the insulation of the heating element.
18. Do not use any pins, needles, safety pins or other sharp items on your Electric Blanket as they will damage the electric wiring.
19. Keep all dogs, cats, and other pets away from the Electric Blanket.
20. Do not tuck in the Electric Blanket as this may cause over heating and/or fire.
21. The Electric Blanket can be used only with the Electric Blanket control provided by the manufacturer. Any other Electric Blanket control may cause overheating and/or fire.
22. Indoor use only.
23. Children should be supervised to ensure that they do not play with the Electric Blanket.
24. Do not unplug the product by the power cord while in use. Always turn the power off at the power outlet before you remove the plug. Remove by grasping the plug; do not pull on the cord.


TECHNICAL SPECIFICATION

Supply:	220-240VAC	50Hz
Wattage:	2x 60W	GELUB-Q
Wattage:	2x 70W	GELUB-K



Overview of Goldair Electric Blanket

Your Goldair Electric Blanket is equipped with two 9 Heat Controllers.

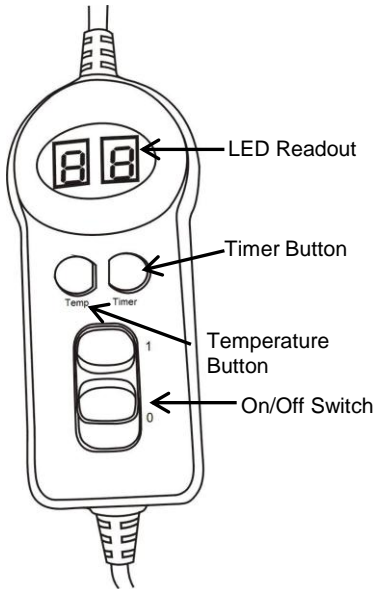

9 HEAT CONTROLLER

The control features an on/off switch and two buttons to control the heat settings and the timer.

It also has an LED readout for temperature and timer settings.

OPERATING INSTRUCTIONS

1. You can program your Electric Blanket to work for 1-9 or 12 hours and with 1-9 heat settings
2. Plug into the mains power supply and switch on the power mains
3. Switch on the Electric Blanket with "On/Off" button.
4. The LED for timer and temperature will be illuminated.
5. By pressing the Temp button you will be able to adjust the heat settings from 1-9. 1 being lowest and 9 being highest. This will be indicated with the left LED.
6. You can also set the timer to turn the Electric Blanket off after a predetermined time being 1-9 hour or 12 hours. By pressing the Timer button you will be able to adjust the number of hours from 1-9 (press once for each hour), pressing one more time will show "H" illuminated on the heat controller which indicates the timer is set to 12 hours. This will be indicated with the right LED.

BEFORE FIRST USE

Before using your Electric Blanket for the first time:

- 1) The Electric Blanket needs to be unfolded and laid flat before switching on.
- 2) We recommend that you switch your Electric Blanket to the maximum setting for two to three hours before bedtime then reduce to your desired heat setting 15 minutes before getting into bed, and switching Off prior to sleeping.

EVERYDAY USE

With normal use your Electric Blanket will require 15 minutes of preheating before bedtime.

IMPORTANT: Your Electric Blanket is designed to pre-heat your bed. Never sleep with Electric Blanket turned on.

STORING YOUR ELECTRIC BLANKET

Always allow the Electric Blanket to cool before storing. Your Electric Blanket can remain on the bed all year round as a comfortable under-blanket. Simply remove the controls and store until Winter. If you wish to remove the Electric Blanket from your bed when not in use, roll or fold it loosely and store in a blanket bag or the bag it was supplied in. Avoid creating sharp creases in the Electric Blanket; for example do not store it under other items that may result in bending the wires of the Electric Blanket.

Fitting your Goldair Electric Blanket


FITTED BLANKET FEATURES AND BENEFITS

- Fitted Design - fitted elastic keeps the Electric Blanket flat and taut on the mattress and makes it easy to fit and remove from the bed.
- Machine Washable - the detachable controls and waterproof element make your Electric Blanket safe to machine wash and tumble dry. For instructions on how to launder your Goldair Electric Blanket refer to Care & Cleaning section.
- 9 Heat Control - a choice of 9 heat settings allows you to select the temperature to best suit your comfort level.
- Detachable Controls - remove the controls when laundering your Electric Blanket.
- Dual Controls – The Electric Blanket features two heat controls for personalised heating.

FITTING YOUR GOLDAIR ELECTRIC BLANKET

Place the Electric Blanket on the mattress with the elastic strap side facing down.

Ensure the end of the Electric Blanket with controls is at the top end of the bed.

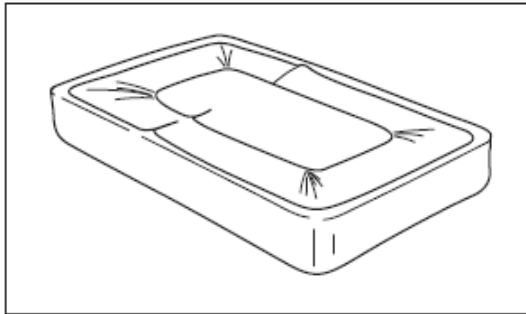

Once the Electric Blanket is in the correct position attach the elastic straps by pulling them down and securing them around the corners of the mattress.

Connect the Electric Blanket controls into the sockets on the Electric Blanket and plug into a power point and turn on. The cord and control switches must be kept outside the bed and away from external heating sources, such as heaters or bedside lamps.

Care and Cleaning of your Goldair Electric Blanket

CARE & CLEANING OF YOUR ELECTRIC BLANKET

Taking care of your Electric Blanket is easy and safe as long as you follow the steps outlined below:

- DO NOT dry clean your Electric Blanket. Dry cleaning will damage the wiring.
- DO NOT use bleach or dry cleaning fluids.
- DO NOT use a wringer.
- DO NOT iron the Electric Blanket.
- DO NOT turn on the Electric Blanket until it is completely dry.
- DO NOT use mothballs or sprays of any kind.

SPOT CLEANING

- Unplug and remove the controls to the Electric Blanket.
- Wet sponge the affected area using a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
- Gently sponge the affected area with clean water.
- Use a neutral coloured towel to absorb excess water.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase. (Refer to back of booklet).

HAND WASHING

- Unplug and remove the Electric Blanket controls.
- Fold and presoak the Electric Blanket for 15 minutes in a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
- Gently squeeze the soap suds through for a few minutes.
- Rinse in fresh lukewarm water.

MACHINE WASHING

- Unplug and remove the Electric Blanket controls.
- Fold and presoak the Electric Blanket for 15 minutes in a mild soap and lukewarm water solution. Ensure the water temperature is less than 30°C.
- Wash in mild soap and lukewarm water on the delicate or gentle cycle for 2 minutes.
- Rinse in fresh lukewarm water.

MACHINE DRY

- Tumble dry until damp.
- Do not fully dry Electric Blanket in tumble dryer.

AIR DRYING

- Gently stretch the Electric Blanket to its original size.
- Air dry over a clothes line or shower rod. (DO NOT use clothes pegs or clips of any kind).
- DO NOT use the Electric Blanket until it is completely dry.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm
Phone +64 (0)9 917 4000
Phone 0800 232 633
info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm
Phone +61 (0)3 9336 4423
Phone 1300 465 324
info@cdbgoldair.com.au

Two Year Warranty

Thank you for purchasing this Goldair product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **two years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000
Phone 0800 232 633
www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423
Phone 1300 GOLDAIR (1300 465 324)
www.goldair.com.au

Goldair Two Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name _____

Address _____

Place Of Purchase _____ Date of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card