OPERATION INSTRUCTIONS

Intelligent Toilet

OLS-0609/0609IC/0609IMA

List of functions

Item Number	0LS-0609	0LS-06091C	OLS-06091MA
Buttocks Cleanse	0	0	0
Bidet	0	0	0
Water Position Control	0	0	0
Water Pressure Control	0	0	0
Moving Cleanse	0	0	0
Instantaneous Water Heating	_	0	0
Massage Cleanse	0	0	0
SPA Of Warmness And Coldness	_	0	0
Heated Seat	0	0	0
Warm Air Dryer	0	0	0
Temperature Control	4 levels	4 levels	4 levels
Automatic Sensor	0	0	0
Automatic Flush	0	0	0
Wireless Remote Control	0	0	0
Night Light	0	0	0
Мр3	_	_	0
Deodorization	0	0	0
Energy Saving	0	0	0
Nozzle Self-cleaning	0	0	0
Soft close Seat	0	0	0
Color Screen Show	_	0	0
Indicator Light Show	0	_	_
Nozzle Hand-cleaning	0	0	0
Automatic Open And Close Lid	_	_	0


Contents

DEAR USER:

Thanks for choosing our company's Intelligent Toilet. To ensure your safety, please read user's manual carefully before using the product, and keep this manual in place for reference.

List of functions 2
Brief in function 3
Names of component parts 4
Use of basic operation 7
Confirmation before use 10
Notes for use 11
Notes for safety 12
Failure analysis and solution15
Maintenance 17
Technical specification 1.9

Brief in function



Buttocks Cleanse Buttocks can be cleaned thoroughly from nozzle Spraying Designed specially for woman daily cleanse, being washed perfectly under soft water pressure to prevent the bacterial transmission. **Bidet** The nozzle can go forward or backward based on user's concrete body instead of body movement. Water Position Control -The different water pressure can be optional for user's interest. Water Pressure Control-Moving Cleanse The nozzle movement can increase effect on washing. Instantaneous Water Warm water is provided when sitting, it also can be offered Heating

Regular change of water pressure can play a role of massage to promote blood circulation.

The effect of coldness and warmness changing is realized by adjusting water temperature rhythmically to help blood circulation

Available comfort

Massage Cleanse SPA Of Warmness

And Coldness

Automatic Flush Inter Remote Control

Wireless Remote

Deodorization

Color Screen Show

Automatic Open

And Close Lid

Indicator Light Show -

Nozzle Hand-cleaning -

Control Night Light

Mp3

The seat remains a certain temperature by micro-computer system, **Heated Seat** make you feel warm even in winter.

Warm Air Dryer The warm air to dry buttocks more quickly after washing.

Temperature Control Adjust water, air and seat temperature.

Automatic Sensor Seat auto-sensing, toilet in a stand-by status.

The toilet will flush water down automatically when the user goes

Remote control is set inside the machine.

All functions can be performed by remote control in the whole

Night light used in night will not effect your sleeping.

Playing briskly music to relax.

The toilet is initiating since the seat is occupied by body.

Other functions

3, 6 or 9 hours can be set for energy saving, during energy-saving period, the heating of water and seat are unavailable. **Energy Saving** The nozzle will give off a small stream of water to have self

Nozzle Self-cleaning cleaning before and after each use. The device can make seat lower down quietly and gently to avoid Soft Close Seat

annoying toilet seat slam.


Showing the setting of toilet more humanized.

Showing the setting of toilet simply.

Nozzle extend to be cleaning by manual. When users approach the toilet, the lid will be open automatically;


Control lid and seat by remote control.

Names of component parts

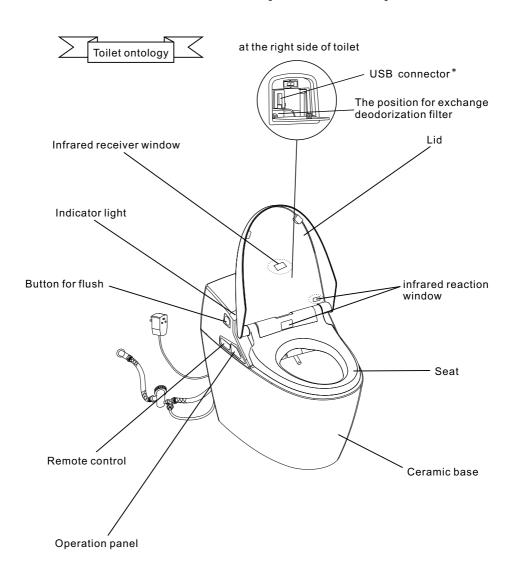


^{*: 0609} and 0609IC do not configure this function.


Names of component parts



Operation panel of intelligent toilet is described as: 0609/0609IC/0609IMA have 4 buttons each, orderly is "Dry" "Buttocks cleanse" "Bidet" and "Power" (as shown in figure).








Indicator light of intelligent toilet is described as:


0609 has 5 indicator lights totally, orderly is "Power" "Energy Saving" "Water heating" "Seat heating" and "Body sensor" (see the picture on top).




Digital display screen displays as above photo: The indicators on 0609IC/0609IMA display screen orderly are "Power"、"Water temperature"、"Seat temperature"、"Auto-flushing"、"Body sensor"and "Energy saving".

Names of component parts



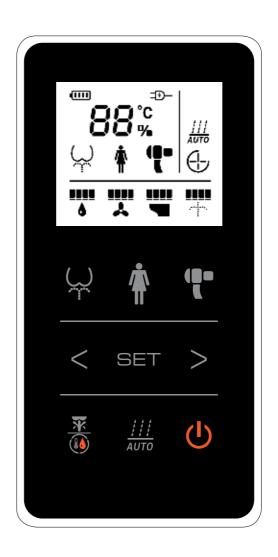

Use of basic operation



When it displays"Lo"on the remote control, press any key for 3 seconds, and remove the lock while the "Lo" will disappear, If press without any key in one minutes, all the keys will be locked and can't be operated while the "Lo" will display on the screen.

When the control panel is without operation for about 24 hours, the LCD display will be closed and enters the electricity saving condition; When press the key on panel and remove the lock, the panel will set out the electricity saving.



"Power":

In the process of "Buttock cleansing", "Bidet" and "Dry", press the key.it will stop operating, Press the key for 2 seconds, it will turn on or off the power.



"Buttocks cleansing":

Press the key to start "Buttock cleansing" function, it will flash for 3 seconds. Press it again, it will realize the "Buttock moving spray" function



"Bidet":

Press the key to start "Bidet" function, it will flash for 3 seconds, Press it again, it will realize the "Bidet moving spray" function.



"Dry":

Press the key to start "Dry" function, it will flash for 3 seconds.



"Massage spray":

0609/060910/06091MA: In the process of cleansing, press the key to start the function; without the process of cleansing, press the key to open or close the soft light.

0609IC:In the process of cleansing, press the key for 2 seconds without stop to start the SPA of warmness and coldness function. 0609IMA:In the process of cleansing, press the key for 2 seconds without stop to start the SPA of warmness and coldness function; without the process of cleasing, press the key without stop to open or close MP3



"Auto-flushing":

Press the key, it will flash for 3 seconds; if you press it for 2 seconds without stop, it can set or cancel the auto-flushing, After the process of auto-flushing, it will display the indicator, after 3 seconds without people, it will auto-flush.

Use of basic operation



Press the "SET" key for 2 seconds without stop, the indicators of " Buttock cleansing and "Dry" flash 3 seconds, and start "buttock cleasing"function for 60 seconds and then start"Dry"function for 180 seconds; Press the key to choose set functions to enter the setting or electricity display.



"Water Position":

In the process of cleansing, press the left key to move the nozzle forward, press the right key to move it backward.



"Water temperature":

Press the "SET" key without stop, when water temperature displays, press the left key to reduce the water temperature press right key to set temperature and it displays responded one.



"Wind temperature": The same operation as water temperature set.



"Seat temperature": The same operation as water temperature set.



"Energy saving time": The same operation as water temperature set.





9hours



"Cleansing water pressure":
The same operation as water temperature set.

Use of basic operation

06091MA





"Mp3 Adjustment":

In the process of MP3, press the key to charge the song; Without the process of cleansing, Press "SET" key without stop, when it displays the water pressure adjustment, press the left or tight key to adjust the MP3volume.

"Cover automatic flip":





Without the process of cleansing, press the "SET" key without stop, when the "cover automatic flip" displays on the screen, press left or right key for 2 seconds without stop and operate the open and close of the toilet cover and seat cover:

When the "Cover automatic flip" displays with fast flashing, press the right key to set the process of Cover automatic flip; press the left key to cancel it while the indicator with slow flashings; If no changes happen in 5 seconds, it will setout the process of setting.

Match of remote control and toilet:

Before match, the toilet is out of power.press the key"Bidet" on the remote control for 3 seconds without stop, the remote control will display word" CO". it enters the process of match; and then supply power, the remote control will display word "co" meaning the completed match of remote control and toilet, and the system can normally be operated, If it fails in one minute, the remote control will automatically set out the process of setting, please repeat the above operation.

The remote control display



"Water temperature control":

Status	Low	Medium	High	0FF
Bar indicator				
Display	34℃	37℃	40℃	



"Air dryer temperature control":

Status	Low	Medium	 High	0FF
Bar indicator				
Display	F1	F2	F3	



"Seat temperature control":

Status	Low	Medium	High	0FF
Bar indicator				
Display	C1	C2	C3	CO



"Cleansing water pressure":

Status	Low	Medium	High	0FF
Bar indicator				


Confirmation before use

Remote control charge illumination


- The remote control can be charged as USB connector, it can be connected with computer or other plugs of USB connectors to charge.
- •When the indicator flashed on the remote control screen, it means the electricity will be out of use, please charge.

41114

■When the remote control is charged, the screen will display as below.



●Insert the plug in the socket.



•Keep the tap open to get water supply available.

Light indication should be ensured

0609:

- See if indicator light of power is lit up, if not, press "Power" key to turn on the toilet.
- See if indicator light of water heating is burning, if not, press"Water temperature" key to start water heating.
- See if indicator light of seat heating is burning, if not, press" Seat temperature" key to start seat heating.



06091C/06091MA:

- •See if indicator light of electricity is burning, if not, please supply power.
- See if indicator of water temperature and seat temperature display the real temperature
- If "auto-flushing" displays on the screen, it means the function of auto-flushing has been successfully set.
- •If energy saving displays on the screen, it means the function of energy saving has been successfully set.

NOTES:In the process of "Buttock cleasing"、"Bidet"、"Dry" function, please confirm the seat sensor started.

Notes for use

Please don't apply dry cloths and toilet paper to the body, seat, lid for cleaning purpose, or it will leave scar on the surface.

Please don't be kept in place in straight sunlight, or it may get color faded, seat temperature unstable, remote control working improperly.

At the time of thunder and lighting, please plug off, or it may result in breakdown.



Please don't lean backward against the lid, or it may bring lid damaged.



Please don't close the seat or the lid with strong force, it may bring it damaged.



Please cut off the water and electricity for a travel or a long time of non-use.



Please don't get signal transmission window covered, or it may fail to have regular work.




When toilet is working in poor water quality, its filter should be cleaned regularly to keep on the regular work.


Notes for safety

Please read the following text carefully. The relevant safety requirement listed below should be observed.

Symbol and description are as following:



if the user ignores these caution during use.

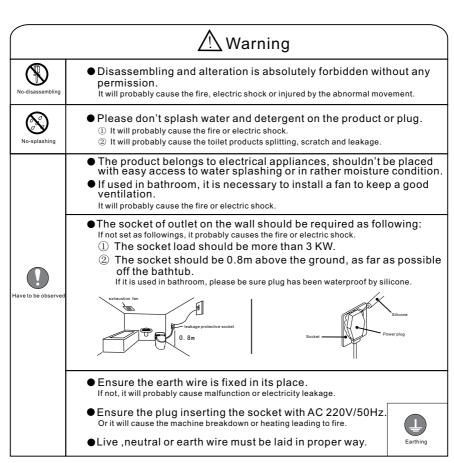

Notes for safety


Warning Attention to low temperature burns ①If user sit the seat for a long time, please adjust the temperature to off. @People as follows when using the warm seat and warm dry, please adjust the temperature to off, the temperature of warm air is adjusted to low level. Children, old men who can't adjust the temperature to suitable; Patients and disabled; People who take the easy-to-sleep medicine, drunk and over-fatigued. Ensure the plug is in place of socket. If not, it will cause electric shock or heating leading to fire. Please be sure it is the power cut off when cleaning. • The electric shock will possibly happen if the plug is pulled off with wet hand. Please don't continue to use if something wrong with the product. 1) When in the following situation, please capture the plug, close the water angle valve. so-called malfunction.. From water pipe, product interior outward water leakage The products present the crack Presents the unusual sound, differently smell The products occur smoke The products especially gives off heat Place bedpan jamming 2 If continue to use the product in the situation that it is breakdown. It will probably cause the fire, electric shock or indoor seep and so on. Please don't damage and replace the power line, attaching plug and seat cord secretly. Don't scratch, process, approach the high temperature, bend forcefully, distortion, tensile, put heavy pressure, banding. (1) If used when it is damaged, it will caused electric shock, short-circuit and fire. @Please relate sales shop when power line and plug need to repair. Please don't use other water expect running water. ①May cause the dermatitis an so on. 2 If has the foreign matter to mix in and piles up in the tubing may cause the malfunction.

Remark: Power cord is featured with type Y. In case it is damaged, it should be replaced by the manufacturer' staff or service agent authorized by the manufacturer to avoid risk.

Notes for safety

	<u></u> Caution
Forbidden	 Please don't light cigarette and other open fire approach products. It will probably cause fire.
	 Please keep hand and other things off the outlet of warm air. It will probably lead to skin injury, electric shock or component damaged.
	 Please use neutral detergent for kitchen, and don't use the following items: cleaning detergent for toilet or house, volatile agent, banana oil, brush and so on. Or it may be harmful to plastic surface and pipe, even bring negative effect on regular work.
Forbidden	 Don't damage products. Please don't place the heavy things and don't stand up on the bowl, also don't hit the bowl forcefully.
	 Please don't exert external force to the water hose. It may lead to water leakage because of the hose connection relaxation.
	 Please don't flush others down besides excreta and toilet paper. Or it may get blocked, sewage drain or water seepage.
	 When take the water filters out, please turn off the valve. It may lead to water leakage if the inlet valve is open.
	 Once the water filters is taken out, please screw tightly when reinstall it. If it is not closed enough will lead to water leakage.
	 Please exclude water when it is not use for a long time. The bad water will cause the skin disease.
	 When the toilet is blocked, cut off the power at first, then use a dredger to dredge the toilet. If not cut off the power, automatic flush will continue to work, may cause sewage drain or water seepage and so on.
	 Please don't use the products at zero or below. Or it may be frozen and damage the inner products leading to leakage.
Have to be observed	 Please avoid the direct sunshine. It may change the color, the seat's temperature uneven and the remote control abnormal.
	 Please don't sprinkle the urine on the toilet and nozzle. It will probably cause malfunction.
	 Please don't use dry cloth or tissue wipe the toilet, seat and lid. It will probably cause scratch to product.
	 Please don't cover the sensor, human detection sensor and prevent the control remote from receiving. It will probably cause the product malfunction.
	 Please cut off the power when there is a thunder. It will probably cause malfunction.

Failure analysis and solution



Any disassembly, repair, alteration of the product is forbidden except of qualified technical personnel.
(It may cause dangerous fire or electric shock)

When some problem happened during operation, please fid out the solution corresponding to cause listed following. And contact with after-service department of our company if you fail to get the product back to normal run.

I.Power supply

Phenmenon	Cause	Solution
	Powerfailure	Get power supply
The Product fail to run	Poor connection between plug and socket of outlet	Ensure plug fixed in socket
	Forget to switch on	Turn on the switch

II. Washing, Bidet

Phenomenon	Cause	Solution
	Water supply failure	Don't perform washing function until water supply available
	Water tap shutoff	Open it
The nozzle don't spray	Nozzle opening jammed with some stuff	Clean the nozzle
	Sensor failure	Have proper posture when sitting on seat to ensure the sensor works well
Weak water pressure	The pressure set at low level	Reset the pressure
weak water pressure	Blocked water intake	Clean up filter
Water supply failure	Caused by the expiration of the give time	Restart performance for cleanse
during operating	Sensor failure	Have proper posture when sitting on seat to ensure the sensor works well

Failure analysis and solution

Phenomenon	Cause	Solution
Water temperature is not high enough	In "no-heating" state	Re-set water temperature

III. Drying by warm air

Phenomenon	Cause	Solution
Low air temperature	Caused by "No-heating" program	Re-set air temperature
Warm air failure during	Caused by the expiration of the given time	Re-set dry function
working	Limited by energy saving program	Have proper posture, when sitting on seat to ensure the sensor works well

IV. Seat heating

Phenomenon	Cause	Solution
Too low temperature	Caused by "No-heating" program	Re-set air temperature
	Limited by energy saving program	Re-set air temperature

V.Special troubles


Phenomenon	Solution	
When 0609 water heating indicator light flashing,0609IC/0609IMA water temperature digital pipe displays E1orE2.	The power should be cut off, then re-connect with power. When it fails, please cut off the power supply and contact	
Indicator light of the seat flashing with buzzing sound(0609)	the manufacture and service agent.	
Indicator lights are all flashing, the buzzer gives off sound warning	Upplug from power supply to see if the water supply fails, and turn on the power when water supply resumes.	
	Shut down the water source to examine the pipes is broken or not , and contact the manufacture and service agent.	

Maintenance

Maintenance of intelligent toilet

The majority of automatic toilet is made from plastic. Cleaning work should be done according to the following method in order to prevent the damage to its body and on surface.

- Generally, please clean with wet soft clothes.
- Please apply neutral detergent to the cloths to remove the dirty off, then followed by water wash.
- After washing, the remaining of detergent on the surface of ceramic part should be wiped off with soft cloths.
- For electronic appliance, keep it dry by using with soft cloth to stop an access to water.

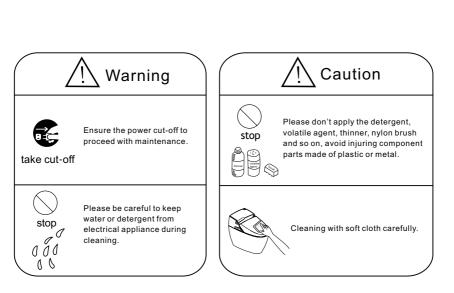

Maintenance

Nozzle cleaning

After the product is powered, press together the key "Buttocks cleanse" and "Bidet" of intelligent toilet for 3 seconds to cancel body sensor, then press the key "Buttocks cleanse" for 5 seconds, the nozzle extend automatically, hold it firm with a hand, and clean it with soft wet cloth by the other hand. Soft brush should be applied if necessary.



How to empty the tank water off

When toilet don't use for a long time, or the water left in tank should be emptied off for some purpose, keep both "Dry" and "Bidet" being pressed for 3 seconds, the system will perform its function to run water off. And all the signal lights don't lit up until empty-off, then cut off power, it can be used until it is re-powered (0609 configure this function).

Technical specification

Item		Description	
Power rating		AV220V 50Hz	
Power cord		1. 5m	
Water pressure range		$0.07{\sim}0.70$ MPa (about $0.7{\sim}7.0$ kg/cm²)	
level Water temperature level Tank capacity	Pineo volumo	1 L/min for max washing	
	Rinse volume	0.9L/min for max bidet	
	Water pressure level	Both wash and bidet with 4 level available, control by computer	
	Water temperature level	4 level available at (No-heating, 34 $^{\circ}\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!\!$	
	Tank capacity	1. 4L(0609IC/0609IMA do not have water tank)	
	Heating power	0609:600W 0609IC:1600W 0609IMA:1600W	
	Safety device	temperature sensor, thermostat, thermal fuse	
Seat	Heating power	45W (Max)	
	Soft close device	The soft close device lowers the lid and seat down to the bowl gently and quietly, when user open or close it	
	temperature level	4 level available at (No-heating, 34℃, 38℃, 42℃)	
	Safety device	Temp sensor, thermal fuse	
Warm air	Heating power	270W (Max)	
	Temperature level	4 level available at (No-heating, 45°C, 55°C, 65°C)	
	Safety device	Thermal fuse	
Spraying type		Jet spraying	
Bathroom temperature		0~50℃	
Weight		About 40 kg	
Size		Length 740*Width 430*Height 580(mm)	