

# ETH1000-D

Gigabit Ethernet Media Converter with DWDM laser

# **User** manual

Rev. 2

# **Nevion Support**

Nevion Europe

P.O. Box 1020 3204 Sandefjord, Norway Support phone 1: +47 33 48 99 97 Support phone 2: +47 90 60 99 99 Nevion USA

1600 Emerson Avenue Oxnard, CA 93033, USA Toll free North America: (866) 515-0811 Outside North America: +1 (805) 247-8560

E-mail: <u>support@nevion.com</u>

See <u>http://www.nevion.com/support/</u> for service hours for customer support globally.

# **Revision history**

Current revision of this document is the uppermost in the table below.


Rev.	Rev. Repl. Date		Sign	Change description		
-						
2	1	2010-07-07	AA	Added information about power constraint in Chapter 1.1.		
1	0	2008-07-24	AS	Added Declaration of Conformity		
0	А	2007-09-11	GMW	First version		

# Contents

Revision history 2
1 Product overview
2 Specifications52.1 Optical Characteristics52.2 Ethernet52.3 General5
3 Configuration63.1 DIP control63.2 GYDA-SC control73.2.1 Block descriptions7
4 Connector module 8   4.1 Mounting the connector module 8   4.2 Terminal format support 9
5 Module status
6 Laser safety precautions 12
General environmental requirements for Nevion equipment
Product Warranty 14
Appendix A Materials declaration and recycling information

# **1 Product overview**

The Flashlink ETH1000-D is a 10/100/1000Base-T to 1000Base-X converter module. The module converts a 10/100/1000Mbps Ethernet signal on copper to 1000Mbps fibre suitable for long haul applications. The module has one electrical Ethernet port, and one fibre transceiver port (receiver fibre connector and transmit fibre connector). The speed on the electrical connector is dependent of the DIP switch setting or GYDA control. Speed will upon link connection automatically be set at the highest possible speed. User can independently enable or disable 10Mbps, 100Mbps or 1000Mbps. The fibre link can be used in one or two fibre installations, or occupy two wavelengths in a WDM, CWDM or DWDM installation.

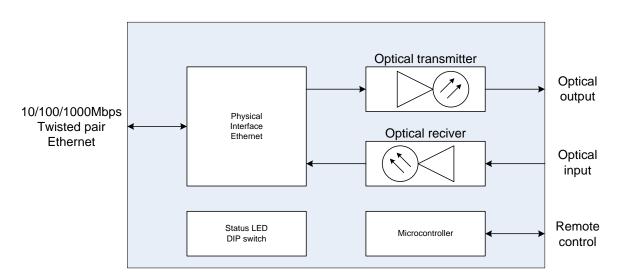

### 1.1 Constraint on number of cards in a frame

Only 5 cards with DWDM transmitters should be assembled in one Flashlink frame (FR-2RU-10-2). This constraint applies for both PWR-AC15/15/5/5V and PWR-AC-75W, in single and redundant power configuration.

This constraint applies also regardless of the normal power consumption of the card, as it is related to the start current at power up.

# **2** Specifications

# **2.1 Optical Characteristics**

# Optical input

Transmission circuit fibre:	9/125um Single Mode
Sensitivity	Better than –25dBm
Optical wavelength	1200nm – 1610nm
Detector damage threshold	> +1dBm
Max input power	0dBm
Connector	SC/UPC
<b>Optical Output</b> Transmission circuit fibre	9/125um Single Mode
Light source	DFB DWDM Laser
Optical wavelength	1530.33nm - 1561.41nm, 40 C-band DWDM channels acc. to ITU-T G.694.1
Channel spacing	100GHz
Power output	0dBm (+5dBm for high power version)
Extinction ratio	> 10:1

### 2.2 Ethernet


10BaseT/100BaseTx/1000BaseT on RJ-45 connectors. Compliant with IEEE 802.3, IEEE 802.3u, IEEE 802.3ab and IEEE 802.3z. Auto speed sensing and MDI/MDI-X.

## 2.3 General

Power	+5V DC/2.5W and +15V DC / 0.5W
Control	Control system for access to setup and module status with BITE (Built-In Test Equipment)

# **3** Configuration

ETH1000-D can be configured by DIP or from Flashlink GYDA-SC.

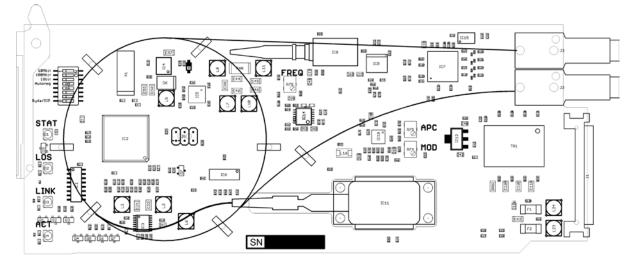

### 3.1 DIP control

The tables below explain the functionality of the dipswitches.

- # Description
- 1. Enable 10Base-T
- 2. Enable 100Base-T
- 3. Enable 1000Base-T
- 4. Auto- negotiation on 1000Base-X
- 5. Reserved
- 6. Reserved
- 7. Reserved
- 8. GYDA override/DIP

When DIP switch 1, 2 and 3 are all on or off, speed is set to auto.

DIP switch 1 enables/disables 10Base-T electrical connection.

DIP switch 2 enables/disables 100Base-T electrical connection.

DIP switch 3 enables/disables 1000Base-T electrical connection.

DIP switch 4 enables/disables auto-negotiation on the optical connection, 1000Base-X. When connecting ETH1000-D to ETH1000MC, auto-negotiation must be disabled. Using two ETH1000-Ds, these DIPs must be in the same situation.

Dip 5, 6 and 7 are reserved.

Dip 8 sets if GYDA-SC is able to configure or not. When GYDA-SC override is set, the actual setting can be read by using the info command (se GYDA-SC user manual for details).

### 3.2 GYDA-SC control

Latest configuration from GYDA-SC is stored local on card. This prevents configuration loss during power recycling.

The card supports Flashlink protocol v4.0.

#### 3.2.1 Block descriptions

Supported block command.

3.2.1.1 Laser <identifier> ::= 'lsr' <status> ::= 'D' [<wavelength>'nm'] [<power>'dBm'] ['on'|'off'] ['ok|fail'] ['tempfail'|'stab'] <block command> ::= <operation> <operation> ::= 'on'|'off'

#### 3.2.1.2 PIN

<identifier> ::= 'pin' <status> ::= ['cd'|'ncd']

#### 3.2.1.3 Voltage

<identifier> ::= 'pwr' <status> ::= [<nominal voltage>'Vnom'] [<voltage>]

#### 3.2.1.4 General output

<identifier> ::= 'gpi' <status> ::= ['out'] ['act'|'inact'] ['thru'] ['id' '"'<GPI identifier>'"'] <block command> ::= <set state> <set state> ::= 'act'|'inact'|'thru'

#### 3.2.1.5 Ethernet port


<identifier> ::= 'ethp' <status> ::= ['dis'|'en'] ['cd'|'ncd'] [('10'|'100'|'1000') ('man'|'auto')] [('full'|'half') ('auto')] [('mdi|mdix') ('auto')] [('mas'|'sla') ('auto')] <block command> ::= 'dis'|'en'| <speed mode> <speed mode> ::= 'speed' '10'|'100'|'1000'|'auto'

#### 3.2.1.6 Misc

<identifier> ::= 'misc' <status> ::= ['prog'|'fin'] ['ovr']

# **4** Connector module

The ETH1000D has a dedicated connector module: ETH1000-C1. This module is mounted at the rear of the sub-rack. The module is shown in the figure below.

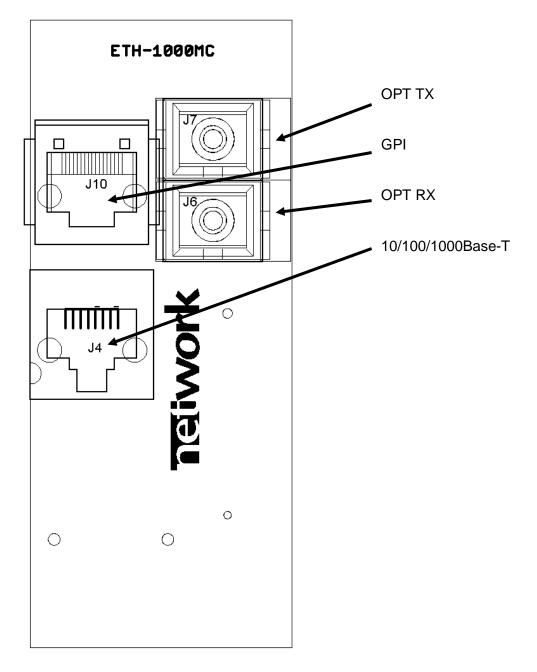

### 4.1 Mounting the connector module

The details of how the connector module is mounted, is found in the user manual for the subrack frame FR-2RU-10-2.

This manual is also available from our web site:

http://www.nevion.com/.

## 4.2 Terminal format support

The different input and output ports on ETH1000D can support a number of formats. The table below shows the input and output signals on the back plane.

#### Terminal format support:

Terminal	Function	Supported Format	Mode
OPT RX	Optical input	1000Base-X	Input
OPT TX	Optical output	1000Base-X	Output
1000Base-T	Electrical input	10/100/1000Base-T	In/output
GPI ALARM	Open Collector Alarms	Wired alarms	OC Output

# 5 Module status

The status of the module can be monitored in three ways.

- 1. GYDA-SC System Controller (optional).
- 2. GPI at the rear of the sub-rack.
- 3. LED's at the front of the sub-rack.

Of these three, the GPI and the LED's are mounted on the module itself, whereas the GYDA System Controller is a separate module giving detailed information on the card status. The functions of the GPI and the LED's are described in sections 5.2 and 5.1. GYDA-SC is described in a separate user manual

### 5.1 Front panel – Status monitoring

The status of the module can be easily monitored visually by the LED's at the front of the module. The LED's are visible through the front panel as shown in the figure below.

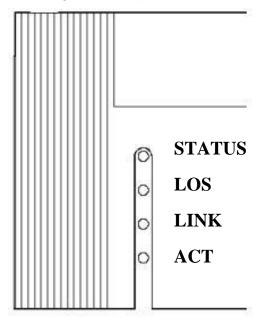


Figure 7: Front panel indicators for the ETH-1000-D.

ETH-1000D has 4 LED's each showing a status corresponding to the GPI pinning.

Diode \ State	Red LED	Green LED	Orange LED	No light
Status	Module is faulty, or module is initializing.	Module is OK Module power is OK	Laser off	Module has no power
LOS	No optical signal	Optical signal		Module has no power
LINK	No 10/100/1000Base- T link	10/100/1000Base- T link		No link
ACT		Ethernet traffic		No Ethernet trafic

### 5.2 GPI Alarm – Module status outputs

These outputs can be used for wiring up alarms for third party control systems. The GPI outputs are open collector outputs, sinking to ground when an alarm is triggered. The GPI connector is shown in figure below.


#### **GPI** pinning

Signal	Name	Pin #	Mode
Status	General error status for the module.	Pin 1	Open Collector
LOS	Loss of optical signal	Pin 2	Open Collector
LINK	Ethernet electrical link	Pin 3	Open Collector
LASER	Laser fail	Pin 4	Open Collector
Ground	0 volt pin	Pin 8	0V.

#### **Electrical Maximums for GPI outputs**

Max current: 100mA

Max voltage: 30V

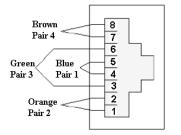

# 6 Laser safety precautions

Guidelines to limit hazards from laser exposure.

All the available EO units in the Flashlink range include a laser.

Therefore this note on laser safety should be read thoroughly.

The lasers emit light at 1310 nm or 1550 nm. This means that the human eye cannot see the beam, and the blink reflex cannot protect the eye. (The human eye can see light between 400 nm to 700 nm).

A laser beam can be harmful to the human eye (depending on laser power and exposure time), therefore:

Be careful when connecting / disconnecting fibre pigtails (ends).

Never look directly into the pigtail of the laser/fibre.

Never use microscopes, magnifying glasses or eye loupes to look into a fibre end.

Use laser safety goggles blocking light at 1310 nm and at 1550 nm

Instruments exist to verify light output power: Power meters, IR-cards etc.

#### **Flashlink features:**

All the laser module cards in the Flashlink product range, are Class 1 laser products according to IEC 825-1 1993, and class I according to 21 CFR 1040.10 when used in normal operation.

More details can be found in the user manual for the FR-2RU-10-2 frame.

Maximum output power<sup>1</sup>: 5 mW.

Operating wavelengths: > 1270 nm.





<sup>&</sup>lt;sup>1</sup> Max power is for safety analysis only and does not represent device performance.

### General environmental requirements for Nevion equipment

- 1. The equipment will meet the guaranteed performance specification under the following environmental conditions: 0°C to 40°C
- Operating room temperature range: -
- Operating relative humidity range: <90% (non-condensing) -
- 2. The equipment will operate without damage under the following environmental conditions:
  - Temperature range: -
  - -Relative humidity range:
- -10°C to 55°C
- <95% (non-condensing)

# **Product Warranty**

The warranty terms and conditions for the product(s) covered by this manual follow the General Sales Conditions by Nevion, which are available on the company web site:

### www.nevion.com

Rev. 2

# Appendix A Materials declaration and recycling information

### A.1 Materials declaration

For product sold into China after 1st March 2007, we comply with the "Administrative Measure on the Control of Pollution by Electronic Information Products". In the first stage of this legislation, content of six hazardous materials has to be declared. The table below shows the required information.

	Toxic or hazardous substances and elements					
組成名稱 Part Name	鉛 Lead (Pb)	汞 Mercury (Hg)		六价 <del>铬</del> Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
ETH1000-D	0	0	0	0	0	0

O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006.

X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.

This is indicated by the product marking:



## A.2 Recycling information

Nevion provides assistance to customers and recyclers through our web site <u>http://www.nevion.com</u>. Please contact Nevion's Customer Support for assistance with recycling if this site does not show the information you require.

Where it is not possible to return the product to Nevion or its agents for recycling, the following general information may be of assistance:

- Before attempting disassembly, ensure the product is completely disconnected from power and signal connections.
- All major parts are marked or labelled to show their material content.
- Depending on the date of manufacture, this product may contain lead in solder.
- Some circuit boards may contain battery-backed memory devices

### **EC Declaration of Conformity**



#### MANUFACTURER

AUTHORIZED REPRESENTATIVE (Established within the EEA)

MODEL NUMBER(S)

DESCRIPTION

**DIRECTIVES** this equipment complies with

HARMONISED STANDARDS applied in order to verify compliance with Directive(s)

TEST REPORTS ISSUED BY

**TECHNICAL CONSTRUCTION FILE NO** YEAR WHICH THE CE-MARK WAS AFFIXED **TEST AUTHORIZED SIGNATORY** MANUFACTURER



Name Thomas Øhrbom Position QA Director, Nevion Europe (authorized signature)

Nevion Europe AS P.O. Box 1020, 3204 Sandefjord, Norway

Not applicable

ETH1000-D

Gigabit Ethernet Media Converter with DWDM laser

LVD 73/23/EEC EMC 2004/108/EEC

EN 55103-1:1996 EN 55103-2:1996

Notified/Competent Body Report no: Nemko E08462.00 Not applicable

2008

AUTHORIZED REPRESENTATIVE (Established within EEA)

Date of Issue

2008-07-24

Place of Issue

Not applicable

Sandefjord, Norway