


Leg Leveler Instructions


Caution: Before using the Little Giant Leg Leveler, read these instructions as well as those found on the Leg Leveler. Improper use of the Leg Leveler might result in injury. Little Giant Ladder Systems assumes no liability for injury which may result from failure to follow these instructions.

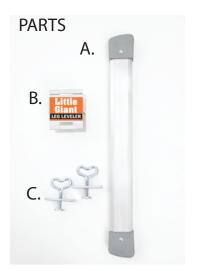

A. Adjustable Leg (20011)

B. I-beam Bracket (20009)


C. Leg Clamps (2) (20013)

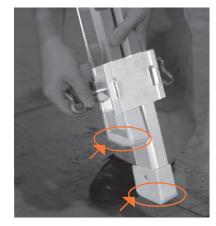

3. Make sure the foot on the adjustable leg and the foot on the outer ladder leg are at the same angle. If the angles are not the same, simply, remove leg clamp, rotate adjustable leg 180 degrees, and then replace Leg Clamp.



1.
The Leg Leveler has two leg clamps. Both are required to attach the I-beam to the outer leg of the ladder and the adjustable leg.

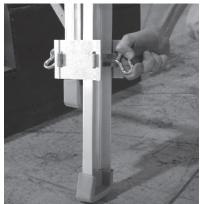

4.
To adjust the height, loosen leg clamp; choose desired height, and retighten leg clamp with firm pressure.
Make sure both leg clamps are tight and secure.



2.
To mount the Leg Leveler on your Little Giant Ladder, loosen the clamp from the I-beam. Slide I-beam bracket onto outer ladder leg and then tighten the clamps. The I-beam should be placed as close to the ladder foot as possible.



5.
Ensure that the ladder rungs are level to the ground (not in a tilting position) before using. Adjust the Leg Leveler to ensure correct vertical positioning.

Little Giant Solutions 1198 N. Spring Creek Place Springville, UT 84663

Giant Solutions Toll Free: 800-453-1192
ng Creek Place Phone: 801-489-3684
ille, UT 84663 Fax: 801-489-3685
www. LittleGiantLadders.com

LITTLE GIANT® LEG LEVELER WARRANTY

Wing Enterprises, Inc. warrants each new Leg Leveler, to original purchaser thereof, to be free from defects in workmanship and materials when operated under normal conditions and maintained properly. This warranty covers all parts of the Work Leg Leveler.

This warranty shall be in effect for a period of 1 year from date of purchase. This shall be in lieu of any other warranty, expressed or implied, including, but not limited to, any implied warranty of merchantability or fitness for a particular purpose. Certain states do not allow limitations on how long an implied warranty lasts. The above limitation may not apply to you.

Wing Enterprises, Inc. will repair or replace, at its option and without cost to the original purchaser, any Leg Leveler which has been found defective and is within the period of warranty. All freight to and from factory is to be paid by the customer. The factory address is: Wing Enterprises, Inc., 1198 N. Spring Creek Place, Springville Utah 84663.

The liability of Wing Enterprises, Inc. under this warranty shall be limited solely to repair or replacement of the Leg Leveler within the warranty period. Wing Enterprises, Inc., shall not be liable, under any circumstances, for consequential or incidental damages, including, but not limited to, personal injury or labor costs. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives the original purchaser specific legal rights and you may have other rights which vary from state to state.

Under no circumstances will Wing Enterprises, Inc., be responsible for any expense in connection with any repairs made by anyone other than the factory or authorized service station unless such repairs have been specifically authorized in writing by Wing Enterprises, Inc.