

www.nobleboatsinternational.com

Noble Boats

INTERNATIONAL

WET SUIT BOARD

ARRIVE safely by....
A Noble Inflatable Stand Up Paddle Board

Noble Boats INFLATABLE STAND UP PADDLEBOARD

Thank you for choosing a Noble Boats Stand Up Paddleboard

The Noble Boats Stand Up Paddle Development Team has worked tirelessly developing a line of boards that allows everyone the opportunity to explore and experience the sport of stand up paddle boarding. From the elite racer to the paddle surfer to the family that simply enjoys being on the water, Noble's line up of high quality stand up paddler boards offers a board to for your stand up paddle lifestyle.

Noble's simple goal of making things better has never changed, and remains at the core of our team of professional riders and board designers.

GENERAL PADDLING INFORMATION

Safety

Paddle sports can be dangerous and physically demanding. Users of this product should understand that participating in stand up paddling can result in serious injury or death. Observe all applicable watercraft laws, and use common sense.


Safety Check list

- Always paddle with others.
- Always wear a leash attaching you to the board.
- Wear a Coast Guard approved personal flotation device
- Always wear protective clothing.
- Always paddle in safe conditions.
- Be aware of changing weather conditions.
- Avoid paddling in off shore wind or windy conditions.
- Do not exceed your paddling ability; be aware of your limitations.
- DO NOT use alcohol or mind altering drugs prior to or while using this product.

How to Use

- Assume a comfortable stance with your feet positioned roughly shoulder width apart knees slightly bent in a relaxed upright stance, shoulders back, looking straight ahead.
- Paddle grip. Place your top hand on end of handle and your bottom hand approximately 24" down shaft of paddle. Paddle in a comfortable forward motion, with arms slightly bent.
- To turn left concentrate paddling on the right hand side of the board to turn right concentrate paddling on the left hand side of the board.

Correct Paddle Position

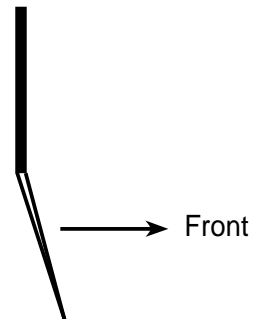

INFLATING YOUR BOARD

Follow the instructions below for valve operation and correct inflation and deflation procedures.



Valve Operation: The board's inflation valve is located near the nose of the board.

To close off the valve for inflation, make sure that the center valve pin is in the "up" position. If it is in the "down" position, press down on the valve pin and turn it counterclockwise until it pops up.



To open the valve for deflation, press down on the valve pin and turn it clockwise so it locks down. **Be careful of any sand or debris around the valve area when deflating as small particles could become airborne with the release of air pressure!**



Always lock the valve cover over the valve stem when in use. This will prevent accidental air release and entrance of any particles into the air chambers.



Board Inflation Steps

1. Make sure that the valve is in the closed position (valve pin up)
2. Make sure the pump hose is connected to the "inflate" outlet
3. Connect the pump nozzle into the valve receptacle.
4. Start pumping air into the board by sliding the pump piston up and down.

Tip: If the pump piston starts to squeak, apply some spray silicone on the piston shaft.



Board Deflation Steps

1. Clear any water or debris out of the valve areas.
2. Slowly press down on the valve stem to start letting air out of the board. There will be an initial burst of air, but that will slow down very quickly. Once the air flow has slowed down, press the valve stem all the way down and turn it clockwise to lock it into the "open" position.

Inflation Tips and Precautions

- The board can be inflated either with our hand pump or an electric pump. The electric pump can inflate the board to a moderate pressure and save a lot of time with about 90% of the required air volume. You will need to use your hand pump to inflate the chambers to the correct pressure.
- Do not use an air compressor. Damage to your board caused by over inflation from an air compressor is not covered by your warranty.
- After 2 or 3 days there may be a small decrease of pressure due to temperature change. If so, add a few pumps of air.
- Before undertaking a long paddle, inflate the board for a full 24 hours to be sure the board is airtight. If you are seeing a consistent decrease in air pressure, follow the instructions for leak detection in the board repair section of this manual.
- Do not over-inflate the board. A max pressure of 10 - 12 PSI is adequate. The easiest gauge of a good working pressure is to have the chambers inflated to a firm pressure when you press on them.
- Do not pump to a high pressure and let the board sit out in the sun. If the board is going to be in a warm environment, slightly under-inflate the board and allow the heat from the sun to increase the internal pressure. When paddling, the colder temperature of the water may cause a slight loss in chamber pressure. It is a good idea to carry a pump with you so that you can add some air to the chambers if necessary.

Center Fin Installation



1. Slide fin base into fin box



2. Slide fin all the way to back of the fin box



3. Insert fin retention pin through slot



4. Correct fin installation

BOARD CARE AND STORAGE

Storing Your Inflatable Noble Boat Stand Up Paddleboard

Noble Boats has chosen PVC to provide superior protection from ultraviolet light. However, to ensure extra years of flexibility and bright colors, avoid storing the board where it will be exposed to weather or in direct sunlight. Please review the following list for storage and board care tips.

- Before storing, hose off the board and let it dry completely to prevent mildew buildup.
- Do not use harsh chemicals for cleaning. Most dirt can be removed with a mild soap and fresh water.
- You may store the board inflated or deflated. If you deflate the board, we recommend that you store it in the protective bag that came with the board
- If storing the board outdoors, raise it up off the ground and cover it with a tarp to prevent exposure to the elements
- We do not recommend hanging the board.
- Do not store in extreme conditions (*i.e. above 150F or below -10F*)
- Store in a clean, dry place.

BOARD FOLDING STEPS

The board storage bag is designed to allow you to get your board into the bag as easily as possible with minimal folds. Tip: Ensure the folds are similar or less than the bag width as it will make getting your board into the back pack a lot easier.

Follow the diagram below for the best folding procedures

** Always use the supplied side fin covers to prevent fin damage and bending



STEP 1



STEP 2

STEP 3



LEAK DETECTION AND REPAIR

About PVC

Your new stand up paddleboard is made from a durable PVC. If a tear or puncture does occur, PVC is very easy to repair. Repairs are easily done with your included patch kit. Read the following paragraphs for leak detection and repair tips.

Air leak Detection

If you are losing air pressure, not caused by colder temperatures, check the board for leaks, starting with the valves. A leaking valve is rare, but if you do find a leak we can send you a replacement valve. To locate a leak, we recommend mixing soap and water in a spray bottle. Spray around the valve. If you see bubbles forming, check your valve seating and base and be sure the valve insert is screwed tight. If you continue to have problems it's probably time to order a new valve. Replacement of the whole valve can be done with a simple tool that comes with the replacement valve.

If the board is losing air and all the valves are good, you probably have a small puncture. Small punctures can be repaired easily and permanently. Spray around the inside and outside of the board until air bubbles become visible and mark the position of the leak. If you do not find air bubbles, inflate the board to maximum air pressure and try to listen to find the leak. If you can narrow the area down, return with a spray bottle to identify the source of the leak.

Warrant Registration Form

Noble Boats Stand Up Paddleboards is collecting this information in order to serve our customers better. We will not sell or trade your personal information with any other business or organization. Void in any state where prohibited

• Mail in Registration - Remove completed card at perforation, affix postage and mail

Punctures less than 1/8" in size can be repaired simply without a patch. Deflate your board, then clean and dry the area to be repaired. Apply a small drop of glue to cover the puncture, and let dry 12 hours.

Small Repairs

Your board comes with a repair kit as standard equipment. If you no longer have your repair kit, you can order a new one from your dealer. Cut a piece of repair material large enough to overlap the damaged area by approximately 1/2", and round off the edges. Apply glue to the under side of the patch and around the area to be repaired. Too much glue will interfere with a proper repair. Allow adhesive to become tacky for 2-4 minutes, and then place patch on the damaged area. Use a weight to apply 3-5 lbs. of pressure for 12 hours. After patch has dried, apply glue around the edges for a complete seal (dry for 4 hours).

Large or Difficult Repairs

If you have a difficult repair, give our office a call and we will advise you on the best way to repair it.

Noble Boats International
P.O Box 3279 Putney, New South Wales, 2112 AUSTRALIA
E: enquiries@nobleboatsinternational.com
T: +61 435 837 538
www.nobleboatsinternational.com

NOBLE BOATS STAND UP PADDLEBOARD REGISTRATION AND INFORMATION CARD

First Name _____

Last Name _____

Address _____

City _____ State / Province _____ Zip / Postal Code _____

Country _____ Email _____

Store Where Purchased _____ Date Purchased _____

Model _____

Gender M ___ F ___ Age of Primary User _____

WARRANTY

Noble Boats Stand Up Paddleboards provides a limited one year board and accessories warranty.

Your warranty registration card is packaged with this owner's manual and should be completed and returned within 30 days of the date of purchase. If you need further assistance, contact Noble Boats International Stand Up Paddleboards. To help process any warranty problems, please complete your warranty card on line or mail it directly to Noble Boats Stand Up Paddleboards.

Noble Boats warrants each stand up paddlboard to be free from defects in materials and workmanship for the period listed below. Noble Boats Stand Up Paddleboards will repair or, at its discretion, replace defective parts.

The warranty period for the board is one year

This warranty does not cover:

- Normal wear and discoloration.
- Damage caused by abuse or failure to perform normal maintenance.
- Damage caused by hitting submerged objects or beaching
- Damage caused by mooring or storing board in water.
- Damage caused by alterations or modifications.
- Transportation of board or parts to Noble Boats Stand Up Paddleboards or its dealers.
- Any board used as a rental or placed in commercial service.
- Any other consequential damage, incidental damages or incidental expenses, including damage to property. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

To Obtain Warranty Service: Within 30 days of discovering a defect, take your board, along with the proof of purchase (sales receipt) to the authorized Noble Boats Stand Up Paddleboard dealer from whom you purchased your board, unless you have moved or are traveling. In that case, take it to the nearest authorized Noble Boats Stand Up Paddleboard Dealer.

Implied Warranties: Any implied warranties, including implied warranty of merchantability and fitness for a particular purpose, shall be no longer than the duration of this expressed warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Noble Boats Stand Up Paddleboards makes no expressed warranties in addition to this limited warranty. Noble Boats Dealers have no authority to make warranties on behalf of Noble Boats Stand Up Paddleboards in addition to, or inconsistent with, those stated herein.

To the extent any provision of this warranty is prohibited by Federal, State or Municipal law and cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights.

Place
Postage
Here

NOBLE BOATS STANDUP PADDLEBOARDS
PO BOX 3279
PUTNEY, NSW 2112
AUSTRALIA