



Loving music

Concept

User manual



Made in Germany

Hi-Fi Components **clearaudio electronic[®]** GmbH

Spardorfer Str. 150 ● D-91054 Erlangen ● Tel. +49(0)1805/059595 ● FAX +49(0)09131/51683
www.clearaudio.de ● info@clearaudio.de ● copyright clearaudio© 2010

Version1_Musical Surroundings_E

Dear **clearaudio** customer,

Thank you for purchasing the **clearaudio Concept** – turntable.

The **clearaudio Concept** - turntable sets a new timeline in turntable manufacturing. Highest demands and Made in Germany, combined with technology and a timeless design start a New Era.

The *Concept* is equipped with the innovative *Verify*-tonearm using a friction free magnetic bearing technology.

Optionally, a high quality moving magnet or moving coil cartridge is completing this set up. All parameters have been already adjusted at the **clearaudio** factory, including the tracking- and antiskating force.

This genuine, timeless and modern design guarantees a flawless musical enjoyment for decades.

Please read this instruction manual carefully, to avoid any damages or loss of warranty. This manual will help you for an easy set-up and guarantees the highest pleasure for a long time.

We wish you a lot of listening pleasure with your new **clearaudio Concept** - turntable.

clearaudio electronic GmbH

This section must be read before any connection is made to the mains supply.

CE-MARKING

CE The **clearaudio Concept** meets the regulations concerning electromagnetic disturbance (EMC) and low-voltage appliances.

EQUIPMENT MAINS WORKING SETTING

Your clearaudio product has been prepared to comply with the household power and safety requirements that exist in your area. **This product can be connected to INPUT: 100 V – 240 V ~ / 50 – 60 Hz / 150 mA; OUTPUT: 12 V = / 450 mA**

COPYRIGHT

Recording und reproduction of any sound-material may require the consent of the creator. Please acknowledge the information given in the

- Copyright Act 1956,
- Dramatic and Musical Performers Act 1958,
- Performers Protection Acts 1963 and 1072,
- any more recent legal regulations.


Contents	Page
1. Packing overview	3
2. Parts list	3
3. Set up	4
4. Cartridge mounting	6
5. Service	8
6. Technical data	9
Warranty information	10

1. Packing overview


clearaudio has developed a special and secure packing for your *Concept* - turntable that ensures safe transportation.

Please keep this original packing, if you need to ship the turntable.

1. First layer:

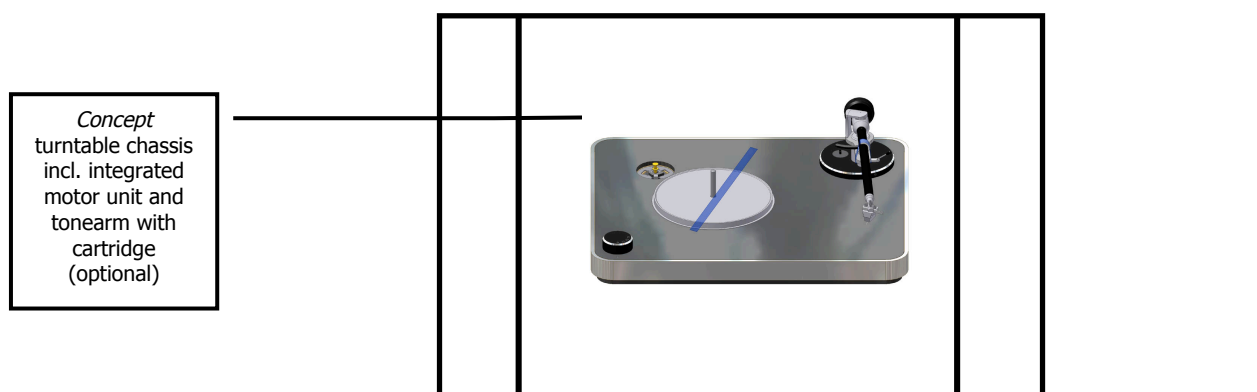

2. Second layer

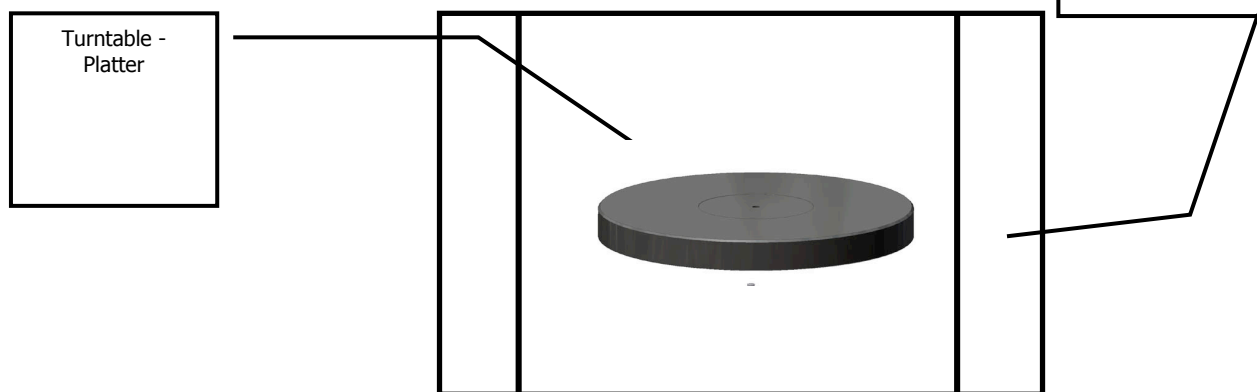

2. Part list

1.	Accessories: Level gauge, screwdriver, wrenches (No. 2& 2.5), drive belt, power supply (incl. adaptors: EU, UK; US, AUS), User manual, Quality Card	3.	Turntable - platter
2.	Turntable chassis with tonearm and cartridge (optional)		

3. Set up

The set up of the *Concept* - turntable is easy as the turntable and tonearm are pre-assembled. If you chose the model with included cartridge, it has been mounted and all parameters have been already adjusted and tested at the **clearaudio** factory. If not, refer the section 4 on cartridge mounting and tonearm adjustment.

The *Concept* - turntable requires a place for set-up of at least 17 inch x 14 inch.

1.)

Please take first the *Concept* - turntable chassis out of the package and place it on a suitable surface. After that please take the accessory box out of the package.

2.)

Please remove the adhesive security tape from the sub-platter.




Pic. 2: Removing the security tape

3.)

Take the drive belt out of the accessory box and place it around the sub-platter and around the motor pulley.

4.)


Take the platter out of the package and place it carefully with both hands onto the shaft.

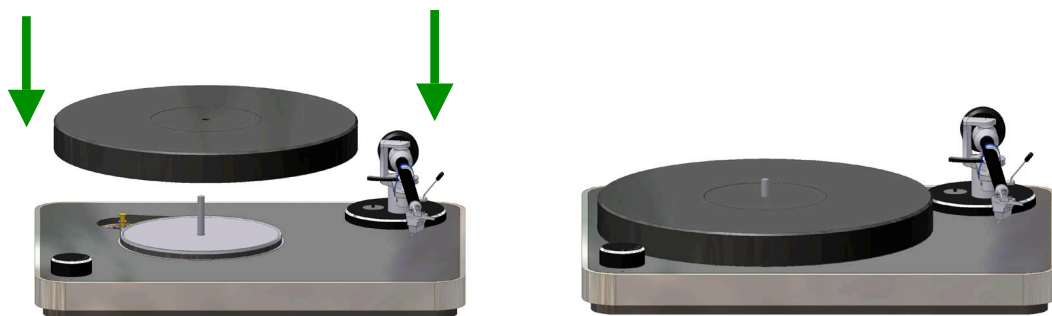

Pic. 3: Set up of the platter

5.)

Now remove carefully the adhesive security tape from the tonearm and the cartridge (optional).

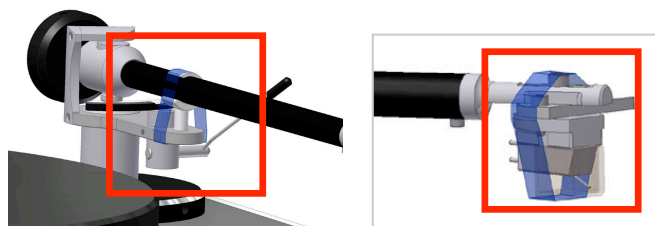

Pic. 4: Removing the tapes

6.)The following adjustment is very important:


Place the clearaudio level gauge on the platter as in picture 5.




Pic. 5: Alignment of the turntable

Should the bubble of the level-gauge not be in the center of the black circle, please check that the surface under the turntable is level. You can achieve the perfect level position by adjusting the feet of your *Concept* – turntable. First loosen the lock screw and turn the feet clockwise or counter clockwise till you reach the level position. Please fix the ideal position of the spikes by using the lock screw again.

Only if the turntable is in the ideal level position you will get the best sound out of your *Concept* - turntable.

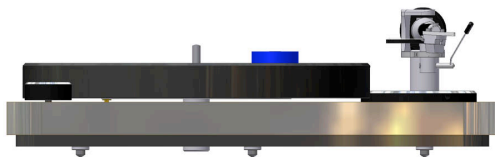

Pic. 6: Height adjustment of the feet

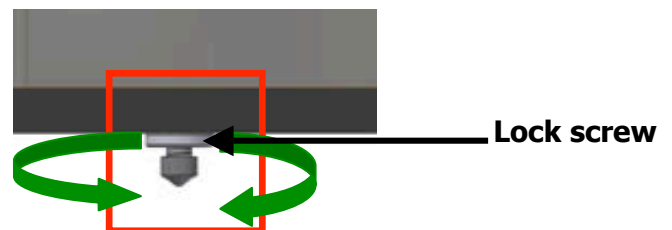

7.)

Connect the one side of the supplied external Power supply to the socket on the backside of the *Concept* – turntable and the other side to a live AC outlet. After that connect the tonearm to your phono-stage.(More information on phono-preamplifiers can be found on our Website: www.musicalsurroundings.com).



Pic. 7: Connecting the Power supply

Your *Concept* - turntable is now completely set up and ready to play.

We wish you a lot of listening pleasure!

4. Cartridge mounting

! Please pay attention during every step to avoid damaging the cartridge!

! Please refer to the cartridge manufacturer's manual during installation and follow the appropriate instructions.

1.)

Physically mount the cartridge using mounting hardware supplied with your cartridge. Locate and rotate it as pictured. Fine adjustments will follow later.



Pic. 8: Cartridge mounting

2.)


Connect the headshell wires carefully using tweezers or fine needle-nose pliers. The headshell wires (cartridge connection leads) are colour coded according to the international standard:

Colour code of the Concept tonearm wire:

Signal left channel (L+)	→	white
Signal ground left channel (L -)	→	blue
Signal right channel (R+)	→	red
Signal ground right channel (R -)	→	green

3.) VTF

Now adjust the tracking force of the cartridge. Please follow the instructions provided by the cartridge manufacturer.

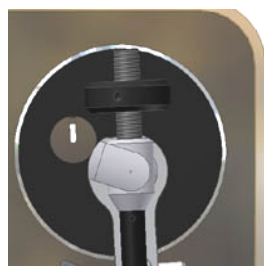

You can adjust the force by turning the tonearm's counterweight on the threaded bolt. For adjusting the tracking force, you can use tools like the **clearaudio** *Smart Stylus* or *Weight Watcher* gauges. For more information on other Clearaudio setup tools, please contact your local dealer or Musical Surroundings directly. It is recommended to place your stylus gauge directly on the Concept platter to most accurately set the Vertical Tracking Force.

4.) VTA

For the next step, place an LP (180 gram preferred) on the platter. Now you can remove the stylus protector from your cartridge.

Next, using the cuing lever, lower the cartridge onto the middle of the turntable platter. When looking from the side, check to see that the upper edge of the tonearm tube is parallel to the surface of the record. If necessary you can adjust the height of the tonearm. To do this, hold the tonearm and use the key to loosen the arm locking screw on the side of the black circular tonearm mounting plate. Adjust the height of the tonearm accordingly and re-tighten the screw.

5.) Azimuth


Next, use the cueing mechanism to lower the cartridge and check that the upper edge of the cartridge is parallel to the record surface as viewed from the front. This adjustment has been pre-set at the Clearaudio factory. Although it is rarely necessary, you can adjust the cartridge azimuth. Carefully loosen the small screw on the bottom side of the tonearm tube near the headshell (Caution: don't unscrew the screw completely!). Now you can twist the headshell to adjust the azimuth of the cartridge. When you find the right position, carefully lock the small screw while holding the headshell steady.

! Don't adjust the headshell when the cartridge is lowered onto the surface of the record. It is necessary to lift the cartridge from the record before you can make adjustments.

6.) Overhang & Offset


For the final set-up of the tonearm, you need a cartridge alignment gauge. Place the gauge over the spindle of the turntable platter and turn the platter into the position as shown in picture 9.

Lower the cartridge and place the stylus tip of the cartridge on the reference point on the alignment gauge. Make sure that the cartridge cantilever is absolutely parallel to the marking lines printed on the cartridge alignment gauge.

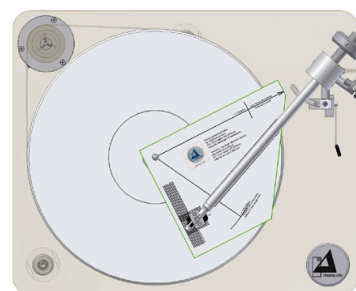


Picture 9: Alignment of the cartridge

To adjust the position of the cartridge, loosen the screw on the top of the headshell and move the cartridge into the correct position (picture 10) by sliding forward or back and rotating. Make sure the stylus tip of the cartridge is on the reference point on the alignment gauge, the cartridge cantilever is absolutely parallel to the short marking lines printed on the cartridge alignment gauge and that the front edge of the cartridge is parallel to the long marker lines on the cartridge alignment gauge. Hold the cartridge in the proper position and tighten the screw on the top of the headshell. While making the final adjustments to the tonearm and cartridge, always look down at the alignment gauge from directly above to avoid any optical parallax errors.

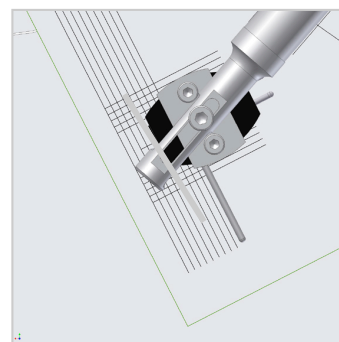

Picture 10: Fine alignment

If the installation has been done correctly, the diamond tip should be on the reference point, the cantilever should be parallel to the short marking lines on the gauge, and the front edge of the cartridge should be parallel to the long lines on the gauge (as in picture 11). Re-check your tracking force as this may have changed during alignment.

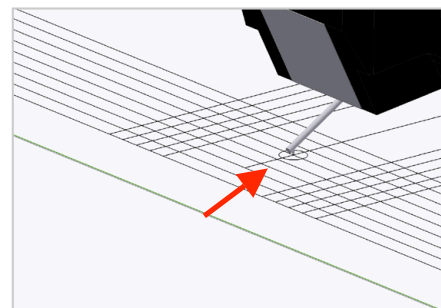

Picture 11: Correct installation

7.) Anti-skating

The *Concept* tonearm comes factory pre-adjusted for medium anti-skate. Underneath the turntable, at the base of the tonearm, is a knob for further adjustment if needed. Observe the calibration marking as a reference point. Turn knob clockwise to increase, counter-clockwise to decrease anti-skate. Do not turn more than 1 complete rotation from reference point to avoid damage to tonearm bearing (not covered by warranty).

The general set-up is now finished.

5. Service

If any service or repair on a **clearaudio** product is necessary, service should be done by authorized personnel only. Please contact your dealer first then the US distributor: Musical Surroundings at 510 547-5006 or info@musicalsurrroundings.com

In case any repair is needed, the clearaudio *Concept* -turntable may need to be sent to your authorized dealer or directly to Musical Surroundings. Please contact your dealer to begin the process of obtaining assistance and, if needed, a Return Authorization (RA) number.

Transportation advice:

If any transportation of the *Concept* - turntable should be necessary, please always remove the turntable platter and fix the sub-platter as well as the tonearm and the cartridge stylus protection. Otherwise serious damage can occur!

PLEASE RETAIN ALL ORIGINAL PACKAGING. You will need it if your turntable needs to be transported and/or shipped. The 2 year warranty can only be honoured if the turntable is returned in the original Clearaudio packaging. If you repackage the turntable, please pack the parts in the reverse order that they were taken out of the box.

Any further questions you may have about this turntable should be directed to

Musical Surroundings Inc.
5662 Shattuck Ave Oakland, CA 94609
tel 510 547-5006, fax 510 547-5009
www.musicalsurrroundings.com
info@musicalsurrroundings.com

or directly to **clearaudio** at

clearaudio electronic GmbH
Spardorfer Str 150
91054 Erlangen
Germany

Tel/Phone: +49-(0)1805/059595

www.clearaudio.de
info@clearaudio.de

6. Technical data

Construction:	<ul style="list-style-type: none"> - Resonance-optimised chassis - Friction free tonearm with magnetic bearing technology
Speed ranges:	33 1/3, 45 and 78 RPM
Drive unit (motor):	Decoupled DC motor with low noise bearings
Bearing:	Polished and tempered steel shaft in a sintered bronze bushing, runs on a mirror of Teflon
Platter:	Black colored POM, 30 mm thickness
Speed variation:	+/- 0.04 %
Weight:	approx. 7.5 kg incl. motor, tonearm and cartridge
Dimensions:	mm approx. 420 mm x 350 mm x 140 mm inch approx: 16.54 x 13.78 x 5.51
Warranty:	2 years

clearaudio electronic is not responsible for typographical errors in descriptions. Technical specifications subject to change or improvement without prior notice. Availability as long as stock lasts. Copies and imprints- also only in extracts – require written conformation through **clearaudio** electronic GmbH; Germany

May 2010

Warranty

To achieve the full **clearaudio** 2 year warranty, it is necessary that you fill out and send the warranty registration certificate /card and a copy of your sales receipt back to Musical Surroundings, within 30 days after purchase.

Musical Surroundings Inc.
5662 Shattuck Ave Oakland, CA 94609
tel 510 547-5006, fax 510 547-5009
www.musicalsurrroundings.com
info@musicalsurrroundings.com

Otherwise **clearaudio** provides the legal warranty of 1 year.

In the case of return for service, only if the product is returned in it's original packing can **clearaudio** provide the warranty.

WARRANTY TERMS AND CONDITIONS

1. Musical Surroundings warrants the product designated herein to be free of manufacturing defects in material and workmanship, subject to the conditions herein set forth, for a period of 1 year from the date of purchase by the original purchaser. If the purchaser registers the unit with Musical Surroundings by mailing in the warranty card, together with a copy of the bill of sale, within 30 days of the date of purchase, said purchaser will be registered for an extended service contract. The extended service contract extends to a period of 2 years from the date of purchase by the original purchaser or no later than 3 years from the date of shipment to the authorized Musical Surroundings dealer, whichever comes first.

2. CONDITIONS - This warranty is subject to the following conditions and limitations. The warranty is void and inapplicable if the product has been used or handled other than in accordance with the instructions in the owner's manual, abused or misused, damaged by accident or neglect or in being transported, or the defect is due to the product being repaired or tampered with or modified by anyone other than Musical Surroundings or their authorized repair stations. To obtain warranty service, you must first contact Musical Surroundings at 510 547-5006 or info@musicalsurrroundings.com to obtain a Return Authorization (RA) number. The product must be packed in its original carton and returned to Musical Surroundings or authorized repair station by the customer at his or her sole expense. A returned product must be accompanied by a written description of the defect and a photocopy of the original purchase receipt. This receipt must clearly list model and serial number, the date of purchase, the name and address of the purchaser and authorized dealer and the purchase price. Musical Surroundings reserves the right to modify the design of any product without obligation to purchasers of previously manufactured products and to change the prices or specifications of any product without notice or obligation to any person.

3. REMEDY - In the event the above product fails to meet the warranty, and the above conditions have been met, the purchaser's sole remedy under the limited warranty shall be to return the product to Musical Surroundings where the defect will be rectified without charge for parts or labor.

4. LIMITED TO ORIGINAL PURCHASER - This warranty is for the sole benefit of the original purchaser of the covered product and is NOT TRANSFERRABLE.