


# **ProControl**

**User Manual** 

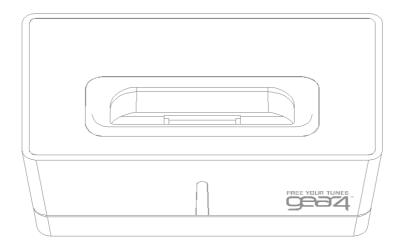

Free Your Tunes @ www.gear4.com

Thank you for purchasing the ProControl from GEAR4.



#### **ProControl Features**

- Works with any iPod with a dock connector
- Play music, pictures and video from your iPod to your TV
- Watch slideshows with your music on your TV
- Connect your iPod using the dock to your home stereo
- Charges your iPod battery when docked
- Remote control with 14 functions including video and photo slide
- Charge, sync and dock your iPod with your Mac or PC via USB\*

## **Technical Specification**

Power adaptor input: 100-240VAC - 12V, 1.2A (max)




<sup>\*</sup>Additional USB cable required



#### What can ProControl do?

- Connect the AC power adapter to your ProControl and charge your iPod when it is docked.
- ProControl allows you to connect your iPod to your home Stereo or speakers using the audio cables provided.
- Navigate and control your iPod from a distance using your remote control.
- View your photos on the TV using the AV cable provided (iPods with a colour screen only).
- View your videos on the TV using the AV cable provided (iPods with video capability).
- Connect the Dock to your computer using a USB cable\*. Once the iPod is placed in the ProControl, it will sync with your computer and charge the battery. No more reaching behind the computer.

#### **About the ProControl**

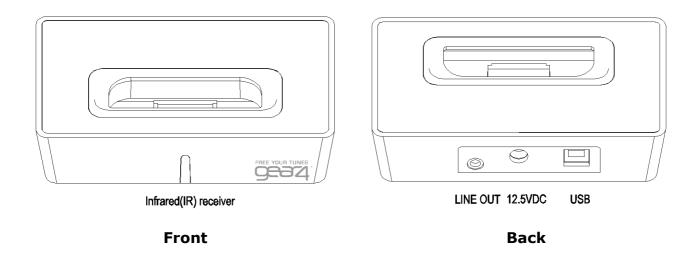

ProControl comes with all the iPod adapters you will need, allowing you to dock your iPod comfortably and without risk of damage. Simply place the appropriate adapter in the dock and then insert your iPod. You can simply pop out the adapter if you need to change the iPod model.

<sup>\*</sup>Not included



#### **Setting up the ProControl**

- First, plug the AC adapter into the back of the ProControl
- Place your iPod with the appropriate adapter into the ProControl
- Turn on the ProControl using the infra red remote
- When it is on, the ProControl will display a blue light at the front. A white light means that the unit is on standby.
- To sync your iPod with the computer simply connect a USB cable\* to your ProControl and then the computer.


#### Connecting your ProControl to your TV or video device

- Ensure your TV has the standard RCA ports.
- Place your iPod with a colour screen or video capability in the ProControl Dock.
- Connect the AV cable to the back of the ProControl (Line out).
- Connect the appropriate colour cable ends to the RCA ports.
- To view the photos and video on the TV, please read the documentation that came with your iPod. Or visit our support section on our website.

<sup>\*</sup>Not included



## The IR remote control

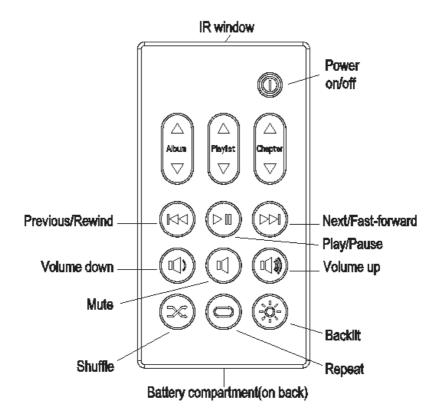


The remote is perfect for when you wish to connect your iPod to the home stereo, TV or just a set of speakers.



### Replacing the remote control battery

Battery type: 3V, type CR2032 or equivalent

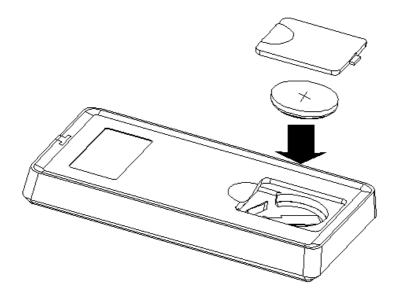

To remove the battery simply remove the battery cover and pop it out. Make sure the positive side faces up.

**Caution:** There is a risk of explosion if the wrong type of battery is used. Please dispose of batteries according to your local environmental laws and guidelines.

## **Notice of Usage**

This product should be kept dry at all times and only used indoor.

Keep out of direct sunlight or high temperature environments.

Unplug the AC power adapter/USB/AV cable or your iPod when it's not in use.

If you have a reoccurring problem with the product, please visit our website at:

www.gear4.com