


6 oz. Kettle Poppers
with **Love My Popper Kettle**


Part No. 49217EX
Revised June 1996


Instruction Manual
Export Models #1871EX & #2660EX



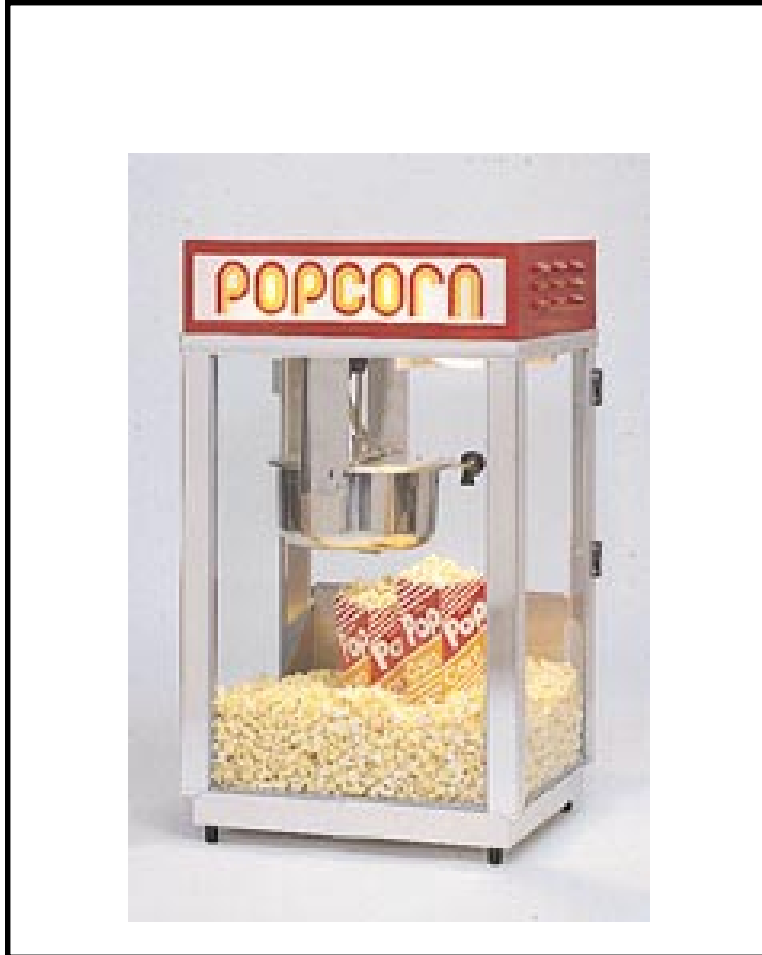

 **GOLD MEDAL®**
FUNFOOD EQUIPMENT & SUPPLIES
Cincinnati, OH 45214-2089 USA


SAFETY PRECAUTIONS

	⚠ CAUTION
	<p>This equipment is designed and sold for commercial use only. This equipment is not to be used by the consumer in home use. Do not allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all installation instructions before operating the equipment.</p>

	⚠ WARNING
	<p>Always wear safety glasses when servicing this equipment.</p>

	⚠ WARNING
	<p>To avoid serious burns, do NOT touch the kettle while it is hot.</p>

	⚠ WARNING
	<p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.</p>

	⚠ DANGER
	<p>Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

INSTALLATION

Your new Gold Medal Six Ounce Kettle Popcorn Machine requires no additional assembly. Remove all packing material and tape before starting operation.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

There are three switches on the popper.

LIGHT AND WARMER SWITCH

Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH

Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH

Turns on the heat element

AMOUNT OF POPCORN AND OIL

Your new popper is equipped with a six ounce (177 ml) corn measure cup. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer. Coconut oil does not leave black deposits in your kettle like other oils.

Corn charge - 6 oz. (177 ml)

Oil charge - 1.6 to 2.0 oz. (60 ml)



Flavacol - 1 tablespoon (8 cc)

POPPING INSTRUCTIONS



1. Turn KETTLE HEAT and KETTLE MOTOR switch ON.
2. Make test pop with 3 kernels of corn and 1 oz. (30 ml) of oil.
3. Load pre-measured popcorn and oil pouch into kettle.
4. When corn has popped, dump kettle.
5. Repeat cycle starting with Item #3; always pop 3-5 batches for best popcorn.



CARE AND CLEANING

	<p> DANGER</p> <p>Unplug your machine before cleaning glass panel and case. Never immerse the kettle in water. This will ruin the electrical components and automatically void the guarantee.</p>
---	---

Each time you finish a series of poppings, wipe the outside of the kettle with a soft cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.

Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also. **NOTE:** Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.

MAINTENANCE INSTRUCTIONS

	⚠ CAUTION THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.
	⚠ WARNING Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.
	⚠ DANGER Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Unplug your machine before servicing.

ACCESSORIES

Description	Part Number
6 oz. Corn Measure Cup	49049
A-Scoop	47145
Small Plastic Flavacol Cup	47678
Small 2 oz. (¼ cup oil) Measure	

ORDERING SPARE PARTS


1. Identify the desired part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity desired.
3. Please include your model name and machine serial number (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

or, place orders at:

(513) 769-7676
Fax: (513) 769-8500
E-mail: goldme19@eos.net

6 oz. KETTLE POPPER CABINET ASSEMBLY

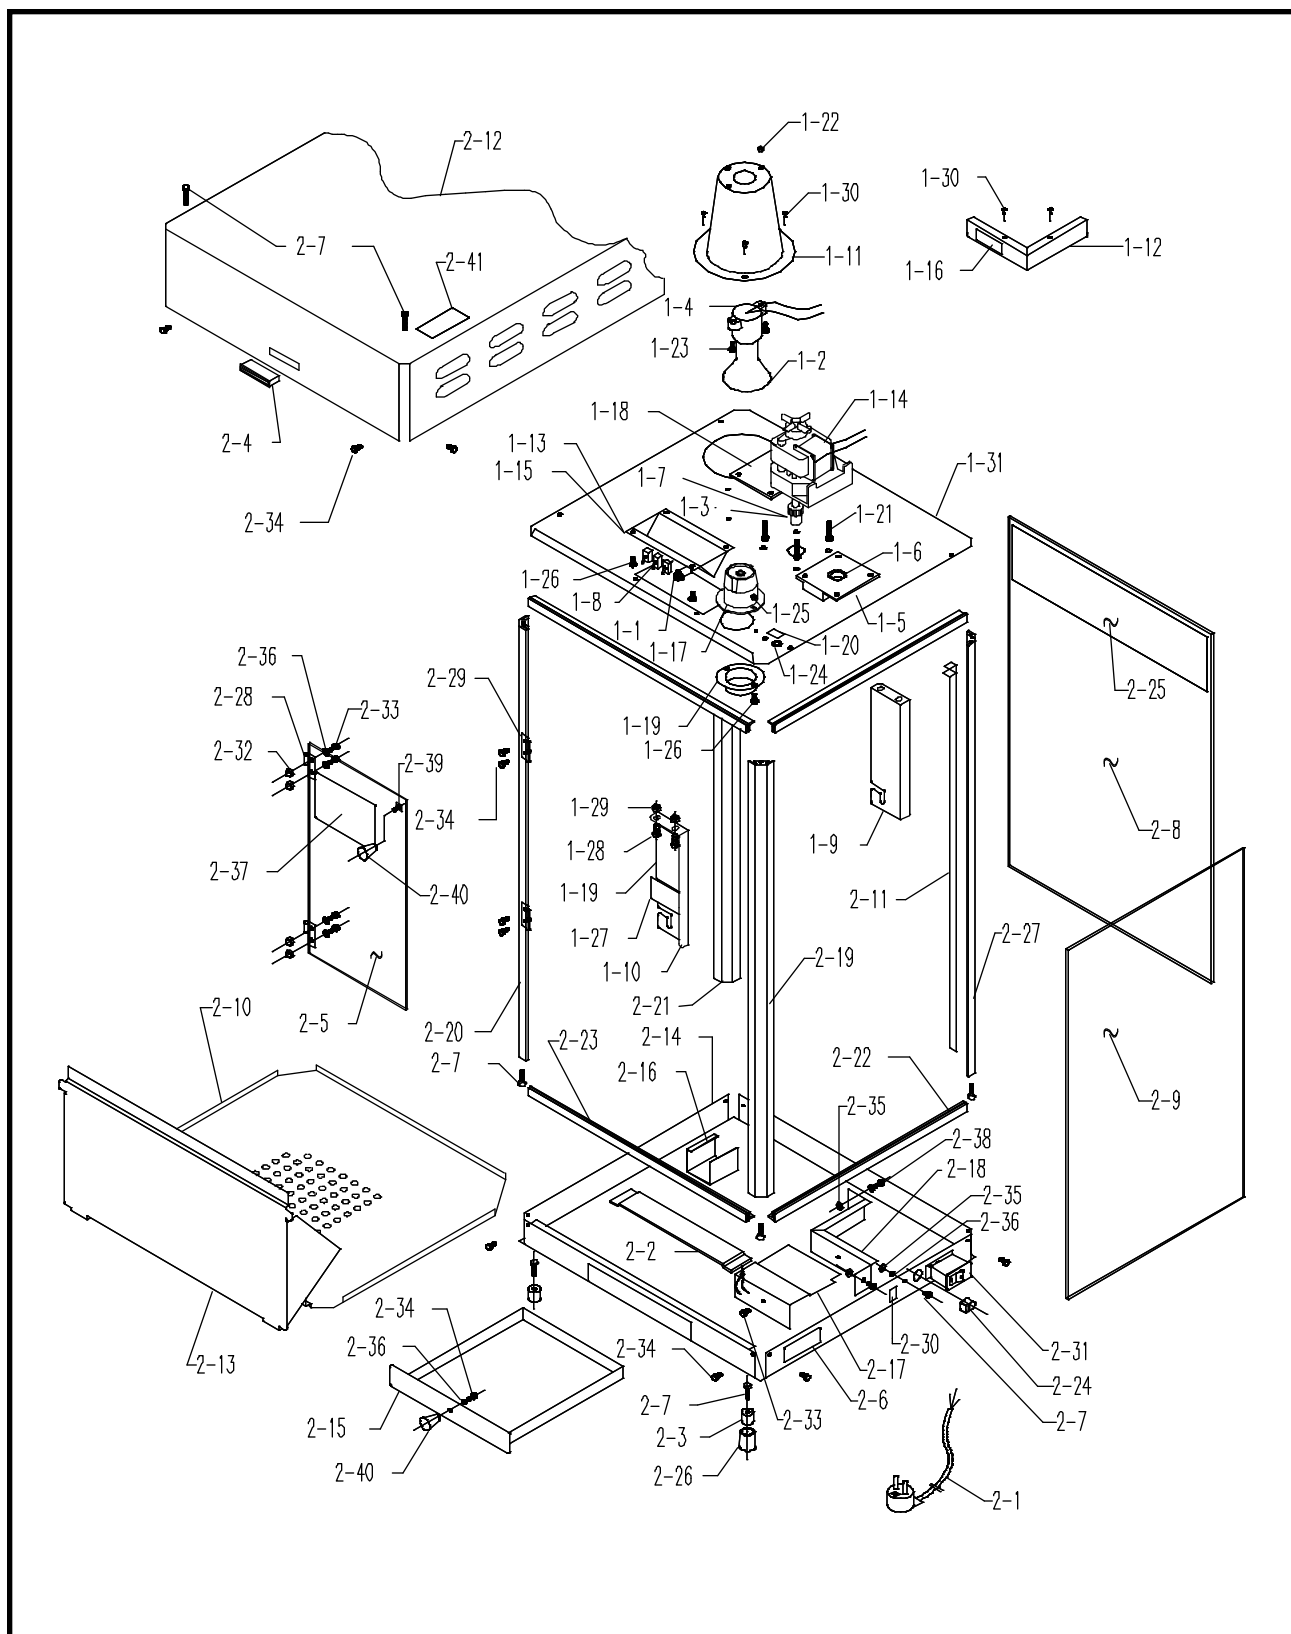


PARTS LIST - HANGER ASSEMBLY

Item No.	Part No.	Description
1-0	49337JX	Complete Hanger Assembly
1-1	41033	Pilot Light
1-2	41671	Reflector Flood Light
1-3	41742	Set Screw #10-32 x 4,8mm
1-4	47047	Lamp Holder
1-5	47065	Gear Box w/ Bushing
1-6	47058	Flange Bushing
1-7	47059	Spur Gear
1-8	47201	Switch
1-9	49010	Front Hanger Arm
1-10	49009	Rear Hanger Arm
1-11	49480	Light Shield
1-12	47799	Light Shield Angle
1-13	49099	Switch Box
1-14	47121	Kettle Drive Motor
1-15	49116	Label, Switches
1-16		Warning, Max Lamp 75W
1-17	49330	Receptacle Assembly
	49341	Black Recept.Wire Assembly
	49342	White Recept. Wire Assembly
	49343	Green Recept. Wire Assembly
1-18	49484	Motor Spacer
1-19	49322	#10-24 x 25,4mm Hex Machine Screw
1-20	74146	Hex Nut #8-32 Eslok
1-21	89125	#8-32 x 19mm Hex Head
1-22	74150	Washer #8 Internal Tooth
1-23	74149	Hex Nut #8-32
1-24	74141	Screw #8-32 x 9,5mm Panhead Phillips
1-25	87087	Label, Caution Hot
1-26	14821	Bolt, ¼-20 x 12,7mm Hex HD
1-27	74133	Hex Nut
1-28	47001	Pop Rivet
1-29	49331	Motor Plate

PARTS LIST - CABINET ASSEMBLY

Item No.	Model #1871JX Part No.	Model #2660JX Part No.	Description
2-0	49252	49026	Cabinet Assembly
2-1	22038	22038	Lead - In Cord
2-2	40031	40031	Heat Element 120V, 50W
2-3	41349	41349	Male Hinge, Short Right
2-4	41351	41351	Female Hinge, Long Right
2-5	47120	47120	Knob, Lid Lift
2-6	87179	87179	Glide
2-7	47561	47561	Magnetic Catch
2-8	49100	49100	Old Maid Pan
2-9	49103	49103	Strip Heater Bracket
2-10	49123	49123	Crutch Tip
2-11	77506	49158	Decal, Front Glass
2-12	49333	49332	Top Frame Assembly
2-13	49247	49346	Front Corner Post
2-14	49347	49347	Right Rear Corner Post
2-15	49348	49348	Left Rear Corner Post
2-16	49345	49345	Bottom Frame Assembly
2-17	49456	49456	Dome
2-18	49207	49207	Door
2-19	49208	49208	Front Glass 3,2mm x 384,2mm x 571,5mm
2-20	49209	49209	Side Glass 3,2mm x 333,4mm x 571,5mm
2-21	49210	49210	Drop Panel
2-22	49211	49211	Corn Pan
2-23	76190	76190	Screw #10-24 x 19mm Hex
2-24	77089	77089	Mount Bracket, Magnetic Catch
2-25	76026	76026	Strain Relief
2-26	49201	49201	Wiring Guard
2-27	75267	75267	Tee Bolt
2-28	47702	47702	#8-32 Acorn Nut
2-29	74142	74142	#8-32 x 6,4mm Panhead Phillips
2-30	74141	74141	#8-32 x 9,5mm Panhead Phillips
2-31	74149	74149	#8-32 Hex Nut
2-32	87149	87149	Label, Disconnect Power
2-33	47663	47663	Label, 6 Steps To Better Popping
2-34	49322	49322	#10-24 x 25,4mm Hex Hd Machine Screw
2-35	49212	49212	Rigid Channel 562mm
2-36	49213	49213	Rigid Channel 333,4mm
2-37	49214	49214	Rigid Channel 384,2mm
2-38	76097	76097	Label, Unplug Before Cleaning
2-39	49486	49486	Washer
2-40	74153	74153	#8-32 x 25,4mm Hex HD
2-41	49215	49215	Rear Glass Retainer Strip
2-42	49216	49216	Front Glass Retainer Strip
2-43	41350	41350	Male Hinge, Short Left
2-44	41352	41352	Female Hinge, Long Left


6 oz. KETTLE ASSEMBLY

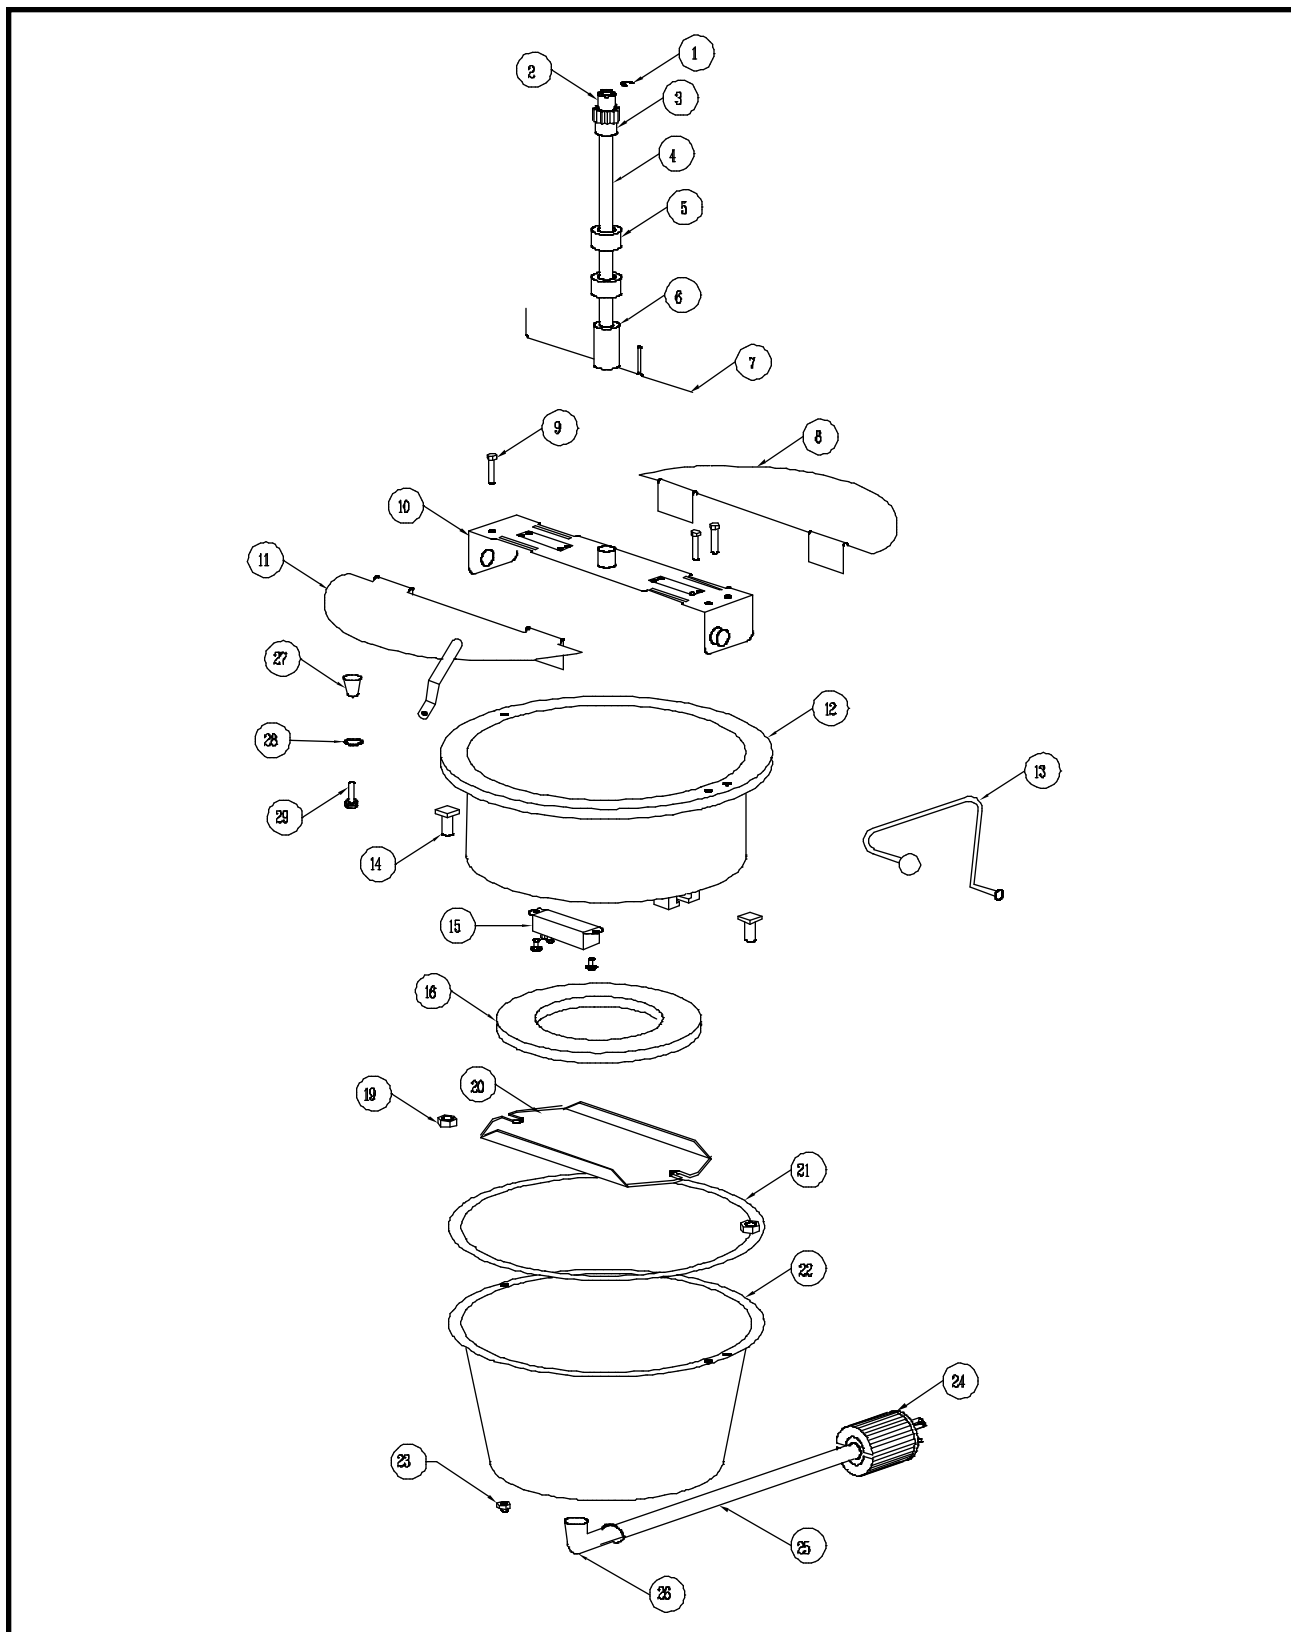

PARTS LIST - 6 oz. KETTLE ASSEMBLY

Item No.	Part No.	Description
	49434JX	177,4ml (6 oz. by volume) Kettle Complete
1	47107	C - Ring
2	47106	Needle Bearing
3	47059	Spur Gear
4	49423	Agitator Shaft Assembly
5	46649	Set Collar
6	49013	Agitator Weight
7	49011	Stir Rod
8	49016	Rear Kettle Lid
9	89125	Screw #8-32 x 19mm Hex HD
10	49471JX	Crossbar Assembly
11	49017	Front Lid with Lifter
12	49432	Kettle Welded Assembly
13	49314	Dump Handle RH
14	49446	Bolt 5/16-18 x 15,9mm Square HD
15	N/A	Secondary Thermostat
16	49173	Heat Element 1000W
17	47676	Primary Thermostat
18	49136	Screw #6-32 x 4,8mm Pan HD MS
19	49317	⁵ / ₁₆ -18 Serrated Lock Nut
20	49310	Element Retainer Bracket
21	49368	Kettle Gasket
22	49431	Kettle Shell
23	47702	Acorn Nut #8-32
24	49329	Kettle Plug
25	77079-16	Flexible Conduit
26	46241	90 Degree Connector
	49328	Kettle Lead-In Cord Assembly
27	47120	Knob, Lid Lifter
28	74150	#8 Lock Washer
29	87210	Screw #8-32 x 9,5mm

ELECTRICAL SCHEMATIC

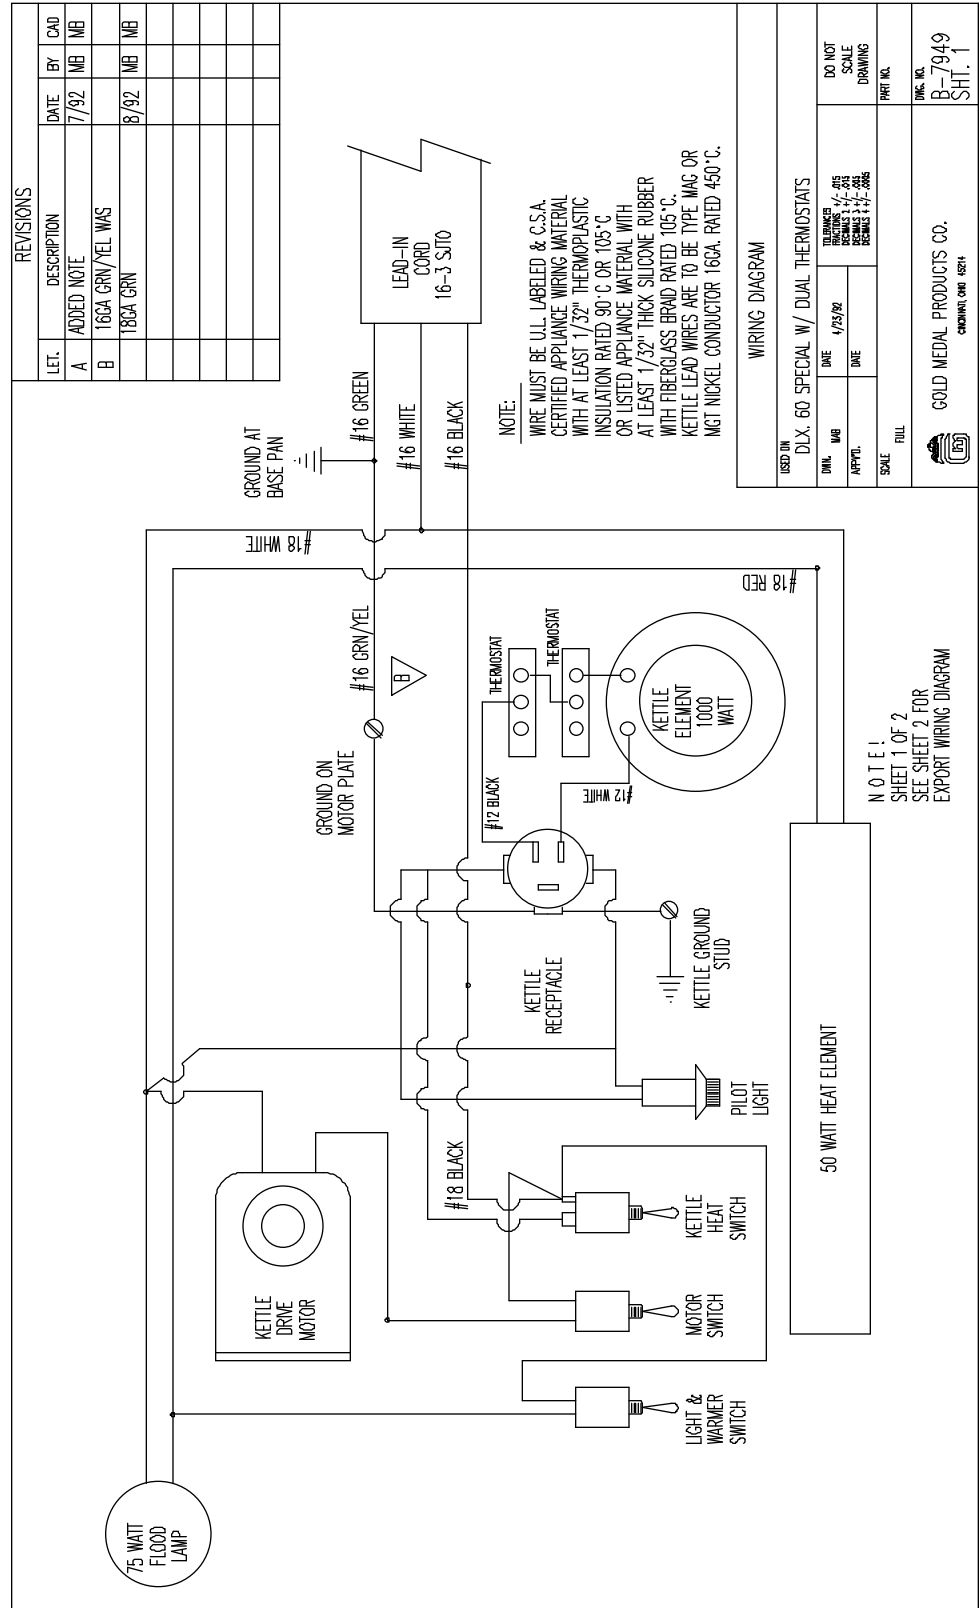

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-428-2676 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY
10700 Medallion Drive
Cincinnati, Ohio 45241-4807 USA