

Parrot Minikit+

User guide

Content

Before you begin	А
Package content	
Changing the language	
Installing the Parrot MINIKIT+	
_	
Battery Charging the Parrot MINIKIT+	
Sleep mode	
Battery life	
Use	
Turning the Parrot MINIKIT+ on / off	
Navigating through the menus	
nection	7
Establishing a Bluetooth connection with a phone	7
Pairing a phone	7
Automatic connection	8
Solving the memory full problem	
Using the Parrot MINIKIT+ with 2 phones	8
Activating dual mode	8
Connecting 2 phones to the Parrot MINIKIT+	8
Main and secondary phones	8
Making and receiving calls	8
Inverting main phone and secondary phone	9
Synchronizing the phonebook	9
Automatic synchronization	9
Deactivating automatic synchronization	10
Sending contacts via Bluetooth	10
ne	11
Receiving a call	
Ringtone	
Magic words	
Accept a call	
Reject a call	
Making a call	
Making a call using voice recognition	
Calling a contact with several phone numbers	
Calling a contact from the phonebook	
Bringing up the last dialled number	
Using the Parrot MINIKIT+ while on a call	
Adjusting the volume	
/ Najasting the volulite	

	Managing a second call	13
	Managing voice mail	13
	Ending a call	13
Musi	ic / GPS	14
	Music	14
	GPS instructions	
	Adjusting the volume	14
Troul	ıbleshooting	15
	The Parrot MINIKIT+ says «Memory full»	15
	The Parrot MINIKIT+ seems to be frozen	15
	The kit does not seem to work with my phone	15

Getting started

Before you begin

WARNING: All functions requiring an increased attention should only be used while the vehicle is stationary. Your safety and the one of the other road users prevails over phone calls, music and navigation instructions. Be responsible: drive carefully and pay full attention to your surrounding. Parrot denies any liability should you choose not to respect this warning.

Package content




Changing the language


The Parrot MINIKIT+ language can be changed with a software update. Software update procedure is <u>available here</u>.

Installing the Parrot MINIKIT+

 Slide the visor strap on your vehicle sun visor (refer to the diagram). Then use the clip located on the back of the Parrot MINIKIT+ to install the kit on the visor strap.

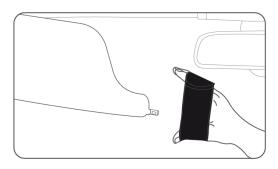

 Make sure the Parrot MINIKIT+ buttons are positioned as indicated on the diagram below.

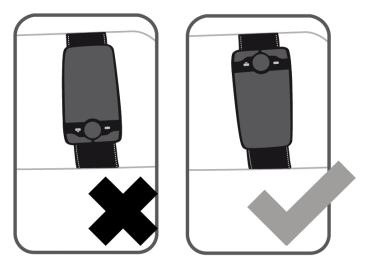

• The visor strap includes two locations to install the Parrot MINIKIT+ so that you can install the kit when the sun visor is up or down.

Note: Depending on the model of your vehicle, you can also use the clip located on the back of the Parrot MINIKIT+ to fix it directly to the sun visor of your vehicle.

Battery

Charging the Parrot MINIKIT+

The Parrot MINIKIT+ must be fully charged before being used for the first time. To do so, plug the charger into your vehicle's cigar lighter and connect the USB / mini-USB cable to the charger and to the kit. You can also use the USB / mini-USB cable to connect the Parrot MINIKIT+ to your computer.



- During charging, the battery indicator light turns red. When the light goes out, the charge is complete.
- The charging time is approximately 3.5 hours.

Sleep mode

- If the Parrot MINIKIT+ has not been connected to any phone for 5 minutes, it automatically switches to sleep mode.
- If you leave the Parrot MINIKIT+ in your vehicle without turning it off, the Parrot MINIKIT+ will switch to deep sleep mode. Thanks to its vibration detector, the Parrot MINIKIT+ will automatically exit deep sleep mode when you get back into your vehicle and close its door. If Bluetooth is activated on your phone, the connection between both devices will be automatically established.

Battery life

- The battery can last up to:
 - 12 hours in conversation
 - 15 days with 2 connected phones (without communication)
 - 6 months in deep sleep mode.
- When battery level is low, a voice prompt is played. It will then beep every minute before turning off or being recharged.

Use

Turning the Parrot MINIKIT+ on / off

Hold down the red button for 2 seconds to turn the Parrot MINIKIT+ on / off.

Navigating through the menus

- Press the jog wheel to access the main menu.
- Browse through the menus by turning the jog wheel and confirm by pressing the green button or the jog wheel.
- To exit the menu, press the red button or wait for a few seconds.

Connection

Establishing a Bluetooth connection with a phone

Pairing a phone


Before using the Parrot MINIKIT+ with your phone, you first have to pair both devices. The pairing process is only required once.

- 1. From your *Bluetooth* phone, search for *Bluetooth* peripherals (refer to the user guide of your phone for more information).
- 2. Select «Parrot MINIKIT+».

Note: The Bluetooth name of the Parrot MINIKIT+ ends with its software version number.



- 3. Enter the "0000" PIN code and validate.
 - > The Parrot MINIKIT+ says «Pairing successful» when both devices are paired.

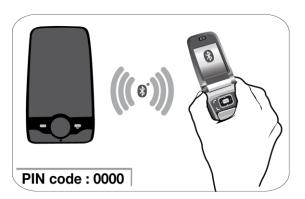

Note: Pairing procedures for the most common phones are available on the <u>compatibility section of our website</u>.

Automatic connection

Once your phone is paired to the Parrot MINIKIT+, the connection between both devices will be automatically established if:

- Both products are on and nearby.
- Your Parrot MINIKIT Neo is near your phone.
- The *Bluetooth* connection of your phone is activated.

Note: Depending on the model of your phone, you may have to authorize the connection to the Parrot MINIKIT+ to allow the automatic connection. Refer to your phone user guide for more information.

Solving the memory full problem

You can pair up to ten devices with the Parrot MINIKIT+. If you attempt to pair an eleventh phone, the kit says «memory full». You must then clear the memory by holding down both the red and green buttons for 3 seconds. Doing so also clears all the contacts.

Using the Parrot MINIKIT+ with 2 phones

Dual mode allows you to simultaneously connect two phones to the Parrot MINIKIT+.

Activating dual mode

To activate dual mode:

- 1. Select Dual mode.
- 2. Press the jogwheel.
 - > The Parrot MINIKIT+ confirms the dual mode new status.

Note: Dual mode is deactivated by default.

Connecting 2 phones to the Parrot MINIKIT+

When the Parrot MINIKIT+ is switched on, it attempts to connect to all paired phones in the vehicle. If there are more than two paired phones in the vehicle, the device connects to the two phones with the oldest pairing.

Main and secondary phones

- When two phones are connected to the Parrot MINIKIT+, one of them becomes the main phone and the other is the secondary phone.
- By default, the main phone is the one with the oldest pairing to the Parrot MINIKIT+.

Making and receiving calls

- You can receive calls (manually or through voice recognition) from the main or secondary phones. The Parrot MINIKIT+ ringtone varies according to the phone receiving the call.
- Only the phonebook of your main phone may be accessed through the Parrot MINIKIT+. You can only make calls using your main phone. However

you can easily switch between the connected phones by holding down the jogwheel for two seconds.

• If you receive a call on one of the phones while you are already on a call with the other phone, only the phone receiving a call will ring. This new call can only be picked up on the phone.

Inverting main phone and secondary phone

To define the secondary phone as your main phone temporarily (and make your main phone the new secondary phone), hold down the jog wheel for two seconds.

Synchronizing the phonebook

Automatic synchronization

WARNING: Only the contacts stored in the memory of your phone will be synchronised in the Parrot MINIKIT+ memory. If your contacts are stored in your SIM card memory, move them into your phone memory. Refer to your phone user guide for more information.

- With most of the *Bluetooth* phones, the phonebook is automatically synchronized in the kit's memory. Refer to the <u>compatibility section</u> of our website for more information.
- Depending on the model of your phone, a confirmation may be necessary :
 - On Blackberry phones a pop-up Accept connection request may be displayed. If so select Yes and check the Don't ask me again box.
 - On Android phones a message may appear in the notifications area at the top of the screen. If so, accept the transfer request.
- Automatic synchronization is limited to 2.000 contacts per paired phone even if contacts have several associated numbers.
- Each time the phonebook is modified, synchronisation will start automatically the next time you restart the Parrot MINIKIT+.

Deactivating automatic synchronization

- In some cases deactivating automatic synchronization may be useful:
 - If you have too many contacts in your phonebook;
 - If you want to use your phone voice recognition.
- To deactivate automatic synchronization, hold down the red button and the jogwheel before pairing the Parrot MINIKIT+ and your phone.
- This procedure only needs to be done while connecting the Parrot MINIKIT+ and the phone for the first time.

Sending contacts via Bluetooth

If your phone does not support automatic synchronization, you can also use the Object Push function of your phone to send contacts from your mobile to the Parrot MINIKIT+ via *Bluetooth*. To do so:

- 1. Press the jogwheel and select Receive contacts.
- 2. Refer to your phones' user guide for more information about sending contacts via Object Push.

Before using your Parrot Minikit+ phone function, you first have to pair and connect both devices.

► Refer to the <u>Pairing a phone</u> section for more information.

Receiving a call

Ringtone	 An incoming call is indicated by a ringtone. The name of the caller is announced if his number is recorded in the phonebook of the phone connected to the Parrot Minikit+.
	 If you are using the Parrot MINIKIT+ with 2 phones the ringtone will be different depending on the phone on which you are receiving a call.
	 To adjust the ringtone volume, use the jogwheel while the Parrot MINIKIT+ is ringing.
Magic words	 Magic words are activated by default. To activate / deactivate magic words, select Magic words and press the jog wheel.
	 To activate / deactivate the magic words : 1. Select Magic words for incoming calls. 2. Press the jogwheel. > A prompt indicating the magic words status is said.
	 Magic words must be said at the end of the prompt indicating the incoming call.
Accept a call	If you want to answer the call, press the green button or say "Accept" if the magic words are activated.
Reject a call	If you want to refuse this call, press the red button or say " Reject " if the magic words are activated.

Making a call

Making a call using voice recognition

- 1. Press the green button to launch the voice recognition feature.
 - > The Parrot MINIKIT+ asks you the name of the contact you want to call.
- 2. Say the name of the contact and the type of number ("Work", "Cellphone" ...) if there are several numbers associated to your contact.
 - > The call is automatically launched if the voice tag is correctly understood. If it is not the case, a confirmation message is asked by the kit. Confirm by saying **«Yes»** or **«Call»**.

Notes:

- At any time press the red button to exit voice recognition.
- You can also make a call using your phone voice recognition. To do so, the <u>automatic synchronization must be deactivated</u>.

Calling a contact with several phone numbers

- If there are several phone numbers associated to the contact you want to call, you can specify the type of number.
- To do so, the following vocal commands are available:
 - Home - Work - Mobile - Other - At home At work Cellular - General - Office - Cell - Default At office - On mobile - Preferred - At the office - On cellular - On cell
 - On mobile phone
 - On cellular phoneOn cell phoneMobile phone
 - Cellular phoneCell phone

Calling a contact from the phonebook

If the contact you want to call is in the phonebook of the phone connected to the Parrot MINIKIT +:

- 1. Press the jog wheel to enter the main menu and select **Phonebook**.
- 2. Select a letter and press the jog wheel.
 - > Once the contact chosen:
 - press the green button to call this contact
 - or use the jog wheel to choose between different numbers of the same contact.

Bringing up the last dialled number

Hold down the green button of the Parrot MINIKIT + for two seconds to redial the last dialled number.

Using the Parrot MINIKIT+ while on a call

Adjusting the volume

Use the jog wheel during a call to adjust the communication volume. > The volume setting is saved for subsequent calls.

Note: A different volume level can be saved for each paired phone.

Transferring a call to the phone

- During a call, if you want to continue the conversation on your phone (private conversation), press the green button of the Parrot MINIKIT +.
 The call is automatically transferred to the phone.
- If you want to switch back to the kit, press the green button again.

Managing a second call

During a call, you can receive another call if your phone supports this functionality.

- Press the green button to accept the second incoming call.
 The first call is automatically put on hold.
- Press the red button to decline the second incoming call.
 You can also hang up directly from your phone.
- Press the green button to switch from a call to another.

Managing voice mail

During a call, the Parrot MINIKIT+ allows you to send DTMFs to manage your voice mail for example. To do so:

- 1. Press the jog wheel to access the DTMF menu.
- 2. Use the jog wheel to select your DTMF between the following possibilities: 0,1,2,3,4,5,6,7,8,9,# or *.
- 3. Press the jog wheel to send this DTMF to your phone.

Ending a call

Press the red button to end a call.

Music / GPS

Music

- You can use the Parrot MINIKIT+ to listen to songs stored on your mobile phone or *Bluetooth* audio device. To do so, your phone / audio device must support the *Bluetooth* A2DP profile (Advanced Audio Distribution Profile).
- Phone calls always have priority over music. If you receive a call while streaming music, music will be paused.

GPS instructions

If your phone supports the GPS feature and if it can send the navigation instructions via *Bluetooth* (A2DP profile), the navigation instructions will be played by the Parrot MINIKIT+.

Note: Depending on your GPS application, navigation instructions may not be played while you are on a call.

Adjusting the volume

- To adjust music or GPS instructions volume, use the jogwheel while an instruction is given or music is being played.
- A diferent volume level may be saved for each paired phone.

Troubleshooting

The Parrot MINIKIT+ says «Memory full»

You can pair up to ten devices. If you attempt to pair an eleventh phone, the kit says «memory full». You must then clear the memory by holding down both the red and green buttons for three seconds. Doing so also clears all the contacts.

The Parrot MINIKIT+ seems to be frozen

In case of malfunction, you can reboot the Parrot MINIKIT+. To do so:

- Press simultaneously the jog wheel and the Reset button located at the back of the Parrot MINIKIT+.
- 2. Release the Reset button. Then release the jog wheel.



The kit does not seem to work with my phone

- Make sure your phone is compatible with the Parrot MINIKIT+. To do so, refer to the <u>compatibility list</u> of the Parrot MINIKIT+ available on our website.
- If your phone is compatible with the Parrot MINIKIT+, make sure you have the latest software version on your Parrot MINIKIT+. To find out the software version of your Parrot MINIKIT+, check the name by which it is seen by other Bluetooth devices. To find out the latest software version available, download the update file and consult the update procedure, refer to our website.