















TYPES OF CATEGORIES









	Always Active Category. A category of essential phrases, called <i>Always Active</i> , appears as an italicized item at the top of the CATEGORIES list. Phrases in the <i>Always Active</i> category can be voice-activated using the PTT button, no matter which category you are in. Note: <i>Some Language Modules do not contain phrases within the Always Active category.</i>
	Core Category. Core Categories are categories that have been created using Voxtec's Module Builder ENTERPRISE™ or Module Builder PRO™ software, collectively referred to as “Module Builder”. These categories cannot be changed or deleted.
	Sequences. Some phrases are paired together and stored as Sequences in Core Categories. Sequences are displayed by a folder with a tilde (~) on the cover. Sequences are created in Module Builder and can be Broadcast in All Languages and/or Looped. Because Sequences are made of Core Phrases, they cannot be changed or deleted.
	Custom Category. Custom Categories are created on the P2 using the v3.0 Application's New Category feature. Each Language Module comes with a default Custom Category called “My Favorites”.
	Search Results Shortcut. This shortcut launches the search functionality.
	Recordings Shortcut. This shortcut launches the record functionality.
	All Phrases Category. The All Phrases Category contains every phrase available in the loaded Language Module. This category will only appear in Modules that have less than 1,000 Core Phrases.


TYPES OF PHRASES

	Core Phrase. Core Phrases are created in Voxtec's Module Builder software. They cannot be changed or deleted, but can be copied into Custom Categories.
	Trigger Phrase. Trigger Phrases are short phrases that prompt the P2 to play longer phrases, sets of instructions or series of phrases. When you see a Trigger Phrase, note that the audio will be longer than the displayed Trigger Phrase. If the English text popup is enabled, you will see the full content of the phrase during playback.

	Custom Phrase. Custom Phrases are created directly on the P2.
  	Auto-Record Phrase. The Auto-Record feature prompts the P2 to automatically begin recording after playing a phrase. Recordings are stored so you can listen to them on the P2, transfer them to another device, or have them translated. Auto-Record is enabled for some Core Phrases and can be enabled for any Custom Phrase. Auto-Record is a good way to capture answers to interview questions, or open-ended questions.
	Phrase with No Audio. Phrases that do not have a recorded translation in the selected language are shown with this icon.

OPTIONS

	Change Module. Load a different Language Module.
	Search Phrases. Search for phrases by a keyword or a group of keywords.
	Change Language. Change the currently selected Target Language.
	Create Recordings. Create time-stamped audio recordings for later playback or translation.
	User Profiles. Create a user profile to optimize the P2 to your voice.
	Device Settings. Adjust brightness and contrast; backlighting; auto off; and settings for left or right-handed use.
	Application Settings. Adjust settings in the P2 v3.0 Application.
	About. Review legal notices and information about the P2 hardware and software.

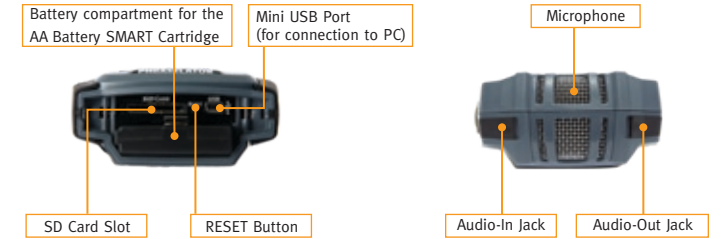

TAKING INVENTORY

The Phraselator® P2 comes with the following items:

Item	Description
Phraselator P2	Rugged, handheld translation device
SD Card	Secure Digital card containing Phraselator P2 v3.0 Application (translation software) and Language Modules
AA Battery SMART Cartridge	Custom P2 battery cartridge; 10-12 hours of continuous use battery life per charge cycle
NiMH AA Batteries	Rechargeable AA Nickel Metal Hydride (NiMH) batteries fit in the AA Battery SMART Cartridge that slides into the P2
AC/DC Power Supply with Universal Charger Adapter	Charges the AA NiMH batteries secured within the AA Battery SMART Cartridge while it is in the P2
Mini USB Cable	Plugs into bottom of the P2 for connection to PC/downloads <i>Requires Microsoft® ActiveSync®</i>
Stylus & Lanyard	Stylus for controlling the touchscreen, and lanyard to keep it secured to the P2
User Documentation & Training Program	This Quick Reference Guide, the P2 v3.0 User Manual, and the P2 v3.0 Training Program



ONE-WAY TRANSLATION

The Phraselator P2 is a handheld, voice and touch-activated one-way translation device. It helps you communicate important information to people who do not speak English. The P2 is not intended to replace an interpreter, but can facilitate necessary communication when one is not available.

The P2 uses Language Modules consisting of English phrases that have been translated and recorded in multiple languages and then loaded onto the device.

GETTING STARTED

The P2 is designed to get you started translating phrases within a few minutes of use.

- 1. Assemble* the AA Battery SMART Cartridge. Slide the 4 rechargeable NiMH AA batteries into the cartridge following the +/- guides printed on the cartridge.
- 2. Remove the Rubber Boot from the bottom of the P2. Do this by turning the metal D-rings 1/4 turn counter-clockwise and pulling them slightly out to loosen the rubber boot. Peel the boot completely away from the base.
- 3. Install the AA Battery SMART Cartridge in the P2. Position the battery cartridge under the metal tab with the gold contacts facing up and slide it straight into the P2. Push the metal tab down to lock the battery in place.



- 4. Install the SD card containing the P2 v3.0 Application. Insert the SD card in the slot labeled "SD CARD" and slide it completely in until you hear a soft click.
- 5. Replace the Rubber Boot over the battery compartment. Press along the edges of the boot to ensure it is tightly sealed. Turn the metal D-rings 1/4 turn clockwise to secure the boot to the P2.




- 6. Plug in the P2 to Begin Charging*. On the right side of the P2, open the flap to the port labeled "DC IN" and connect the universal charger. Plug the other end of the charger into an outlet. You can use the P2 while you wait for the battery to charge. Charge the batteries in the device for no less than 6 hours before the first use.

- 7. Press the POWER button to turn on the P2.



***Important:** Do not remove any of the 4 NIMH AA batteries from the SMART cartridge if it is already assembled. If the batteries are removed you must reassemble the cartridge and charge it for no less than 6 consecutive hours in the P2 to reactivate the onscreen battery meter. When the cartridge is fully charged, the meter will be solid green.

- 8. Press the onscreen Phraselator icon to open the application.
- 9. Press and highlight the desired Language Module and select Load Module.
- 10. Press the desired Category.
- 11. Press the phrase you want to translate with the stylus or your finger. For voice-recognition: Press and hold the PUSH TO TALK (PTT) button; say a phrase; then release the PTT button.
- 12. The translation will play through the speaker in the selected language.

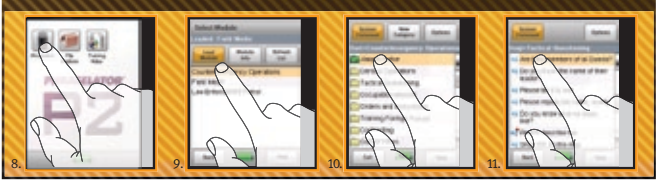

CUSTOMIZATION

My Favorites

For your convenience, a customizable category called "My Favorites," is included in every P2 v3.0 Language Module. In the "My Favorites" category, you can add, remove, and change the order of phrases; broadcast a phrase in all available languages; or loop a sequence of phrases. See your P2 v3.0 User Manual for more detail on how to create additional custom categories.

QUICK COPY FEATURE

My Favorites is designated as the default category for the "Quick Copy" feature. This means you can copy phrases to My Favorites with a swipe of your finger. You can designate another Quick Copy category under Options > Application Settings.

- 1. Press and hold your stylus or finger on a phrase for three seconds (the highlight should change to dark orange).
 - a. Select more than one phrase by repeating step #1 until all desired phrases are highlighted.
- 2. Without lifting your stylus or finger, swipe from left to right over the length of the phrase and it will copy to the category designated for Quick Copy.

TRANSLATION MODES

There are three ways to translate a phrase:





- 1. Touchscreen: Use the stylus or your finger to translate phrases and modify P2 v3.0 settings. Press the stylus or your finger on the desired phrase and the phrase will play in the selected language.
- 2. TOGGLE Button: The TOGGLE Button on the front of the P2 looks like a mini joystick. Move it up or down to scroll, left or right to go back and forward between categories, and press the center to play the phrase in the selected language.

- 3. Voice Recognition: Use the PTT button to translate phrases:
 - a. While holding the P2 4-6 inches from your mouth, press and hold the PTT button.
 - b. Say a phrase exactly as it appears on the screen.
 - c. Release the PTT button, and wait for the translation.

SYSTEM COMMANDS

Press and hold the SYSTEM COMMAND Button and say:	P2 Response:
"Select <Language>"	Sets/changes the current language
"Select <Category Name>"	Sets/changes the current category
"Broadcast All Languages"	Broadcasts the highlighted phrase in all available languages
"Loop All Languages"	Plays the translation for each phrase in a Sequence, or Custom Category, one language at a time Caution: This command only works within a Sequence or Custom Category
"Send to Quick Copy"	Sends currently highlighted phrase to the designated Quick Copy category
"Begin Audio Verification"	Turns on audio verification
"End Audio Verification"	Turns off audio verification
"Begin Text Verification"	Turns on text verification
"End Text Verification"	Turns off text verification

P2 v3.0 APPLICATION: P2 DESKTOP



- 1. Launch the Phraselator P2 v3.0 Application and begin translating phrases.
- 2. Launch File Explorer to locate saved recordings and download them to your PC.
- 3. Launch the Training Video and view a user training presentation on the P2.