

Contents

Chapter 1 Before Using Your O2 Xda Stealth	6
1.1 What's in the box	6
1.2 Familiarizing yourself with your O2 Xda Stealth	7
1.3 Key definitions	10
1.4 Features	10
1.5 Insert the battery & SIM card	11
1.6 SIM	12
1.7 Battery	12
1.8 Lock/Unlock	13
1.9 Memory expansion	14
1.10 Data backup	14
1.11 Power management	14
 Chapter 2 Getting Started	 16
2.1 Display information	16
2.2 Screen orientation	25
2.3 Setting time & date	26
2.4 Using the stylus	26
2.5 Screen alignment	26
2.6 Input method	27
2.7 Drawing on the screen	29
2.8 Recording a message	29
2.9 Editing my info	30
2.10 Password setup	30
 Chapter 3 Phone Functions	 32
3.1 Phone screen and key introduction	32
3.2 Making a call	33
3.3 Receiving / Ignoring a call	33
3.4 International calls	33
3.5 Emergency calls	34

3.6 Volume adjustment	34
3.7 Contacts	34
3.8 Creating a new contact	35
3.9 Call history	35
3.10 Setting ring tone and password	35

Chapter 4 Settings 38

4.1 Personal settings	38
4.2 System settings	45

Chapter 5 ActiveSync Synchronization Tool 48

5.1 About synchronization	48
5.2 Installing ActiveSync	49
5.3 Choosing your synchronization type	50
5.4 Using ActiveSync tools	51
5.5 ActiveSync errors	53

Chapter 6 Getting Connected 56

6.1 Wireless Manager	56
6.2 GPRS	57
6.3 Bluetooth	58
6.4 Wi-Fi	64
6.5 USB card reader	65
6.6 Internet Sharing	65
6.7 Terminal Services Client	65
6.8 Cell Broadcast Setting	66
6.9 VPN	66
6.10 USB cable	66
6.11 Connecting to the Internet	66

Chapter 7 Messaging 70

7.1 Short Message (SMS)	71
7.2 Multimedia messages (MMS)	74
7.3 Voice mail	82
7.4 E-mail	83
7.5 Push E-mail	85
7.6 Pocket MSN	86

Chapter 8 Multimedia 90

8.1 Camera	90
8.2 Video recorder	93
8.3 JAVA	95
8.4 Photo Editor	95
8.5 Pictures & Videos	96
8.6 Recorder	97

Chapter 9 Applications 100

9.1 Calendar	100
9.2 Tasks	101
9.3 File Explorer	102
9.4 Internet explorer	102
9.5 Windows Media	103
9.6 Games	104
9.7 Download Agent	104
9.8 Calculator	104
9.9 Backup	104
9.10 Torch	104
9.11 ZIP	105
9.12 O2 Auto Configurator	105
9.13 ClearVue	106
9.14 Excel Mobile	107
9.15 Notes	108
9.16 PowerPoint Mobile	109
9.17 Search	110

9.18 Voice Speed Dial	110
9.19 Word Mobile	110
9.20 Answer Machine	112
Chapter 10 Managing Your O2 Xda Stealth	114
10.1 O2 Auto Install	114
10.2 O2 Connect	114
10.3 Memory management	114
10.4 Running programs management	115
10.5 Adding or removing programs	115
Chapter 11 Specifications	118
Chapter 12 FAQs	122
Chapter 13 Safety Bit	126
13.1 Safety information	126
13.2 Phone care	126
13.3 Driving safety	128
13.4 Electronic devices	128
13.5 Other safety guidelines	130
13.6 Cautions	131
13.7 About this guide	131
Index	132

Chapter 1

Before Using Your O2 Xda Stealth

- 1.1 What's in the box
- 1.2 Familiarizing yourself with your O2 Xda Stealth
- 1.3 Key definitions
- 1.4 Features
- 1.5 Insert the battery & SIM card
- 1.6 SIM
- 1.7 Battery
- 1.8 Lock/Unlock
- 1.9 Memory expansion
- 1.10 Data backup
- 1.11 Power management

Chapter 1. Before Using Your O2 Xda Stealth

1.1 What's in the box



Thank you for selecting O2 Xda Stealth. Please check if your package comes with the following items. If any of them is missing, please contact your retailer.

O2 Xda Stealth—your Windows Mobile-based Pocket PC phone
Stylus
Standard Battery
Universal AC Adapter with four plugs for different countries
High Quality Stereo Wired Headset
USB Cable
Getting Started Disc
User Manual
Quick Start Guide
Warranty Card

1.2 Familiarizing yourself with your O2 Xda Stealth


This section introduces you to the hardware of the device and its function keys



No.	Item	Function
1	Receiver	You can hear caller's voice through receiver.
2	Touch screen	Display screen. Use stylus to select items on the screen.
3	Call key	You can make or answer a call by pressing Call key, or press to launch Phone screen.
4	Windows  key	Press the Windows  key to open Start menu options.
5	End key	Press this key to end a call or to return to Today screen from any screen.
6	OK key	Press this key to execute or terminate a selected function or application.
7	5- Way navigation key	Use up, down, left and right directions to navigate. Press the center key to execute the selected function or application.
8	Dial keypad	You can use the dial keypad to dial telephone numbers.



No.	Item	Function
9	Power on/off	Press and hold Power key for a few seconds to power on/off your device.
10	LED indicator	The LED indicator indicates the status of your device by showing different colors. Blue: Bluetooth is activated. Orange: Wi-Fi is activated. Green: mobile network is detected.
11	Microphone	Talk on the phone call.
12	Mini USB / Charging slot	Connect a charger adapter to this slot to start charging. This slot is also a USB slot. You may connect your O ₂ Xda Stealth to computers or other devices with a USB cable and transfer files between the phone and that device.

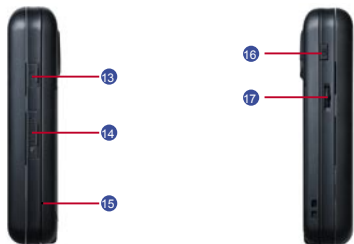




No.	Item	Function
13	Headset plug	Plug in headset, and then you can listen to the music via the headset or use the phone's hands-free kit.
14	Mini SD card slot	You can insert your Mini SD card here to save data in your card.
15	Soft reset button	Press the button with the stylus to soft reset your device.
16	Camera key	Press and hold Camera key to launch camera function. In Camera mode, press as 2-step shutter key to capture pictures.
17	Volume key	Slide this key upwards or downwards to adjust volume. Press and hold this key to directly record voice note.




No.	Item	Function
18	Flash light	Support Auto Flash , Forced Flash On , and Forced Flash Off modes.
19	Stylus holder & Stylus	Use the stylus to touch the screen panel.
20	Battery lock	Pull down the battery lock to remove the battery.
21	Battery	Power your O ₂ Xda Stealth.
22	Camera lens	The CMOS camera supports 2-mega-pixel photo and high quality video.
23	Monophonic speaker	Besides using earphones, you may play music/voice through the built-in speaker.

1.3 Key definitions

Key	Function
5-way navigation key – Up	Move cursor up.
5-way navigation key – Down	Move cursor down.
5-way navigation key – Left	Move cursor to the left.
5-way navigation key – Right	Move cursor to the right.
5-way navigation key - Center	Execute your selection.
Call	Pick up calls and make new calls.
End	Press: return to Today screen. Press and hold: torch light.
Power on/off	Press: enter suspend mode. Press and hold: power off.
Windows  key	Press: display or hide Start menu.
OK key	Press: execute the function of the top right screen ( or ). Press and hold: switch screen display to portrait or landscape.
Camera key	Press and hold: enter camera mode.
Volume key	Slide up: increase volume. Slide down: decrease volume. Press: activate voice command. Press and hold: activate voice note.
Soft reset button	Soft reset your O2 Xda Stealth.

1.4 Features

Like a standard mobile phone, your O2 Xda Stealth supports basic dialing features. Besides, it also integrates Personal Digital Assistant (PDA) capability. The following section provides more information about the phone's features:

- Touch screen: 2.4" TFT LCD display with 65,536 colors effective.
- 5-way navigation key.
- Windows  key.
- Monophonic speaker & microphone.
- Slide-to-answer Mode.
- Mini-USB connector for connection and battery charging.
- Camera: 2.0 mega pixels.
- Connections: Bluetooth, and Wireless LAN.
- Microsoft Windows Mobile 5.0: Pocket MSN, Pocket Outlook, Pocket Explorer, and Office tools (Word, Excel, and PowerPoint). Also features Windows Media Player 10, Terminal Services Client, Pictures & Videos, Calculator, Games, ActiveSync, and File Explorer.
- O2 programs: O2 Connect, O2 Auto Install
- Other programs: Answer Machine, Phone Recording, Recorder, Spb GPRS Monitor, O2 Auto Configurator, Java support, Torch, ClearVue PDF viewer, etc.

1.5 Insert the battery & SIM card

Before inserting/removing a SIM card, please make sure your O2 Xda Stealth is powered off and is not connected to any power supply by the USB cable or charger.


- Look at the back of the phone. Pull down the battery lock and lift the battery upward as shown below in order to remove it.



- Find the SIM card slot and insert the SIM card with the metallic part facing down and the clipped corner in the left direction.



- Insert the battery back to the battery slot.

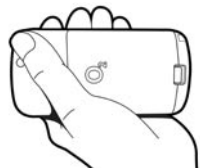

1.6 SIM

Before using your O2 Xda Stealth, you must contact a network operator to get a personal SIM (Subscriber Identity Module). The SIM card contains your O2 Xda Stealth number, the services included in your subscription, and your personal data such as your phonebook and messages. The phone is unusable (except for emergency calls) until a valid SIM card is inserted.

Please note: If the phone or the SIM card is lost or stolen, you should contact your network operator immediately in order to prevent unauthorized use.

1.7 Battery

Your O2 Xda Stealth comes with a removable and rechargeable Li-Ion battery. The standby time and talk time will depend on your actual usage network coverage and whether the phone is on standby mode. The battery life may also vary depending on how frequently the user switches between functions.


Please note: Using any battery pack or AC adapter (charger) not specified/endorsed by O2 on this phone may be dangerous and may invalidate any warranty and approval given to the phone. Unplug the charger from the power supply when it is not in use.

Charging the battery

Please make sure that the battery is installed and fully charged when using your O2 Xda Stealth for the first time. You may charge the battery in the following ways:

- Universal AC Adapter: Plug your AC adapter into a suitable main power socket and plug the connector to the charging slot of your O2 Xda Stealth. The phone will start charging automatically.
- USB cable: Connect your O2 Xda Stealth to your PC's USB port with the USB cable supplied in your package.

1.8 Lock/Unlock

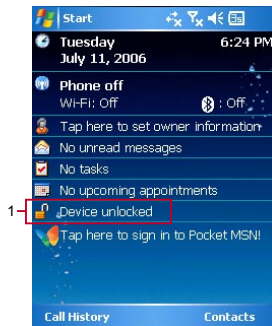

1. Lock the phone: On **Today** screen, tap **Device unlocked** to lock your O2 Xda Stealth. The phone will not respond to touches on screen nor will it react to any input on the keypad when it is locked.

You may also enable the device lock automatically after the backlight of the screen is turned off.

To enable automatic lock:

Tap **Start > Settings > System tab > Power > Extended** tab and check the box shown on the screen. Your O2 Xda Stealth will enable lock automatically during stand-by.



2. Unlock the phone:
 - Tap **Unlock** on the bottom left of the screen,
 - Then tap **Unlock** button on the newly appeared screen and the phone is unlocked.

1.9 Memory expansion

To expand the memory of your O2 Xda Stealth, you can insert a Mini SD card into the card slot located at the right side of the phone. Make sure the card is inserted correctly.

1.10 Data backup

Your O2 Xda Stealth supports 64MB RAM capacity; however, you may need to back up data and any new programs that you install in the RAM to guard against data loss. To back up your **Contact**, **Calendar**, etc., please set up the synchronization partnership with your PC and connect the phone with PC. ActiveSync will start automatically.

1.11 Power management

To power on your O2 Xda Stealth

While the phone is powered off, press **Power** key on the top of the phone to power it on.

To power off your O2 Xda Stealth

While the power is on, press and hold **Power** key on the top of the phone for about 3 seconds to turn off the device.

To reduce the power consumption of your device, you may change the backlight duration and brightness level. Also, you can save more power by setting the phone to turn off automatically if it is not in use for a specific period of time.

To check battery power level

Tap **Start** > **Settings** > **System** tab > **Power** > **Battery** tab. A bar indicates the remaining battery power level.

To turn off the device automatically

Tap **Start** > **Settings** > **System** tab > **Power** > **Advanced** tab and select the duration before your device turns off by itself. This feature controls the screen standby time.

To reduce the brightness level

Tap **Start** > **Settings** > **System** tab > **Backlight** > **Extended** tab and adjust the brightness level of **Battery Power** or **External Power**, from darkest to brightest.

To adjust the backlight duration

Tap **Start** > **Settings** > **System** tab > **Backlight** > **Battery Power** tab or **External Power** tab to select backlight duration and condition for backlight on/off under either battery power or external power supply.

Chapter 2 Getting Started

2.1 Display information

2.2 Screen orientation

2.3 Setting time & date

2.4 Using the stylus

2.5 Screen alignment

2.6 Input method

2.7 Drawing on the screen

2.8 Recording a message

2.9 Editing my info


2.10 Password setup

Chapter 2. Getting Started

2.1 Display information

The main screen displays the following information:

Start menu Status & Icon area

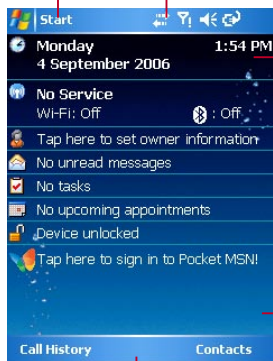

Today screen




Command area

- **Start menu:** Tap here to open Windows **Start** menu on the top left of the screen. To return to **Today** screen at any time, tap **Start > Today**.
- **Status & Icon area:** It displays notification icons and system status such as battery status, connection status, SIM card status, time, signal, volume, message arrival, etc. You can tap the icon to view the detail or settings of the function.
- **Today screen:** On **Today** screen, this area contains shortcuts to certain programs and important information of **Today**. To change **Today** screen settings, tap **Start > Settings > Personal** tab **>Today**.
- **Command area:** Depending on the current mode, this area contains different features such as input panel and commands to create or edit a file. On **Today** screen, it shows **Call History** on the left and **Contacts** on the right.

Start menu

Tap **Start** to bring up a list of menu:

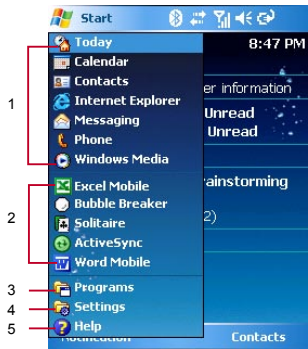

No	Description
1	Quick access to certain fixed Microsoft programs.
2	The most recent 5 programs you have used.
3	Tap on Programs to enter the programs screen.
4	Tap on Settings to enter the settings screen.
5	Tap on Help to see detail information about your O2 Xda Stealth.

Programs

You will see many application icons on your **Programs** screen. From **Programs** screen, you may touch on the application icon that you desired to use to execute the application.



Your O2 Xda Stealth contains the following programs:

Icon	Programs	Description
	Games	Provide games such as Bubble Breaker and Solitaire.
	ActiveSync	Transmit data between your computer and your O2 Xda Stealth.
	Answer Machine	Activate/deactivate Answer Machine function.
	O2 Auto Config	Configure your network operator settings.
	Backup	Create backup of your O2 Xda Stealth's settings and data.
	Calculator	Perform basic calculations.
	Camera	Take photos and record video clips.
	ClearVue	Support viewing of PDF files.
	Download Agent	Manage your download applications.

Icon	Programs	Description
	Excel Mobile	Create, edit and view Excel files.
	File Explorer	View all the files on your O2 Xda Stealth.
	Spb GPRS Monitor	Monitor your GPRS traffic and cost.
	Internet Sharing	Connect your PC/Notebook via your O2 Xda Stealth as a modem.
	JAVA	Manage your Java applications.
	Notes	Write notes, memo, or drawings.
	O2 Auto Install	Lead you to the installation of extra O2 applications.
	O2 Connect	Connect to O2 website and download the latest software updates.
	Photo Editor	Edit your photos on your O2 Xda Stealth.
	Pictures & Videos	Your images and videos.
	Pocket MSN	Access for MSN services.
	PowerPoint Mobile	View PowerPoint files on your O2 Xda Stealth.
	Recorder	Record your voice memos.
	Search	Search for all data, programs, and files.
	Tasks	Keeps track of your appointments and creates meeting requests.
	Terminal Services Client	Allow you to connect to a defined terminal server.
	Torch	Use the LED light on the phone as a torch.
	Voice Speed Dial	Record your voice tags and initiates voice commanding environment.
	Word Mobile	Create, edit and view Word files.
	Zip	Compresses your files in the phone to save memory space.

Settings

Your O₂ Xda Stealth contains **Personal**, **System**, and **Connections** setting items.











Tap **Start > Settings > Personal** tab:

Icon	Settings	Description
	Buttons	You may assign application programs to a hardware button.
	Input	Set your preferred input method.
	Lock	You may set a personal password for your O ₂ Xda Stealth.
	Menus	Select the programs to be displayed in Start menu.
	MSN Options	You may set MSN password, account, and other details.
	Owner Information	You may input your personal information.
	Phone	Settings for phone functions.
	Sounds & Notifications	Settings for alarm sound and notification.
	Today	Settings for screen appearance and items displayed on the Today screen.
	Voice Speed Dial	Record your voice tags for contacts or applications.

Tap **Start > Settings > System** Tab:
























Icon	Settings	Description
	About	Contain information about your O ₂ Xda Stealth.
	Backlight	Configures the backlight settings and adjusts the brightness level to save power.
	Certificates	Information about the certificate issuer and the expiration date.
	Clock & Alarms	Settings for time and alarms.
	GPS	Settings for using GPS function.
	Headset Volume Limiter	Modify your headset volume to safer and better quality.
	Memory	Display memory status and programs that are currently running.
	Power	Battery status and settings.
	Regional Settings	Settings for region, number, currency, time, and date.
	Remove Programs	Remove programs from your O ₂ Xda Stealth.
	Screen	Settings for screen orientation, screen alignment, and text size.
	Slide setting	Enable you to answer calls by sliding the phone.
	System Info	Display the system information.

Tap **Start** > **Settings** > **Connections** Tab

Icon	Settings	Description
	Beam	You can choose to receive all incoming beams.
	Bluetooth	Settings for Bluetooth connection.
	Cell Broadcast Setting	Receive broadcast channel information and news from your service provider.
	Connections	Settings and management for modem connections.
	USB	Use your O2 Xda Stealth as a mini SD card reader.
	Wi-Fi	Manage and configure your Wi-Fi settings.
	Wi-Fi Utility	Details of your Wi-Fi connection.
	Wireless Manager	Turn on/off Bluetooth or flight mode.

Status & Icon area

This area shows icons of basic system status or alerts. You can tap on the icon to get the definitions or go to the settings.

Status Type	Icon	Description
Battery		Main battery power is full; the number shows the percentage of remaining battery power.
		Low battery. Please recharge.
		Battery is charging.
Calls		Call forward.
		Call on hold.
		Data call.
		You have missed calls.
		Voice call.
Connection		GPRS is in range.
		GPRS is connected.
		Building connection to GPRS.
		Bluetooth is activated.
		Wi-Fi is activated/Wi-Fi network is in range/Wi-Fi network is connected.
Signal		Strong signal.
		No signal.
		Roaming.
Message		You have one or more new message(s).
		You have one or more new voice mail(s).
		You have one or more instant message(s).
Volume		System volume,
		Phone volume,
		Ringer is on,
		Ringer is off,

Please note: To choose reminder types and sounds for your O2 Xda Stealth, tap **Start** > **Settings** > **Personal** tab > **Sounds & Notifications**.

Today screen

This screen contains the following items for quick access and convenient viewing.



No.	Item	Description
1	Time and Date	View time and date information or tap to edit the alarms.
2	Wireless Manager	Show all your current connections status.
3	Owner Information	Tap to edit your contact information.
4	Message Notification	Remind you of incoming messages and E-mails.
5	Tasks	Remind you of unfinished tasks.
6	Appointments Reminder	Remind you of an appointment.
7	Device Lock	Display your O2 Xda Stealth lock status. This feature prevents your screen and keypad from being accidentally touched or pressed.
8	Pocket MSN Services	Quick access to MSN services.


2.2 Screen orientation

You can also choose your screen display in Portrait or Landscape. The Portrait mode allows you to get a better view or a better operation of certain programs on your O2 Xda Stealth, while Landscape may be optimal for viewing longer text files.


Press and hold **OK** any time when your O2 Xda Stealth is on to switch your screen display between Portrait and Landscape.

You can also change the default screen display by following the steps below:

1. Tap **Start** > **Settings** > **System** tab > **Screen** > **General** tab.
2. On **General** tab screen, select your desired orientation, **Portrait**, **Landscape (right-handed)**, or **Landscape (left-handed)**.
3. Tap **OK**, and the screen will be changed accordingly.

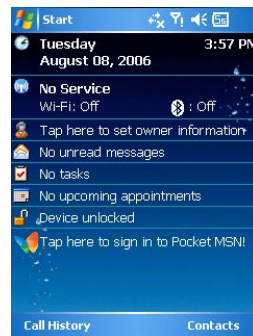

Portrait

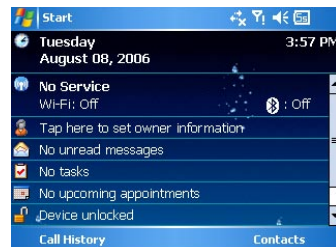

Landscape

2.3 Setting time & date

When using your O2 Xda Stealth for the first time, you are required to set your time zone, time, and date. You can also tap on the clock icon on Today screen to setup time and date.

1. Tap **Start > Settings > System tab > Clock & Alarms > Time** tab.
2. Select **Home** or **Visiting**.
3. Select your time zone.
4. Select **AM / PM**.
5. Use the **up** and **down** arrow aside hour, minute and second to adjust the highlighted time unit.
6. Tap the **down arrow** aside the date to open a calendar, and select a desired month, date, and year.
7. Tap **OK**, a pop-up window will appear on your screen to confirm to **Save Changes to the clock settings**.
8. Tap **Yes** to save the changes and exit.

2.4 Using the stylus

Use the stylus to touch or write on your screen. Using stylus can avoid damaging your screen. There are 2 ways to use your stylus:

- **Tap:** softly tap on a desired item by your stylus, and lift the pen from the screen.
- **Press:** touch and hold your stylus on a desired item for a few seconds until a blue dotted circle appears. This indicates that a pop-up menu is going to be activated.

2.5 Screen alignment

When using your O2 Xda Stealth for the first time, screen alignment is required. If you find that the phone does not accurately respond to your stylus taps, or you have performed a system reset, you need to align your screen.

1. Tap **Start > Settings > System tab > Screen > General** tab.
2. Tap **Align Screen** on your screen.
3. On the align screen, use your stylus to touch the crosses on the screen accurately.
4. Tap **OK** to exit.

2.6 Input method


Your O2 Xda Stealth provides the following input methods for you to edit text. You can choose among the input methods by tapping the arrow next to the input panel button.


Block Recognizer

With **Block Recognizer**, you can input character strokes (using the stylus) that are similar to those used on other devices.

1. On your screen keyboard, tap the arrow icon next to the keyboard icon for more input methods. On the pop-up list, tap **Block Recognizer**.
2. Write letters and numbers in a corresponding field, the system will display the letters/ numbers identified from your handwriting.
3. Do not write letters / numbers continually to prevent recognition error.
4. Do not write letters outside of the input fields.


Keyboard

You can input data by using screen keyboard. Tap  icon on your screen to open the screen keyboard. Follow the steps below to input your data:

1. On your screen keyboard, tap **Shift** or **CAP** key to input a Capitalized letter or to input multiple symbols.
2. Tap the key on your screen keyboard to delete.
3. To close the screen keyboard, tap  icon again on your screen to hide the screen keyboard.

Please note: To change the displayed keyboard size on the screen, tap the arrow beside **Keyboard** icon and tap **Options**. Under **Input**

screen, you may select either **Large keys** or **Small keys** by tapping on its radio button.

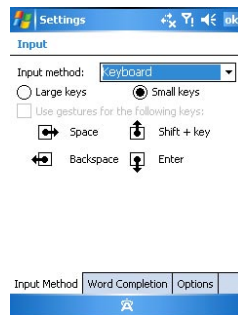





Letter Recognizer

1. On your screen keyboard, tap the arrow icon next to **Keyboard** icon for more input methods. On the pop-up list, tap **Letter Recognizer**.
2. Write letters and numbers in a corresponding field on your **Letter Recognizer** screen. Your O2 Xda Stealth will display the letters / numbers that you had just input in **Letter Recognizer** fields.
3. Tap the key to delete an input.



Smart Input

This input method allows you to edit text by either tapping on screen panel or pressing 12-key phone keypad. Using this method, the number of key pressed required will be dramatically reduced.


1. On your screen keyboard, tap the  next to  icon for more input methods. On the pop-up list, tap **eZiText** for **Smart Keypad**.
2. Tap  icon to switch between Numeric keypad and Alphabetic keypad. For example, to input "Stealth," simply tap the combination of the letters assigned to the following number string: "7832584." Select the spelling until it displays on the list on top left screen. To insert a symbol, tap "1" to open a quick symbol list or tap  icon to get more symbols.
3. To use the 12-key phone keypad, you can start by pressing the key and the screen panel will close. For example, to input "Stealth," simply press the combination of the letters assigned to the following number string: "7832584." Confirm the spelling you want by pressing **5-way Key- Center**. To insert a symbol, press "1" to open a quick symbol. You can also clear a letter by pressing "*" or add space by pressing "0".


Transcriber

Transcriber allows you to write on the full screen using the stylus just as you would write on paper. Unlike **Letter Recognizer** and **Block Recognizer**, you can write a sentence or more than one sentence. Pause and let **Transcriber** change the written characters to typed characters.

1. On your screen keyboard, tap the arrow  icon next to  icon for more input methods. On the pop-up list, tap **Transcriber**.
2. Position the cursor where you want text to appear.
3. Use the stylus to write anywhere on the screen. The handwriting will be converted to text after you lift the stylus from the screen.

Learning how to write in Transcriber

1. Tap  on the tool bar.
2. A **Letter Shapes Selector** screen will appear, select the character you wish to explore, tap the picture of this character on top of the screen, and it will demonstrate the writing sequence of the letter. Select how often you write the character using that method.
3. When you finish the selecting all the letters, you can save these as a profile by tapping **File > Save**.

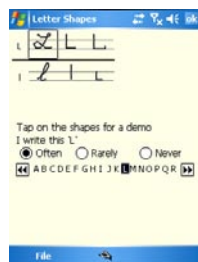


2.7 Drawing on the screen

You can draw on the screen in the same way that you write on the screen. The difference between writing and drawing on the screen is how you select items and how they can be edited. For example, selected drawings can be resized, while writing cannot.

Creating a drawing:

Cross three ruled lines on your first stroke. A drawing box appears. Subsequent strokes in or touching the drawing box become part of the drawing. Drawings that do not cross three ruled lines will be treated as writing.

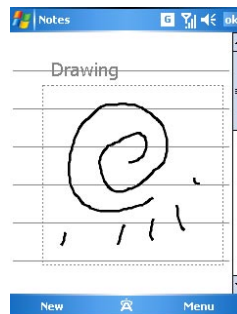

Selecting a drawing

To edit drawing, select it first.

1. Tap and hold the stylus on the drawing until the selection handle appears. To select multiple drawings, deselect the pen button and drag to select drawings you want.
2. You can cut, copy, and paste selected drawings by tapping and holding the selected drawing and tapping an editing command on the pop-up menu, or by tapping the command

on **Edit** menu. To resize a drawing, make sure **Pen** button is not selected, and drag a selection handle. To change the zoom level so it is easier to work or view your drawing, tap **Tools** and select a zoom level.


2.8 Recording a message



In any program where you can write or draw on the screen, you can also quickly capture thoughts, reminders, and phone numbers by recording a message. In **Calendar**, **Tasks**, and **Contacts**, you can include a recording in **Notes** tab.

In **Notes**, you can either create a standalone recording, or include a recording in a written note. If you want to include the recording in a note, open the note first. In the Messaging program, you can also add a recording to an E-mail message.

Creating a recording

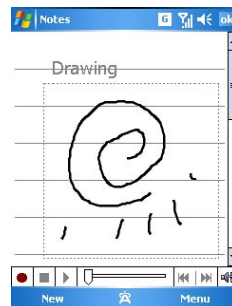1. To add a recording to a note, open the note before recording. Tap **Start > Programs > Notes**.
2. If there is no **Record/Playback** toolbar, tap **Menu > View Recording Toolbar**.
3. Hold your device's microphone near your mouth or another sound source.



4. To start recording, tap .
5. To stop recording, tap . The new recording appears in the note list.
6. To play a recording, tap in the open note or tap the recording in the note list.

You can also access the **Record/Playback** toolbar by pressing down **Volume** key for a while.

To quickly create a recording, hold down Volume key. When you hear the beep, recording has begun. Release the button when you are finished. The new recording is stored in the open note, or as a standalone recording, if no note is opened.

2.9 Editing my info

You can input your personal information to your Oz Xda Stealth in **Owner Information**.

1. Tap **Start > Settings > Personal tab > Owner Information > Identification** tab.
2. Tap **Name** field and input your name.
3. Tap a desired input field and input your information.
4. Tap **Notes** tab to input other information you would like to display on your Oz Xda Stealth.
5. If you want your information to be displayed on the starting screen, tap **Options** tab.

2.10 Password setup

You can set your own password to prevent unauthorized use of your Oz Xda Stealth.

1. Tap **Start > Settings > Personal tab > Lock > Password** tab.
2. On **Password** tab screen, check **Prompt if device unused for**.
3. Select an appropriate time.
4. Select a password type in **Password type** field.
5. Input your password in **Password** field and reconfirm the password in **Confirm** field.
6. Tap **OK**, a pop-up window will appear to confirm, "**Do you want to save password settings changes?**".
7. Tap **Yes** to finish settings and save the changes; **No** to cancel.
8. You may also input password hint message under **Hint** tab screen.
9. Tap **OK** to save your inputs.

Please note: If you forget your password, you need to perform system default, which will lose all your data and settings.

Chapter 3 Phone Functions

3.1 Phone screen and key introduction

3.2 Making a call

3.3 Receiving / Ignoring a call

3.4 International calls

3.5 Emergency calls

3.6 Volume adjustment

3.7 Contacts

3.8 Creating a new contact

3.9 Call history

3.10 Setting ring tone and password

Chapter 3. Phone Functions

3.1 Phone screen and key introduction

Press Call key to enter phone functions. Please insert a SIM card before using these functions.

Phone screen


From **Phone** screen, you can access **Contacts**, **Speed Dial**, **Call History**, and more options under **Menu**. This screen has the following features:

1. The name of the network provider
2. The number you entered
3. Touch screen keypad
4. Contacts list
5. Signal strength
6. Clear numbers
7. Received, dialed and missed call history
8. Quick dial a number
9. Make/End a call
10. Access more options



When a call is connected, the screen displays the following:

1. The calling status
2. The name and number of the contact you are calling
3. Speaker On/Off
4. Create a note for the call
5. Return to the phone screen
6. Contact list
7. Mute the call
8. Hold the call
9. End the call
10. Access more options

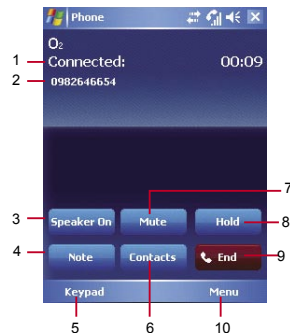

3.2 Making a call

With your O2 Xda Stealth, you can make a call by entering the phone number, or selecting a number from **Contacts**, **Speed Dial**, and **Call History**.

1. After entering the phone function, you can dial a number using the dial keypad or the keypad on your screen.
2. To delete an error input, use **←** key on your screen.
3. Press **☎** to make a call.
4. Press **☎** to end the call.

Speed dial

You can set ten phone numbers in your speed dial list.

1. After entering phone function, press **Speed Dial** button on your screen to enter your **Speed Dial List**.
2. On **Speed Dial List** screen, you can select a contact on your list to see the contact's detailed information.
3. On **Speed Dial List** screen, tap **Menu** on the bottom right corner of the screen. You can perform **New**, **Edit**, or **Delete** contacts on your **Speed Dial List**.
4. To make a call, press the corresponding number on your keypad to call the contact on your speed dial list.
5. You can also use the navigation key to select a contact you want to call on the speed dial screen, and then press Call Key to call.
6. Press End Key to end the call.

3.3 Receiving / Ignoring a call

When you receive a phone call, a notification message will appear. To answer the incoming call, tap **Answer** or press Call Key.

To ignore or reject a call, tap **Ignore** to mute the phone and reject the call.

This may divert the call to your voice mail, depending on your network operator.

3.4 International calls

When you make an international call from any country, you need to insert a special international access code. If you enter "+" symbol as a prefix before the number you are calling, then you do not need to enter the access code for the country you are calling from.

To make an international call

1. Tap and hold **0** key until + sign appears. + replaces the international prefix of the country that you are calling from.
2. Enter the full phone number you want to dial. It should include the country code, area code (without the leading zero), and phone number.
3. Tap **Talk** or press Call Key.




3.5 Emergency calls









Enter the international emergency number **112**, and then tap **Talk** or press Call Key. Additional emergency numbers may be included on your SIM card. Contact your network operator for more information.

If your O2 Xda Stealth has entered **Device Lock** mode, you have to unlock the phone first before placing emergency call.

1. Press the **Unlock** on left soft key.
2. Press "Unlock" displayed on the middle of screen again.

3.6 Volume adjustment

Tap  icon on screen and the volume adjustment window will appear. Adjust the volume of alert tone for all programs tapping on , and adjust the ring volume by tapping on .


1. Press the volume adjustment key on the side manually or tap  >  to adjust incoming call volume.
2. If you press the volume adjustment key on the side of your O2 Xda Stealth or tap  >  icons during a call, you may adjust the in-call volume of the phone. You can only adjust it during a call.
3. When you select **Vibrate**,  icon will change to .
4. When you select **Off**,  icon on screen will change to .

3.7 Contacts

On **Today** screen, you can tap **Contacts** on the bottom right of the screen to enter **Contacts**. Or under **Phone** screen, tap **Contacts** on the bottom left of the screen to enter **Contacts**.

1. Enter the contact or phone number you intend to search into the search field, the phone will search for the contacts that match this condition.
2. Push and hold **5 Way Navigation Key** upwards or downwards to browse contacts by initial letters in **Contacts**. (This function is available for contacts synchronized from **Outlook** only.)
3. Tap on any contact to view that contact's information.
4. Under **Contacts** screen, tap **Call** on the bottom left of the screen or press the left function key to make a call to that person.
5. Under **Contacts** screen, tap **Menu** on the bottom right of the screen for more options.

If you would like to make a call using a telephone, go to **Contacts** and highlight the person you would like to make a call to. Tap **Menu** > **Sounds DTMF**; then aim your O2 Xda Stealth to the telephone receiver. Your telephone will dial out to the desired contact upon reception of the DTMF sounds from your device.

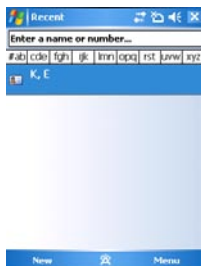

3.8 Creating a new contact

On **Contacts** screen, tap **New** on the bottom left of the screen. A blank record will appear.

1. You may set photos in **Picture** field for this contact, by which the contact's photo will display as an incoming call photo ID.
2. You may also tap **Ring tone** field to set different incoming call ring tones for your contacts.
3. Tap **OK** on the top right of the screen to save the new contact and exit.

3.9 Call history

Call History contains all outgoing calls, incoming calls, and missed calls. You may choose to display all or only display highlighted items.

1. Under **Today** screen, tap **Call History** on the bottom left of the screen.
2. Tap **Menu** on the bottom right of the screen.
3. Select a desired function to perform. You may change call history display method by selecting **Filter**; or select **Call Timers** to check incoming call numbers, call time, and manage incoming call history.
4. Under **Call History** screen, select the icon on the upper left side of the main screen to redial this number at once.
5. Under **Call History** screen, tap and hold on a phone number to open a drop-down menu for more options.

3.10 Setting ring tone and password

On **Phone** screen, tap **Menu** on the bottom right of the screen. Tap **Options** > **Phone** tab.

1. You may select preferred ring type.
2. If you want to download ring tones, please use **ActiveSync program** in computer and copy the ring tone file to **Application Data** / **Sounds** folder in your O2 Xda Stealth. The ring tone files will be added as the options.
3. You can set keypad tone for dialing.
4. You can set personal password to prevent unauthorized use from others.

Chapter 4

Settings

4.1 Personal settings

4.2 System settings

Chapter 4. Settings

4.1 Personal settings

You may set your personalized settings by preference.

Buttons


You may set certain keys as the activation keys for your most commonly used programs.


1. Tap **Start > Settings > Personal tab > Buttons > Program Buttons** tab.
 - Under **Select a button**, tap the button you want to assign to a program, and then select a program from Assign a program.
2. In **Up/Down Control** tab, **Delay before first repeat** changes the time elapsed before scrolling begins. **Repeat rate** changes the time it takes to scroll from one item to the next.
 - Press and hold the up/down control to scroll through the items in a list to adjust.



Input

1. Tap **Start > Settings > Personal tab > Input**.
2. On **Input Method** tab, select a desired input method. On **Word Completion** tab, select the desired settings for word completion. On **Options** tab, select the desired options for writing and recording. These options apply to any program on your O2 Xda Stealth where you can record or write.


You can also change input options by tapping the  arrow and **Options**.

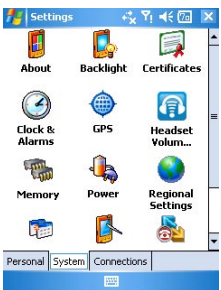

Lock

A strong password must have at least 7 characters that are a combination of uppercase and lowercase letters, numerals, and punctuation.

1. Tap **Start > Settings > Personal tab > Lock**.
2. To enable this function, select how long your O2 Xda Stealth must be turned off before the password is required for using your O2 Xda Stealth by tapping **Prompt if device unused for**.
3. Select the type of password you would like to use: **Strong alphanumeric** or **Simple PIN**.
4. Enter the password and,
 - If your O2 Xda Stealth is configured to connect to a network, use a strong password to help protect network security.
 - If you forget your password, you must hard reset before you can access your O2 Xda Stealth. A hard reset will erase all files and data you have created and any programs you have installed.
 - If you have used ActiveSync to create a backup file, all of your program data can be restored.

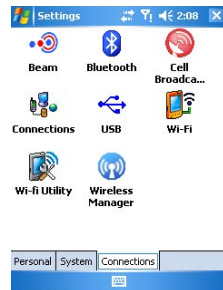

Menus

Only 7 programs are allowed in **Start** menu. To add the programs you use most often to **Start** menu:

1. Tap **Start > Settings > Personal tab > Menus**.
2. Select the programs you want, and then tap **OK**.

MSN options

Under **MSN Options**, you can configure settings for MSN applications.

Option	Description
General	To increase phone security, you can select to Clear Saved Password .
Hotmail	Select the E-mail delivery options, filtering level of junk mails, and choose whether to activate Download new E-mail automatically .
Messenger	Enter your display name when you sign in to MSN Messenger.
SMS	Select to activate SMS for receiving MSN messenger message when data connection is temporarily unavailable.
Switch User	Press Switch User button to sign in with a new login name.

Owner information

1. Tap **Start > Settings > Personal tab > Owner Information**.
2. On **Identification** tab, enter your personal information.
3. On **Notes** tab, enter any additional text you want to display when your O2 Xda Stealth is turned on, such as: "Welcome!"
4. On **Options** tab, select which message will display when your O2 Xda Stealth is turned on.

Phone

You can easily view and change settings, such as the ring type and ring tone to be used for incoming calls, and the keypad tone to be used when entering phone numbers. You can also protect your device from unauthorized use. There are two ways to change phone settings:

- Tap **Start > Settings > Personal tab > Phone**.
- To change the phone settings from **Phone** screen, tap **Menu > Options**.

Phone tab

Under **Phone** tab, you can set up the following items:

Ring type

You can change the way that you are notified of incoming calls. For example, you can choose to be notified by a ring, a vibration, or a combination of both. Tap the **Ring type** list, and select the desired option.

Ring tone

Tap Ring tone list, and then select the sound you want to use.

1. To set .wav or .mid files as ring tones, use ActiveSync on your PC to copy the file to **\\Windows\\Rings** folder on your O2 Xda Stealth. Select the sound from the **Ring tone** list.
2. To download ring tones, you can make a connection to the Internet and then download ring tones that are compatible with the .wav or .mid formats.

Keypad

You can change the tone you hear when entering a phone number on the keypad. If set to **Long tones**, the tone is heard continuously for as long as the number on the keypad is pressed. If set to

Short tones, the tone is heard only for one or two seconds.

1. Tap **Keypad** list; then select the option you want.
2. To prevent tones from being heard when entering a phone number, select **Off**.

Security

You may check **Require PIN when phone is used** option to enhance your phone security. Tap **Change PIN** icon to change your SIM PIN number.

Services tab

Settings include **Call Barring**, **Caller ID**, **Call Forwarding**, **Call Waiting**, **Voice Mail and Text Messages**.

1. Tap **Start > Settings> Personal tab > Phone > Services** tab.
2. Check the items you want to select and tap **Get Settings....**
3. Tap **OK** to save settings and return to Personal tab screen.

Option	Description
Call Barring	Block incoming and/or outgoing calls.
Caller ID	Display your name and/or phone number for outgoing calls.
Call Forwarding	Forward all or selected incoming calls to a different number.
Call Waiting	Notify you an incoming call while you are on the phone.
Voice Mail and Text Messages	Set up voice mail and SMS service center.

Please note: All services in **Services** are provided by operators. Please contact your operator for enquiries regarding these services.

Network tab

Tap **Start > Settings> Personal tab > Phone > Network** tab

- Under **Current network**, tap **Find Network** to automatically search for the network in use.
- Under **Network Selection**, select **Automatic** or **Manual** to select network automatically or manually.
- Under **Preferred networks**, tap **Set Networks** to set your preferred order of networks.

Information tab

This tab provides device related phone information.

Sounds & Notifications

Turning off sounds and the notification helps conserve battery power. To change the ring type and volume:

1. Tap **Start > Settings > Personal tab > Sounds & Notifications**.
2. On **Sounds** tab, you can select the desired actions.
3. On **Notifications** tab, you can customize how you are notified about different events. Select the event name and then select the type of reminder. You can select a special sound, a message, or a flash light.

Today

To change the theme of your **Today** screen:

1. Tap **Start > Settings > Personal tab > Today**.
2. On **Appearance** tab, select the desired theme. To use your own background, select **Use this picture as the background** and then tap **Browse** to locate the desired file.
3. Choose a folder, tap the file you want, and tap **OK**.

Please note: The recommend picture size for the background is 240x320 pixels in jpeg file format. To beam a favorite theme to a friend, select the desired theme, and tap **Beam** on **Appearance** tab.

Customizing the displayed information:

1. Tap **Start > Settings > Personal tab > Today > Items** tab.
2. Select the information you want to be displayed on **Today** screen.
3. To customize the information further, select an information type, and then tap Options (not available for all information types).

Voice Speed Dial





You can record voice tags to dial a phone number or launch programs by speaking to the device.

There are three ways to create a voice tag. To create a voice tag for a phone number.

1. Tap **Start > Contacts** and select the contact person by pressing and holding down to **Add Voice Tag**.
 - Alternatively, select the contact person and press **Menu > Add Voice Tag**.
 - Press the contact person and select the phone number. On the right side, press the Menu to select **Add Voice Tag**.

2. You can also tap **Start > Settings > Personal tab > Voice Speed Dial** and go to the **Contacts** tab.



3. Select one contact and then press  to create a voice tag.
4. If the contact person has multiple phone numbers, select one to create a voice tag.
5. Tap . After the beep sound, it will start to record your voice. The system will now build the recorded voice tag.
6. When prompted, if the voice tag was successfully built, a voice tag icon will be displayed on the right of the item.
7. You can rebuild a voice tag by tapping  again.
8. To delete a voice tag, select the item and tap ; the system will then remove this item's voice tag.

Please note


To improve the voice tag's accuracy, please record in a quiet place.

To create a voice tag for a program:

1. Tap **Start > Settings > Personal tab > Voice Speed Dial > Application** tab.
2. This setting page will display all installed applications on the Pocket PC's Start menu and **Programs** folder.

Please note

If the entry has a voice tag icon on the right side, this means that you have built a voice tag for this item.

3. Example: To create a voice tag for "Internet Explorer".
4. Launch **Voice Speed Dial**, tap **Application** tab.
5. Tap **Internet Explorer**.
6. Tap .
7. After the beep, say "IE".
8. The system will now build the recorded voice tag.
9. After the voice tag is successfully built, a voice tag icon will be displayed on the right of the item.
10. You can launch Voice Speed Dial; after the beep sound, say "IE" directly to launch "Internet Explorer".

11. You can rebuild the voice tag by tapping  again.






To delete a voice tag, select the item and tap ; the system will remove this item's voice tag.

To make a call or launch programs using a voice tag:

1. Tap **Start > Programs > Voice Speed Dial** or long press down the **volume key** on the left side of the O2 Xda Stealth.
2. After the beep, say the word that you have assigned to the phone number or programs you want to call. The Pocket PC will play back the recorded voice tag and dial out or launch programs automatically.
3. If the system fails to recognize the voice, try again; speak more clearly and reduce surrounding noise, if possible.

To view and play voice tags:

1. Tap **Start > Settings > Personal tab > Voice Speed Dial > Voice Tag**.
2. The system will list all voice tags here.
3. Select the item.
4. You can tap these buttons as follows:

-  : The system will play the created voice tag.
-  : You can re-record the voice tag.
-  : The system will remove this item's voice tag

4.2 System settings

About

Version tab displays important device information, including the amount of memory installed. On the **Device ID** tab, you may need to change your O2 Xda Stealth name if you are unable to connect to a network because another device with the same name is already connected

Backlight

Using the backlight on battery power substantially reduces battery life. Tap **Start > Settings > System tab > Backlight**.

- Tap **Battery power** tab to turn ON/OFF the backlight when using battery power.
- Tap **External power** tab to turn ON/OFF the backlight when using external power.
- Tap **Extended** tab to adjust the brightness level.

Certificates

This item displays the name of the certificate issuer and the expiration date.

Clock & Alarms

Tap **Start > Settings > System tab > Clock & Alarms**.

- If you visit a particular time zone often, select it as your Visiting time zone on **Time** tab so that you can quickly see the correct date and time.
- You can use your O2 Xda Stealth as a travel alarm clock by setting a wake-up alarm on **Alarms** tab. Tap the alarm icon to select the type of alarm you want.
- To change the way the date or time is displayed on your O2 Xda Stealth, go to **Regional Settings** by tapping **Start > Settings > System tab > Regional Settings**.

GPS

- Under **Programs** tab, you can choose the port that your device will use to obtain GPS data.
- Under **Hardware** tab, you can specify the hardware port to which your GPS device is connected. Settings include **GPS hardware port and Baud rate**.
- Under **Access** tab, you can activate **Manage GPS automatically**. You are strongly advised to activate this feature; doing so will enable Windows Mobile to manage access to your GPS device, and allows multiple programs to obtain GPS data simultaneously.

Headset Volume Limiter

This application enhances the pleasure of music by providing you an easy access to equalize system sound during music playing. You can drag the parameter with stylus to adjust the bands on the panel to tune a best sound volume profile!

Memory

You may need to stop a program if it becomes unstable or the program memory is low. Tap **Start > Settings > System tab > Memory**.

- **Main** tab displays the amount of memory the system has allocated to file and data storage versus program storage. This tab also displays the amount of memory in use versus the available memory.
- **Storage Card** tab displays how much memory is available on the storage card that is inserted into your O2 Xda Stealth.
- **Running Programs** tab displays the list of currently active programs. You can stop a program by selecting it in the list and then tapping **Stop**, or just tap **Stop All** to stop all the running programs.

Power

Tap **Start > Settings > System tab > Power**.

- **Battery** tab displays the amount of battery power remaining. Battery power depends on the battery type and how your O2 Xda Stealth is being used.
- Under **Advanced** tab, you can select options for turning off your O2 Xda Stealth to conserve battery power.
- Under **Extended** tab, you can check lock O2 Xda Stealth when entering stand-by mode. When your O2 Xda Stealth enters stand-by mode, it will automatically enable lock.

Regional settings

This feature allows you to customize the unit and format for the region you are in. To access this feature, tap **Start > Settings > System** tab > **Regional Settings**.

Remove programs

Remove Programs allows you to uninstall programs that are saved in your device's storage memory. It also shows the total available storage memory. Select a program that you would like to remove from the program box and tap Remove.

Screen

- Under **General** tab, you can adjust the screen's orientation and align the screen.
- Under **Clear Type** tab, you can select **Enable Clear Type** to smooth the edges of screen fonts for many programs.
- Under **Text Size** tab, you can adjust the text size to see more content or increase the readability in many programs.

Slide Setting

To answer and end the calls by sliding up and down, check Use Slider to answer phone call. This function enables your O2 Xda Stealth easy to use even in the dark since there is no light to look for the right buttons to press.

System Info

This feature displays the system information.

Chapter 5 ActiveSync Synchronization Tool

5.1 About synchronization

5.2 Installing ActiveSync


5.3 Choosing your synchronization type

5.4 Using ActiveSync tools

5.5 ActiveSync errors

Chapter 5. ActiveSync Synchronization Tool

5.1 About synchronization

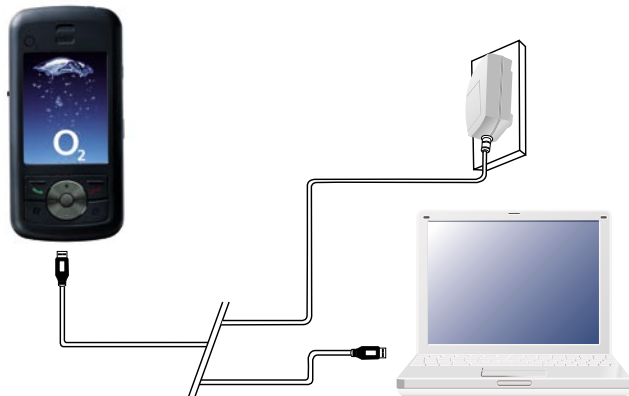


You can synchronize information between your PC or Microsoft® Exchange Server and your O2 Xda Stealth with **ActiveSync** on both your O2 Xda Stealth and PC. Before synchronizing information, please install **ActiveSync 4.2** on the PC. Then you can:

- Synchronize information to get the latest information in all locations.
- Add or remove programs on your device.
- Transfer files between your device and a PC.
- Change synchronization settings and the synchronization schedule.

Once you install **ActiveSync** on your PC, you will be prompted to connect your device and create a synchronization relationship with the device by using a USB cable or Bluetooth connection. While you are setting up this relationship you can choose the information you want to synchronize with either your PC or with Microsoft® Exchange Server.

5.2 Installing ActiveSync

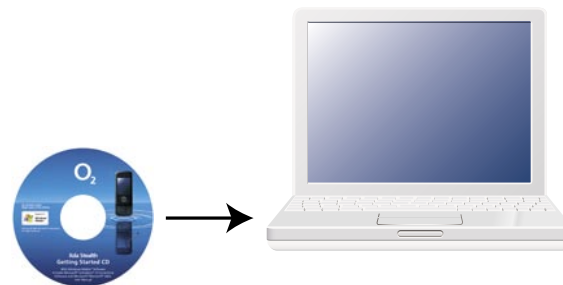

Please do not connect your device to the PC before installing **ActiveSync 4.2** on the PC from the Getting Started Disc included in your package. You may only connect the device to the PC by USB cable or Bluetooth AFTER ActiveSync is installed.

Please note: Your O2 Xda Stealth has built-in **ActiveSync** already. To install **ActiveSync 4.2** in your PC, please follow the instructions given when you run the Getting Started Disc. After finish installing ActiveSync in your PC, you will be asked to build a partnership with your device using one of the following connection methods:

- USB cable
- Bluetooth

5.3 Choosing your synchronization type

USB cable

You can connect your device with other devices via a mini-USB connector. You can manually change the connection settings as follows. The new settings will be used when you connect your device to the PC next time.

1. Tap **Start > Programs > ActiveSync**.
2. Tap **Menu** tab > **Connections**.
3. Choose **USB** in the drop-down menus and check **Synchronize all PCs using this connection**.

Bluetooth connection

You can also synchronize your information by using Bluetooth wireless connectivity technology, which allows your device to connect to a Bluetooth-compatible device within 10 meters. For best connection results, it is recommended that you connect the device to the PC using USB to establish a synchronization relationship before connecting via Bluetooth.

To synchronize via Bluetooth connection:

1. Execute **ActiveSync Help** on the PC and follow the instructions for configuring Bluetooth on your PC to support ActiveSync.
2. Tap **Start > Programs > ActiveSync**.
3. Tap **Menu > Connect via Bluetooth**. Make sure that the device and the PC are within 10 meters or shorter.
4. Tap **Sync**.
5. After finishing the synchronization, tap **Menu > Disconnect Bluetooth**.
6. Turn off Bluetooth to preserve battery power if not used.

Please note: Before you connect to this PC via Bluetooth, please make sure that you have set up a Bluetooth partnership with the PC: Tap **Start > Settings > Connections > Bluetooth**.


For more details, please refer to **Chapter 6 Getting Connected**.

5.4 Using ActiveSync tools

Once you've established the connection partnership between your device and the other mobile device, you can start synchronization. The information you can synchronize includes **Contacts**, **Calendar**, **Outlook E-mail**, **Tasks**, and **Notes**.

To select a specific data source:

1. Tap **Start > Programs > ActiveSync**.
2. Tap **Menu > Options**.
3. Launch **ActiveSync** on your PC, and turn the synchronization for specific information types on or off as necessary.

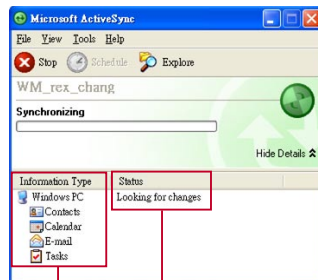

Information for synchronization Status of synchronization

Contacts

Contacts stored on your device can be synchronized with **Outlook** contacts stored on your PC or with Microsoft® Outlook® 2002 or later.

New items entered in one location are copied to the other during synchronization. Handwritten notes and drawings are saved as pictures when synchronizing with your PC, but are removed when synchronizing with a server. For more information on synchronization, see **ActiveSync Help** on the PC.

Calendar

You can synchronize calendar items on your device with calendar items on your PC or Microsoft® Exchange Server. You can only synchronize information directly with a Microsoft® Exchange Server if you are running Microsoft® Outlook® 2002 or later. Calendar synchronization is automatically selected in ActiveSync.

Calendar items entered on one computer are copied to the other during synchronization. Handwritten notes and drawings are saved as metafiles (pictures).

Outlook E-mail

After you have selected Inbox for synchronization in ActiveSync, Microsoft® Outlook E-mail messages are synchronized as part of the general synchronization process. During synchronization:

- Messages are updated from the **Inbox** folder on your PC or the Microsoft® Exchange server to the Inbox folder of the Outlook E-mail account on your device. You can only synchronize information directly with an Microsoft® Exchange Server if you are running Microsoft® Outlook® 2002 or later. By default, you'll receive messages from the last three days only, the first 100 lines of each new message, and file attachments of less than 100KB in size.
- Messages in the **Outbox** folder on your device are transferred to Exchange or **Outlook** and then sent from those programs.
- Messages on the two computers are linked. When you delete a message on your device, the message will also be deleted from your PC the next time you synchronize.
- Messages in subfolders in other E-mail folders in Outlook are synchronized only if they have been selected for synchronization in ActiveSync. For information on initiating Outlook E-mail synchronization or changing synchronization settings, see ActiveSync Help on the PC or Connections Help.

Please note: Text messages (SMS) and Multimedia messages (MMS) are not received through synchronization. Instead, they are sent to your device via your network service provider.

Tasks

Tasks stored on your device can be synchronized with **Outlook** on your PC. Task synchronization is automatically selected in **ActiveSync**.

New items entered on one computer are copied to your device during synchronization. Handwritten notes and drawings are saved as metafiles (pictures). For more information on synchronization, see **ActiveSync Help** on the PC.

Notes

Notes can be synchronized between your PC and phone either through notes synchronization or file synchronization. **Notes** synchronization synchronizes the notes on your device with **Outlook Notes** on your PC. File synchronization synchronizes all notes on your device with **My Documents** folder on your PC.

To synchronize your notes through notes synchronization, first select **Notes** information type for synchronization in **ActiveSync**. The next time you synchronize, all notes in **My Documents** and its subfolder on your device will appear in **Outlook Notes** on your PC. **Notes** that contain only text will appear as regular notes in **Outlook** on your PC, while notes containing written text or drawings will appear in the device format. In addition, all notes in **Notes** group in **Outlook** on the PC will appear in **Notes** on the device.

To synchronize your notes as files, in **ActiveSync**, select **Files** information type for synchronization and clear **Notes** information type. When you select **Files**, **My Documents** folder is created on

your PC's desktop. All .pwi files placed in **My Documents** folder on your device and all .doc files placed in **My Documents** folder on your PC will be synchronized. Password-protected files cannot be synchronized. **ActiveSync** converts documents during synchronization. For more information on synchronization or file conversion, see **ActiveSync Help** on the PC.

Please note: When you delete or change an item on either your PC or device, the item is changed or deleted in the other location the next time you synchronize. If you synchronize your notes using file synchronization and then later decide to use notes synchronization, all of your notes will be synchronized with **Outlook** on your PC and will no longer be stored in **My Documents** folder.

5.5 ActiveSync errors

Whenever **ActiveSync** cannot successfully synchronize your information, it displays an error on your device and your PC.

Viewing error information

Press **Action** button when the error text is displayed. **ActiveSync** will then display more information about the error that has occurred. Some types of errors can interfere with automatic synchronization. If you suspect that a scheduled automatic synchronization has not occurred, you should attempt to manually synchronize your information. Successfully completing manual synchronization will reset automatic synchronization. For more information, see **Synchronizing Information** section of **ActiveSync Help** on your PC.

Please note: Most firewall applications are intended to block network traffic and secure the PC from incoming network connections. Since **ActiveSync** uses TCP ports for data transfer with Devices, to avoid this potential experience, you will need to manually allow this traffic to be un-blocked by Firewall applications for the Device using **ActiveSync**. You will need to add ActiveSync application processes into **Firewall Programs Exception List**.

Chapter 6

Getting Connected

6.1 Wireless Manager

6.2 GPRS

6.3 Bluetooth

6.4 Wi-Fi

6.5 USB card reader

6.6 Internet Sharing

6.7 Terminal Services Client

6.8 Cell Broadcast Setting

6.9 VPN

6.10 USB cable

6.11 Connecting to the Internet

Chapter 6. Getting Connected


Your O2 Xda Stealth has powerful networking functions that enable you to connect to the Internet or to other devices. You may use a number of different methods, for example, GPRS network or Wi-Fi to connect to the Internet.

You can set up connections to the Internet and to a corporate network at work to browse the Internet, send and receive E-mail, use instant messages, and synchronize with **ActiveSync**. Via Bluetooth or USB functionalities, you can also transfer files between your O2 Xda Stealth and other devices.

There are two types of connection settings: My ISP and My Work Network. My ISP settings are used to connect to the Internet, and My Work Network settings can be used to connect to any private network, such as a corporate network. Fill in the settings and you are ready to connect to the Internet.

6.1 Wireless Manager

Wireless Manager is an integrated interface that combines **Bluetooth**, **Wi-Fi**, and **Phone** in one function page. To manage these wireless connections, tap **Start > Settings > Connections** tab > **Wireless Manager**. You may also access **Wireless Manager** from **Today** screen.

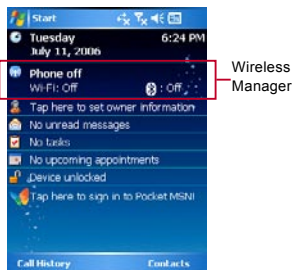

Tap **All** to turn on/off all wireless connections. If you only want to turn off Bluetooth, for example, tap **Bluetooth** and the button will become colorless. Tap **Menu** to set up these wireless connections.

6.2 GPRS



Before using GPRS to connect to the Internet, please contact your network operator to confirm that the service is enabled and supported on your SIM card. Using GPRS is convenient for you while traveling or working at home. You can use this device to browse web pages, read or send E-mail, text or MMS messages, and sign in Pocket MSN through wireless network.

GPRS connection settings



1. Select **Start > Settings > Connections** tab > **Connections > Advanced** tab.
2. Tap **Select Networks** to open **Network Management** screen.
3. Select a desired network name from the list, or tap **New** to add available network to the list. Tap **Edit** to modify existing network setup content.
4. Tap **OK** to save and exit.

Please Note: The simplest way to get your O2 Xda Stealth connected to the network is to activate O2 **Auto Configurator** (Please refer to Section 9.12 O2 Auto Configurator).

Activating GPRS connection

1. Tap **Start > Internet Explorer**.
2. Input an URL address you desire to browse in address field and tap the arrow icon to go to the URL.
3. After completing connection,  icon will become .
4. Or you may select **Start > Settings > Connections** tab > **Connections > Tasks** tab > **Manage Existing Connection** > tap and hold on a connection to open pop-up **Menu > Connect**.

After completing connection, you may go Internet surfing or send and receive E-mail.


Please note: If this device is under flight mode, please turn off flight mode beforehand. Tap  icon on Today screen, then tap "Wireless Manager" on the pop-up window. Tap on "Phone" to turn the phone function on. The  icon will appear on Today screen when GPRS is activated.

When using GPRS or connecting to the Internet, you will not able to answer a call. If you make a call, your device will automatically disconnect to the Internet and reconnect to the Internet after the conversation ends.

Spb GPRS Monitor

This program allows you to monitor GPRS traffic and cost in hourly, daily, monthly or yearly view. To monitor GPRS traffic:

1. Tap **Start** > **Programs** > **Spb GPRS Monitor** > **Chart** tab.
2. Select an icon to view its details:

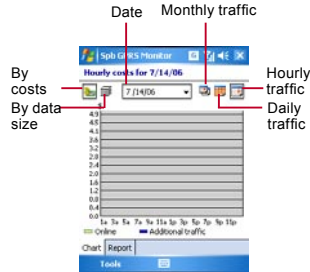

To view the GPRS report:

Tap **Start** > **Programs** > **Spb GPRS Monitor** > **Report** tab.

Connecting with your PC

If you want to connect this phone with your PC, please see **Chapter 5 ActiveSync Synchronization Tool**.

6.3 Bluetooth

Bluetooth is a short-range wireless communications technology. With Bluetooth, you don't need to line up the devices to beam information. The two devices only need to be within a range of about 10 meters. You may use Bluetooth in the following ways:

1. Exchange information, such as files, appointments, tasks, and contact cards, between devices that have Bluetooth capabilities. For example, if you and a co-worker each have a device with Bluetooth, you can beam items between your devices; these items could include files, contact cards, appointments, tasks, etc.
2. Create a dial-up modem connection between your device and a Bluetooth phone. You can then use the Bluetooth phone as a modem.

Bluetooth settings

To access the Bluetooth settings screen, tap **Start** > **Settings** > **Connections** tab > **Bluetooth**.

To turn on Bluetooth, check **Turn on Bluetooth** option; uncheck the option to turn off. If Bluetooth is turned off, you cannot use Bluetooth to either send or receive information. In order to conserve the battery power or where radio use is prohibited, you might want to turn Bluetooth off.

By default, Bluetooth is turned off. If you turn it on, and then turn off your device, the Bluetooth radio also turns off. When you turn on your device again, the Bluetooth radio automatically turns on the radio. If you wish to turn on the radio, turn off Bluetooth first, and then turn on the radio. To make your device visible to other Bluetooth devices, check **Make this device visible to other devices** option.

If Bluetooth radio is turned on, then all of the other Bluetooth devices within range (about 10 meters) can detect your device and attempt to beam information to it, establish a bond, or use a Bluetooth service. In this mode, other devices can detect your device whether or not a bond has been created; however, in order to receive a beam from another device, you must accept it on your device.

Other Bluetooth devices can now detect your device and attempt to beam information to it, establish a bond, or use a Bluetooth service. Note that, to receive beamed information, you must accept it on your device by selecting **Make this device visible to other devices**; this also turns on your Bluetooth radio. If you no longer want your device to be visible, uncheck **Turn on Bluetooth** option or uncheck **Make this device visible to other devices** option to leave the radio on, but not allow detection by other devices.

Bonds

To exchange information in a secure manner, you may use a bond to create a relationship between your O2 Xda Stealth and another Bluetooth device. To create a bond, you need to enter the same passcode on the two devices that you want to bond. You need only create a bond once between two devices. Once a bond is created, the devices recognize the bond and are able to exchange information without your needing to enter **PIN** again.

To create a bond:

You can create a bond between your device and another device that has Bluetooth. Once you do this, Bluetooth doesn't need to be in visible mode in order for you to beam information between the two devices; you only need to have the Bluetooth radio turned on.

1. Tap **Start** > **Settings** > **Connections** tab
2. Tap **Bluetooth** > **Devices** tab > **New Partnership**. Your device searches for other Bluetooth devices and displays them in the list.
3. Tap the name of the other device in the list, and then **Next**.
4. Enter a passcode of between 1 and 16 characters and tap **Next**.
5. Enter the same passcode on the other device.
6. In **Display Name**, edit the name of the other device if you want.
7. Tap **Finish**.

Please note: Make sure that the two devices are within 10 meters of one another and that Bluetooth is in visible mode on both devices.

To accept a bond:

1. Please make sure that Bluetooth is activated and visible to other devices.
2. When prompted to bond with the other device, tap **Yes**.
3. Enter a passcode of between 1 and 16 characters , and tap **Next**. You must enter the same passcode that was entered on the device requesting the bond.
4. In **Display Name**, edit the name of the device requesting the bond if you want.
5. Tap **Finish**.

The bond is created. You can now exchange information with the other device.

To rename a bond:

1. Tap **Start > Settings > Connections** tab.
2. Tap **Bluetooth > Devices** tab.
3. Tap the bond to rename.
4. In **Display Name**, enter a new name for the bond and then tap **Save**.

To delete a bond:

1. Tap **Start > Settings > Connections** tab.
2. Tap **Bluetooth > Devices** tab.
3. Tap and hold the bond and then tap **Delete**.

Beaming information with Bluetooth

1. Tap and hold an item to beam, such as an appointment in **Calendar**, a task in **Tasks**, a contact card in **Contacts**, or a file in **File Explorer**.
2. Tap Beam type of item.
3. Tap the device to which you want to send the beam. The item is beamed to the device you selected. If the device that you want to beam to does not appear in the list, make sure that it is turned on, in visible mode, and within 10 meters of your device. Also, make sure that your Bluetooth is turned on.

Receiving a Bluetooth beam:

1. Make sure that your device is configured to receive incoming beams and that Bluetooth is in visible mode.
2. Make sure that your device is within 10 meters of the device beaming the information.
3. When prompted to receive an incoming beam, tap Yes. The information is now stored on your device.

Using a Bluetooth phone as a modem

You can use a phone that has Bluetooth capabilities as a modem for your device. To do this, you create a Bluetooth modem connection on your device and then send information to the phone by using Bluetooth. The phone relays the information over the phone line and then sends back to your device any information that you had requested over the connection.

Once you create a modem connection to the Bluetooth phone, you can reuse it whenever you want to use the phone as a modem.

1. Make sure that the Bluetooth phone is turned on, that your device's and the phone's Bluetooth radios are turned on, and that your device and the phone are within 10 meters of one another.
2. If you have not already done so, create a Bluetooth phone connection using the method described below:
3. Tap **Start > Settings > Connections** tab > **Connections > Add a new modem connection**.
4. Enter a name for the connection.
5. In **Select a modem** list, tap **Bluetooth > Next**.
6. Make sure that the device is visible. Some phones may also need to be pairable in order to accept a bonding request.
7. If the device appears in **My Connections** list, skip to step 14. If not, tap **Add new device** and follow the remaining steps.
8. In the list, tap the device and then **Next**.
9. Enter a passcode of between 1 and 16 characters, and tap **Next**.
10. Enter the same passcode on the phone.
11. If you want, in **Display Name**, edit the name of the phone.
12. Tap **Finish**.
13. In **My Connections** list, tap the device, and then **Next**.
14. Enter the phone number to dial for this connection and tap **Next**.
15. In **User name**, **Password**, and **Domain**; enter the logon information for this connection and tap **Finish**.
16. Start using the program that uses the Bluetooth phone connection; for example, **Inbox** to send and receive E-mail, or **Internet Explorer** to browse the Web.

Bluetooth headset

To set up your device with a Bluetooth headset, you may refer to the user guide coming with your Bluetooth headset and the following instructions:

1. Tap **Start > Settings > Connections** tab > **Bluetooth > Mode** tab and check **Turn on Bluetooth** and **Make this device visible to other devices**.



2. Tap **Start > Settings > Connections tab > Bluetooth > Devices** tab and tap **Add new device** to scan for other Bluetooth devices.



3. Your device starts scanning for Bluetooth devices.



4. Enter the passcode for the located Bluetooth Device. For information, please refer to documents coming with your Bluetooth headset.




5. Define the display name and the type of service your Bluetooth device offers.



6. When you finish setup, you will see the Bluetooth device displayed in the menu.



7. Also, there will be a Bluetooth headset icon indicating the active connection status.

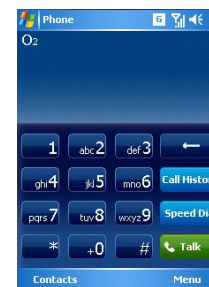

COM ports

For example, when you purchase a Bluetooth GPS-supported navigation software; you can register this device as an effective serial port by following the instructions on the manual of that product and the steps below:

Tap **Start > Settings > Connections** tab > **Bluetooth** > **COM Ports** tab. To register a new serial port:

1. Tap **New Incoming Port** to enter setup screen.
2. Select a port to be set.
3. Select Finish

6.4 Wi-Fi

Wi-Fi is a type of wireless local area network that communicates between two devices by high frequency radio waves. Your O2 Xda Stealth supports Wireless LAN, which is IEEE 802.11b/g compliant. It allows your device to connect to the Internet with detected wireless network.

To activate Wi-Fi

1. Tap **Start > Settings > Connections** tab > **Wireless Manager**.
2. Tap **Wi-Fi** to activate wireless network.
3. Tap **Done** to exit.

To check your Wi-Fi status

Tap **Start > Settings > Connections** tab > **Wi-Fi Utility** > **Wi-Fi Status** tab and you may see the details of your phone's wireless LAN connection, including **Status**, **ESSID**, **BSSID**, **BSS Mode**, **Channel**, **Data Rate**, **IP Address**, and **Signal Strength**.

To configure Wi-Fi settings

Tap **Start > Settings > Connections** tab > **Wi-Fi Utility** > **Setting** tab and scroll to set the desired value/mode for the following setting items: **Adhoc Channel**, **Preamble**, **Data Rate**, **Power**

Save, **Power strength**, and **Auto Power off**. Tap **Set** button to confirm your setting.

To update IP info

Tap **Start > Settings > Connections** tab > **Wi-Fi Utility** > **IP Info** tab > **Renew** or **Ping** button to update IP information or locate the IP address of the other device.

To search IP address

Tap **Start > Settings > Connections** tab > **Wi-Fi Utility** > **Site Survey** tab > **Re-scan** button to search the **ESSID**, **Channel**, **RSSI**, and **BSSID** of the Wireless LAN.

To change IP address

1. Tap **Start > Settings > Connections** tab > **Wi-Fi** > **Network Adapters** tab.
2. In **My network card connects to** drop-down list, tap either **The Internet** or **Work**. If you are connecting to your ISP at home, tap **The Internet**. If you are connecting to a private network such as a corporate network at work, tap **Work**.
3. Tap the appropriate adapter in **Tap an adapter to modify settings** box. The IP address will now appear in **IP Address** box on **IP Address** tab.
4. To change TCP/IP settings if your ISP or private network does not use dynamically-assigned IP addresses, tap **Use specific IP address** and enter the requested information. Contact your ISP or network administrator to get the **IP address**, **Subnet mask**, and/or **Default gateway** (if needed).
5. To change DNS and WINS settings if your ISP or private network does not use dynamically-assigned IP addresses, tap **Name Servers** tab and enter the requested information. Servers that require an assigned IP address may also require a way to map computer names to IP address. DNS and WINS are the resolution options supported on your O2 Xda Stealth.

Please note: After activating Wi-Fi, a new window, **New Network Detected**, will appear if any is detected. Select **Connect** and enter your password to the local network. Tap **Connect** to connect this device with local network. You may use Wi-Fi for up to 2 hours. The actual use time will depend on the power status of your battery. While this feature is not in use, please disable it to save power.

6.5 USB card reader

You may use the device as a mass storage device or a mini SD card reader.

1. Tap **Start > Settings > Connections** tab > **USB**
2. On **USB Connection Mode** screen, tap **SD-Card Reader**, and then tap **Change**.
3. Connect the phone to the computer with USB cable.
4. Your PC will automatically detect the new hardware. Now you can view or transfer files to and from your mini SD card.

6.6 Internet Sharing

By using utility, you can set your O2 Xda Stealth as a wireless modem. **Internet Sharing** allows your PC/Notebook be connected to a wireless network. Before creating a new modem via the selected connection type, you still need to install the drivers on your PC/Notebook. Please find the drivers in the Getting Started Disc.

1. Tap **Start > Programs > Internet Sharing**.
2. Select a **USB** or **Bluetooth PAN** as **PC Connection** type.
3. Connect your device via USB cable or Bluetooth to a PC/Notebook, and then tap **Connect**.

Please note: Before you tap **Connect**, please make sure that your have installed a GPRS SIM

card, and that you have connected this phone to your PC/Notebook by USB cable or Bluetooth and disabled **ActiveSync**.

6.7 Terminal Services Client

Using **Terminal Services Client**, you can log onto a PC running Terminal Services or Remote Desktop and use all of the programs available on that PC from your mobile device. For example, instead of running Word Mobile, you can run the PC version of Word and access all of the .doc files on that PC from your device. Connecting to a terminal server starts a remote connection to the server via a GPRS or Wireless LAN connection:

1. Tap **Start > Programs > Terminal Services Client**.
2. To connect to a server you have previously connected to, define a server in **Recent servers**. To connect to a new server, enter the server's name in the **Server** box. Check **Limit size of server desktop to fit on this screen** box only when using applications that have been specifically sized for use with the device.
3. Tap **Connect**.

Please note: If the network administrator has configured **Terminal Services Client** to reconnect to disconnected sessions, and you previously disconnected from a Terminal Server without ending the session, the Terminal Services Client will reconnect to that session.

Navigating within Terminal Services Client

Once connected to the server, the PC's screen may more than fill your phone's screen. If scroll bars are displayed on the server's screen, you will see more than one set of scroll bars on your device: one to scroll information on the PC, and one to scroll the PC display through **Terminal Services** window in **Terminal Services Client**.

To ensure that you are scrolling the PC display through **Terminal Services Client**, use the five directional buttons at the bottom of **Terminal Services Client** screen.

To better fit information onto your mobile device's screen, select **Limit size of server desktop to fit on this screen**. For best effect, programs on the desktop computer should be maximized.

Disconnecting without ending a session

The following commands must be accessed from **Start** menu in the Terminal Services window used to access the PC's commands. Do not use **Start** menu on your device.

1. In **Terminal Services** window on your PC, tap **Start > Shutdown**.
2. Tap **Disconnect**.

If your administrator has configured **Terminal Services Client** to reconnect to disconnected sessions, you will be reconnected to this session the next time you connect to this server.

Disconnecting and ending a session

1. In **Terminal Services Client** window, tap **Start > Shutdown**.
2. Tap **Log Off**.

6.8 Cell Broadcast Setting

You can receive broadcast channel information and news from your service provider (please check with your service provider for this service). Tap **Start > Settings > Connections** tab > **Cell Broadcast Setting**.

6.9 VPN

VPN is the network that allows authorized users to access and transmit data.

To create a VPN connection:

1. Tap **Start > Settings > Connections** tab > **Connections > Add a new VPN server connection**.
2. Enter the VPN server **IP** and tap **Next**.
3. Select the way to authenticate **IPSec/L2TP** connections and tap **Next**.
4. Enter **My VPN** details and tap **Advanced** tab to continue further setup or **Finish** to exit.

6.10 USB cable

To access the Internet, you may connect your device to a PC via a USB cable. Make sure that the PC you are connected can access the Internet.


6.11 Connecting to the Internet

Once connected, you can use Internet Explorer to surf the Internet. While surfing, you can also download files and programs to be installed on your device from the Internet or intranet. During synchronization with your PC, download your favorite links and mobile favorites that are stored in **Favorites** folder in Internet Explorer on the PC. To synchronize and download your favorite links from your PC, in your PC's ActiveSync, select **Favorites** on **Tools** menu > **Options > Sync options**.


Browsing the Internet

Open Internet Explorer screen by tapping **Start > Internet Explorer**.

1. In the address bar that appears at the top of the screen, enter the Web address you want to connect to. Tap **▼** to choose from previously entered addresses.

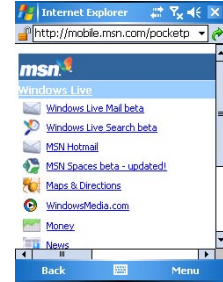

2. Tap **Back** to go back to the previous page.
3. Tap **Menu > Refresh** to refresh the web page on the screen.
4. Tap **Menu > Home** to go back to the Home page.

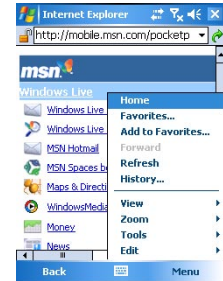

5. Tap **Favorites**, and the favorite address you want to view. To add a favorite link while using your device, go to the page you want to add, tap and hold on the page, and tap **Add to Favorites** on the pop-up menu.

Chapter 7

Messaging

7.1 Short Message (SMS)

7.2 Multimedia messages (MMS)

7.3 Voice mail

7.4 E-mail

7.5 Push E-mail

7.6 Pocket MSN

Chapter 7. Messaging

You can receive e-mails and text messages in **Messaging**. Text messages are sent and received through your network operator by using a phone number as the message address. Before receiving and sending your e-mails or messages, please make sure that your O2 Xda Stealth has connected to a network.

Your O2 Xda Stealth supports the following messaging services:

SMS (Short Messaging Service)

SMS allows you to send short messages. For receiving and sending text messages (SMS), you only need to ensure that the phone function is activated by observing the satellite icon on the top of outline bar. It is not necessary to activate GPRS connection or establish new e-mail account and connection.

For SMS (Short Messaging Service), please read **Section 7.1 Short Message**.

MMS (Multimedia Messaging Service)

MMS allows you to send multimedia messages. You can include text, pictures, photos, sound files or recorded voice in a MMS message. To send an MMS message, you must register and configure the MMS service with your network provider.

For MMS (Multimedia Message Service), please read **Section 7.2 Multimedia messages**.

Voice Mail

You can forward a call to your voice mail box when you are unable to receive a call. The voice mail centre will send you a notification.

For Voice mail, please read **Section 7.3 Voice Mail**.

E-mail

You can either use your O2 Xda Stealth to directly send/receive e-mails from e-mail server or by synchronously updating the Microsoft Outlook / Microsoft Exchange Server E-mail in your O2 Xda Stealth and PC.

For e-mail, please read **Section 7.4 E-mail**.

Please note: If you want to synchronously process e-mails, you must activate Inbox synchronization function in **ActiveSync** beforehand. For more information on Inbox synchronization, please see the online Help of ActiveSync in your computer.

Push E-mail

The Direct Push technology enables you to have access to your new incoming e-mails in real time.

For Push E-mail, please read **Section 7.5 Push E-mail**.

Pocket MSN

Your O2 Xda Stealth is equipped with Pocket MSN application. To send instant messages, you need to connect to the Internet.

For Pocket MSN, please read **Section 7.6 Pocket MSN**.


7.1 Short Message (SMS)

Writing a text message

1. Tap **Start > Messaging > Inbox** folder.
2. Tap **New**.

3. Tap **To** to enter the number of your recipient, and tap the blank content area to edit the message.
4. To access more editing options, tap **Menu**. The options inside enables you to:
 - **Add Recipient.**
 - Use predefined sentences in **My Text**.
 - Start **Spell Check** of your text.
 - **Check Names** of your recipients.
 - Choose to accept delivery notification by checking **Request message delivery notification** in **Message Options**.
5. To save the message to the draft box, tap **Menu > Save to Draft**.


6. To send the message, tap **Send**.

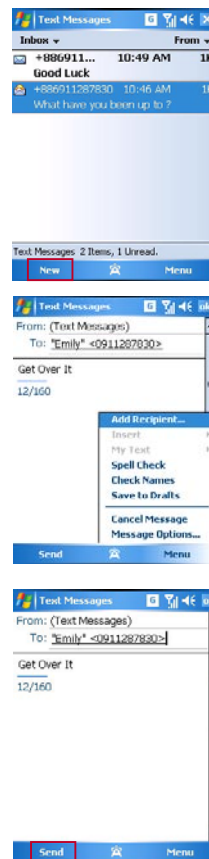

Reading SMS messages

1. Tap **Start > Messaging**.
2. Tap **Inbox**, select **Text Messages** to view the sub-folders such as **Inbox**, **Outbox**, **Drafts**, **Sent Items**, or **Deleted Items**.
3. Tap **Menu** to access more options which enable you to:

- **Delete** the selected message.
- **Reply** to the sender or **Reply All** to the included recipients.
- **Forward** the selected message.
- **Move** the message to other folders.
- Mark the message as **Read** or **Unread**.
- **Go To** other accounts such as **Outlook E-mail** or **MMS**.
- **Tools** to **Manage Folders**, **Empty Deleted Items**, **Clear "Text Messages"**, create a **New Account**, and more Options.

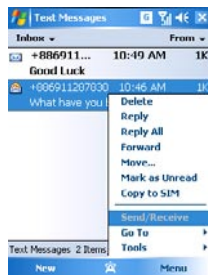

SMS settings

Text Message settings allows you to customize your **Accounts**, **Message**, **Address** and **Storage**.

1. Tap **Start > Messaging** and select **Text Messages** and then **Inbox**.
2. Tap **Menu > Tools > Options**.

In **Options** you can tap the following tabs to modify the settings:

- **Accounts** tab: Tap an account to change settings. For example, tap **"Text Messages"** to change **Request delivery notifications** and **Use Unicode when necessary**. Tap **New Account** to set up a new account. Or tap **Signatures** to use signatures to designate accounts.
- **Message** tab: Set up the following messaging features- **When replying to e-mail, include body**, **Keep copies of sent items in Sent folder**, and the **After deleting or moving a message** feature.
- **Address** tab: Select whether to get e-mails from all the contacts with e-mail addresses; alternatively, you can verify names by defining their e-mail addresses.
- **Storage** tab: Check the memory space of your device, storage card and attachments, **Store attachments on storage card** and specify how you want to empty your deleted items.




7.2 Multimedia messages (MMS)

Your O2 Xda Stealth allows you to create and share your own MMS messages (with photos, videos, text, and audio) with your contacts. During editing the MMS content, you can use Stealth's built-in camera to snap photos, and they will be directly inserted in the content.

Creating an MMS message

O2 Xda Stealth provides you multiple ways to create MMS. You can access a MMS composing screen from:


- **Pictures & Photos:** Select any picture in **My Pictures** folder, tap **Menu > Send** and select an account- **MMS**.
- **Camera or Video Recorder:** After capturing a picture or a video clip. Tap  on the preview screen and select an account- **MMS**.
- Tapping **Start > Messaging** and selecting **MMS** folder, then select **New**.

Before using MMS, please go to **Messaging**, select **Inbox** under **MMS**, tap **Menu > MMS Settings** to setup MMS.


Composing an MMS message

MMS messages are created by combing various slides. Each slide can include a photo, an audio or video clip, plus text.


1. Tap **Bcc**, **Cc**, or **To** fields to input recipient's phone number or address.

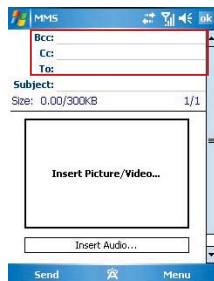


2. Tap **Subject** field to input a subject for your new message.

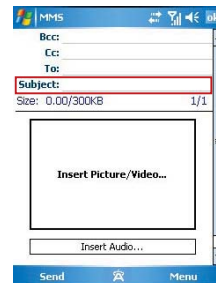


3. Tap **Insert Picture / Video** to select a picture / video as an attachment.

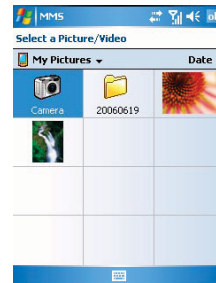

4. You may also tap **Insert Audio** to attach an audio file.

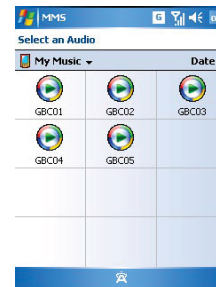

5. To input text content, tap in the empty area.
Insert Text on the bottom half of the screen and start editing.
6. If the message contains more than 1 page, you may switch between pages by tapping on the blue arrows next to message content.

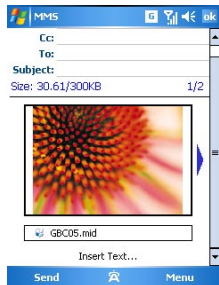


7. Tap **Preview** in **Menu** to preview the edited message.




8. Tap **Send** to start sending your message.

MMS menu options



When composing a MMS message, you can select **Menu** to access more editing options:


Item	Description
Add Recipient	When the cursor is in Bcc , Cc or To fields, choose this to add a new contact from your Contacts list.
Check Names	Help you to search for the names beginning with the letters of the alphabet that you entered in Bcc , Cc , or To fields.
Insert	<p>You can select the file type that you wish to be inserted: Picture, Video, Audio, Sound Recorder, vCalendar, vCard or File. If the slide already contains an audio or image file, then the video file cannot be inserted.</p> <p>If you select Sound Recorder, a recorder screen will appear, you can directly record an audio file, tap Menu > Select to save it and it will be inserted to the message.</p> 
My Text	Provides several pre-defined sentences that are frequently used in messages.

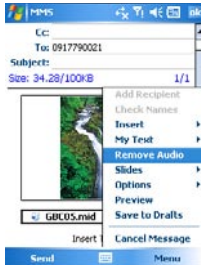

Item	Description
Remove Recipient/ Subject, Picture/ Video/Audio/ Text)	<p>The option title shown here will vary according to where the cursor locates. If the cursor is at an inserted audio object, the title will show Remove Audio.</p> 
Slides	You can go to Next or Previous slides, Insert/Delete a slide, or specify the display Duration of each slide.
Options	<ul style="list-style-type: none"> • Background Color: You can select a background color from a color palette for your message. • Message options: You can change settings for Priority, Validity period (maximum, 12 hours, 1 day, 1 week, and 1 hour), reception of a Delivery report, Read report or Hide Sender.
Preview	To play the MMS message you have composed before sending it.
Save to Drafts	Save the message to Drafts folder without sending out.
Cancel Message	To cancel the composing of the message and return to Inbox without saving.


MMS Inbox options





In **MMS Inbox**, the received messages will be listed by time, with the icons  showing the message has been (marked) read, or  showing the message is (marked) unread.

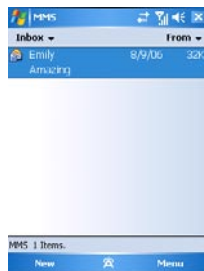

On **MMS Inbox** list, you can tap **Menu** to access functions for a single message or for the whole Inbox.

Item	Description
Delete	Delete the selected message. The deleted message will be stored in Deleted Items folder.
Reply	Reply to the sender of the selected message. You can edit the original message before sending it.
Reply All	Reply to all the senders and recipients referred in Cc and Bcc fields. You can edit the original message before sending it.
Forward	Forward the selected message to other recipients.
Move	Move the selected message to a different folder.
Mark as Read/ Unread	Mark the selected message as read or unread.
Download Message	Download the message from the server.
Send/Receive	Connect to the server to refresh and download the pending messages.

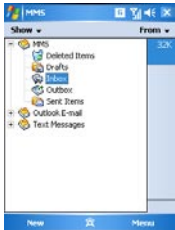
Item	Description
Go To	<p>You can select Folders to see the list of all the folders in Messaging, or enter other account folders.</p> 
Tools	<p>Help you to Sort the MMS, Manage Folders, Empty Deleted Items, Clear "MMS", create New Account, and access more features.</p> <ul style="list-style-type: none"> • Manage Folders: Shows the list of MMS folders, where you can create new folders, rename, delete and view the folder options. <p>Please note: The default system folders cannot be deleted.</p> <ul style="list-style-type: none"> • Empty Deleted Items: You will be asked by an alert message if you want to delete all messages permanently, which cannot be recovered once deleted. • Clear "MMS" : To clear all the messages and subfolders under MMS folder. Tap Yes to confirm deleting. • New Account: To create a new e-mail account. • Options: You can edit the settings for your account, messages, address book and storage.

Item	Description
MMS Settings	<ul style="list-style-type: none"> • General tab: You can modify the settings of the connection profile here. Activate Profile contains connection details such as the address of the MMSC server, Data Connection, Gateway, IP address and Port number. You can also modify Receive and Outgoing Message Size.   <ul style="list-style-type: none"> • Advanced tab: You can choose which message types you would allow to download; the types may be set as Informational, Advertisement or Automatic.   <ul style="list-style-type: none"> • About tab: The information about the software.

Reading MMS messages

You can tap on a single MMS message to view the content. During viewing a message:

1. You can use the playback controls **Play/Pause** or **Stop** to view the message
2. To see the list of attached files, tap **Menu > Object View**. If you want to save a particular file, tap it, and then choose **Save** from **Tools** menu.

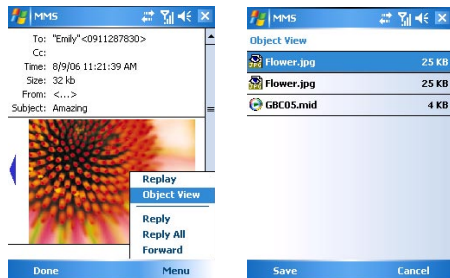

3. To view the slides manually, use the navigation buttons to scroll through the message.

7.3 Voice mail

This function enables you to divert received calls to a voice mail center where callers can leave voice messages under the following circumstances:

- You are currently on the phone.
- Your phone is switched off or is not able to receive signals.
- You did not answer the call.

This voice mail service is SIM card and network dependent. If the voice mail service is not included in your mobile network operator's package, you will have to subscribe to the service separately and configure the settings manually. Once you have successfully subscribed this service, you will be notified of a voice mail message by an icon on **Today** screen.

Calling the voice mail center

Initiate **Phone** screen > **Speed Dial** and call **Speed Dial 1**. You will enter the voice mail center.

7.4 E-mail

You can receive e-mails in **Messaging**. E-mails are sent by using an address that you receive from your Internet network operator (ISP), an E-mail network operator, or your employer. You can also send and receive e-mails by synchronizing with your PC, or by connecting to a Post Office Protocol 3 (POP3) or Internet Message Access Protocol 4 (IMAP4) mail server. Aside from the default Outlook E-mail account, you need to manually set up other E-mail accounts.

How you download copies of messages depends on how you are receiving messages:

- If you receive e-mails through a remote E-mail server, follow the instructions as described in the 7.5 Push E-mail.
- If you receive e-mails through ActiveSync, begin synchronization.

Synchronously processing E-mail

With synchronization, messages are synchronized between your O2 Xda Stealth and the PC by using ActiveSync and Microsoft Exchange or Outlook. If you want to synchronously process E-mail, you must activate the **Inbox** synchronization function in ActiveSync beforehand. For more information on **Inbox** synchronization, please refer to Chapter 5 Synchronization.

Please be aware of the following Inbox Synchronization process rules:

- Please select a desired cooperation relationship on **New Cooperation Relationship** screen in computer to synchronously transmit information. If you select not to perform synchronization, you may manually copy or move E-mail messages between your O2 Xda Stealth and the computer.
- Only the mails in **Inbox** of your computer will be synchronized.
- Only the mails in **Exchange** or **Outlook** can be synchronized.
- The mail from **Outbox** folder in your O2 Xda Stealth will be sent to your computer first, and then it will be delivered through Microsoft Exchange Server or Microsoft **Outlook**.
- If a specific letter is deleted in your O2 Xda Stealth, then it will also be deleted in your computer when you reconnect your device with computer.
- SMS in your device will not be synchronized.

Establishing E-mail services

If you have E-mail accounts from ISP or company network, you may use **Messaging** to receive or send e-mails. Please refer to the following instructions to set up a new E-mail account in **Messaging**.

1. Please acquire the following information from ISP or company network administrator:

- E-mail address, user name and password.
- POP3 or IMAP4 server name of Intranet E-mail
- SMTP server name for outgoing E-mail

2. Establish E-mail services:

Tap **Start > Messaging > Menu > Tools > New Account**, and then follow the instructions on the screen to set up a new E-mail account.

3. See Section 6.1 **Wireless Manager** to connect your O2 Xda Stealth to a network and start receiving and sending e-mails and messages.

4. Connect with E-mail Server:

- Tap **Messaging > Menu > Send and Receive**.
- Tap **Messaging > Menu > Tools > Options > Accounts** tab to change E-mail account settings.

When you finish, your new E-mail account will be displayed under this menu. You can start connecting to your E-mail server at this point. You can set up several E-mail accounts, including your Outlook E-mail account.

Connecting to the server

You may directly receive new e-mails from E-mail server without connecting to a computer. You may select to use it online or offline; if it is online, you may directly read and reply mail when your O2 Xda Stealth is connected to E-mail server. You can reply a mail directly by simply tapping **Send**.

You may select to disconnect to the internet after downloading only the subjects of new messages or partial messages and decide whether to download the full message later. When you reconnect next time, **Inbox** will download in accordance to appointed methods, and send out unsent e-mails in **Outbox**.

You may choose to read just the e-mails within the last few days, mail subjects only, or complete mail. You can also choose to receive only the attachments less than specific file size. To make these settings, tap **Start > Messaging > Menu > Tools > Options**, and change E-mail account setup by requirement.

Composing and sending an e-mail

Tap **Start > Messaging > New** to write a new e-mail. After writing a new e-mail, select **Send** on the bottom left of the screen to send this new e-mail.

When composing a new e-mail, you can:

1. Tap **Bcc, Cc, To** fields to input recipients' E-mail addresses.
2. Tap **Subject** field to input a subject for your new e-mail
3. You may enter mail content in the empty area on the bottom half of the screen.
4. Tap **Send** to start sending your e-mail.
5. Select the icon on the bottom center of the screen to activate or disable screen keypad.
6. Tap **Menu** to open menu.

Reading and replying an e-mail

Tap **Start > Messaging > Menu**, and then select **Send** and **Receive** from **Menu** to start sending and receiving new e-mails. Select **Inbox** on the top left of the screen to view Inbox. Tap on any unread e-mail to view its content.

When reading e-mails, you can:

1. Tap on a contact in **Bcc, Cc, or To** field to save this contact as a new contact.
2. Tap **Reply** to compose a reply e-mail.
3. Tap **Menu** to open menu.

On the e-mail content screen, select and hold to activate pop-up Menu.

7.5 Push E-mail

With Push E-mail, you can have access to new incoming e-mails in real time. This Direct Push Technology can be enabled by the Exchange Server 2003 administrator, bringing the latest information to you. To use Push E-mail, please turn on Wi-Fi or GPRS to connect to the Exchange Server.

Enabling Direct Push on your O2 Xda Stealth

1. On your O2 Xda Stealth, tap **Start > Programs > ActiveSync > Menu > Add Server Source**.
2. Input the IP address of your server in **Server Address**.
3. Input your network **User name, Password**, and **Domain**, and then tap **NEXT**.
4. In ActiveSync on your O2 Xda Stealth, tap **Menu > Schedule**.
5. Set **Peak times to As items arrive** and **Off-peak times to As items arrive**. Tap **OK**.

Now you have established a cooperative relationship for your O2 Xda Stealth and the Exchange Server. The next time when you tap **Start > Programs > ActiveSync > Sync**, you may synchronize with Exchange Server using Wi-Fi or GPRS.

Once you are connected to the network, you may look up your **Global Address List** over the air from your O2 Xda Stealth by tapping **Contacts**. You may send an e-mail to a contact on your **Global Address List** following the same steps as sending E-mail to a contact saved on your O2 Xda Stealth.

Please note: To be able to use direct push, you need to have an exchange server. Microsoft Exchange Server 2003 also supports useful functions such as remote device wipe. To find out more on the benefit and usage of Microsoft Exchange server, please visit Microsoft's website: <http://www.microsoft.com>

7.6 Pocket MSN

Pocket MSN provides you MSN features including:

- Seeing your contacts list.
- Sending and receiving instant messages.
- Instant chatting with your single contact or with groups of contacts.
- Editing and showing your MSN title.
- Notifying contacts of your on-line status.
- Blocking contacts from seeing your status or sending you messages.
- Composing your **MSN Hotmail**.
- Connecting to **MSN Mobile Home**.
- Getting help from **Pocket MSN Help**.

Before using the MSN Messenger, you will need to:

- Register an MSN Messenger account or Hotmail account.
- Turn on your GPRS or Wi-Fi connection
- Sign in to MSN Messenger.

To register a Microsoft Passport account, go to <http://www.passport.com>.

To set up a Hotmail account, go to <http://www.hotmail.com>.



Signing in MSN Messenger

1. Set up the connection to the Internet
2. Tap **Start > Programs > Pocket MSN > MSN Messenger > Tap here to sign in**.
3. Enter your MSN or Hotmail E-mail address and password. Your sign-in name is usually in the form: username@domain.com
4. Tap **Sign In**.



Tap here to sign in



Please note: Signing in to an Exchange account may take several minutes depending upon your connection speed.

MSN Hotmail

1. Tap **Start > Programs > Pocket MSN > MSN Hotmail**.
2. Input your MSN or Hotmail E-mail address and password.
3. Tap **Sign In** to enter **MSN Hotmail Inbox** screen.
4. In **MSN Hotmail Inbox**, you may receive your MSN or Hotmail E-mail through network.

Compose Hotmail

1. Tap **Start > Programs > Pocket MSN > Compose Hotmail**.
2. Input your MSN or Hotmail E-mail address and password.
3. Tap **Sign In** to enter **MSN Hotmail Inbox** screen.

MSN Mobile Home

Tap **Start > Programs > Pocket MSN > MSN Mobile Home**.

Pocket MSN Help

1. Tap **Start > Programs > Pocket MSN > Pocket MSN Help**.
2. Select a topic of interest by tapping on the topic.

Chapter 8

Multimedia

8.1 Camera

8.2 Video recorder

8.3 JAVA

8.4 Photo Editor

8.5 Pictures & Videos

8.6 Recorder



Chapter 8. Multimedia

8.1 Camera








You may use camera function in your O2 Xda Stealth to capture important moments.








Tap **Start** > **Programs** > **Camera**, or press down **Camera** key at standby mode to launch camera.

Capture mode

During capture mode, you can tap the icons on the top of the screen to switch through different modes, or tap  to open the full camera options menu. To switch to Video mode, simply press the center navigation key or tap  to enter the video standby mode.



No	Icon	Function	Description
1		Image Mode	Includes the following modes: Auto (default) / Day / Cloudy / Fluorescent and Night
2		Image Size	You can choose among: 1600 x 1200 / 1280 x 960 / 800 x 600 / 640 x 480 (default) / 320 x 240 / 160 x 120
3		Image Quality	Normal (default), Fine, Low.
4		Flash Light	Auto (default), On, Off.
5		Sequential Shot	18,12,6,3,Off (default)
6		Shutter Sound	On (default), Off
7		Zoom	Zoom Range: 1.0x (default) / 1.2x / 1.4x / 1.6x / 1.8x / 2.0x / 2.2x / 2.4x

No	Icon	Function	Description
8		EV Compensation	Provides the following values: +2.0 / +1.5 / +1.0 / +0.5 / 0.0 (default) / -0.5 / -1.0 / -1.5 / -2.0
9		Macro/Normal mode	Tap this icon to switch between Macro (within 10~60 cm) mode and normal mode
10		Remained Shots	Indicates estimate number of photos you can take using the current storage location.
11		Exit	Tap this icon to exit camera mode
12		Options Menu	Tap this icon to open options menu, in which the following options are provided: Mode, Effect, EV, Size, Quality, Timer, Sequential Shot, Flash, Shutter Sound, Storage, Reset Camera Settings and Flicker Frequency.
13		Pictures & Videos	Tap this icon to go to Pictures & Videos where the taken photos and videos are stored.
14		Video Mode	Tap this icon to change to Video mode

Taking a photo

1. On Camera capture mode, focus on the object.
2. Use volume adjustment side key to zoom in and out.
3. You can also tap on the icons on the top or open options menu to change camera settings.
4. Lightly press **Camera** key to auto-focus, fully press **Camera** key to shoot.
5. After you take a photo, the image will be categorized in **Pictures& Videos**.

Please note: The default storage location is phone memory.

Photo confirm screen



After taking a photo, you will enter the confirm screen where you can choose to delete or send out the image.

On this screen you can tap the following icons to:

No	Icon	Function	Description
1		Camera	Return to camera capture mode.
2		Send	Choose to send out this photo via E-mail or MMS.
3		Delete	Delete the photo on screen.
4		Pictures & Videos	Go to Pictures & Videos.

Viewing & editing photos

For details of photo viewing, please refer to **Section 8.5 Pictures & Videos**; for editing photos, please refer to **Section 8.4 Photo Editor**.

8.2 Video recorder

The phone camera can also be used as a video recorder to record memorable moments of your life.

Tap **Start > Programs > Camera** > , or directly press **Camera** key > to enter video mode.




No	Icon	Function	Description
1		Video Mode	Tap this icon to switch among the following modes: Auto (default) / Day / Cloudy / Fluorescent and Night
2		Video Size	Set to be 320 x 240
3		Remained Video Length	Indicates the estimated length of video you can take using the current storage location.
4		Exit	Tap this icon to exit video mode
5		Prepared to record /Recording	Indicates the video recorder status
6		Options Menu	Tap this icon to open options menu, in which the following options are provided: Mode, Effect, Video Format, MMS Video, Storage and Flicker Frequency.
7		Pictures & Videos	Tap this icon to go to Pictures & Videos where the taken clips are stored.
8		Video Mode	Tap this icon to change to Video mode

Recording a clip

1. On Video recorder mode, focus on the object. You can also tap on the icons on the top or open options menu to change video recorder settings.
 2. Press **Camera** key to start video filming.
 3. Press **Camera** key again to stop filming.
 4. After you record a clip, it will be categorized in **Pictures & Videos**.
- Please note:** The default storage location is phone memory.

Video confirm screen

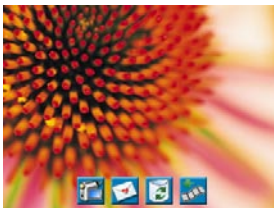

After recording, you will enter the confirm screen where you can choose to delete or send out the clip.

On this screen you can tap the following icons to:

No	Icon	Function	Description
1		Video	Return to video mode.
2		Send	Choose to send out this clip via E-mail or MMS.
3		Delete	Delete the photo on screen.
4		Pictures & Videos	Go to Pictures & Videos .

Viewing video clips

For details of video viewing, please refer to **Section 8.5 Pictures & Videos**.

8.3 JAVA

This device supports JAVA, providing you the freedom of using JAVA applications and games. You can manage and execute the Java applications here.

Installing JAVA applications

You can run the installation of a JAVA application stored on your device or storage card:

Please note:

A JAVA application suite normally consists of a .jad file and a .jar file that have the identical file name. They ought to be stored at the same location.

1. Tap **Start > Programs > JAVA > Option > Install**, and select either **My Document** or **Storage Card**.
2. Double tap the .jad file you wish to install.
3. Choose the category you wish the application to be placed in, and the installation will begin.


Running JAVA applications

1. Once an JAVA application is successfully installed, you can tap **Start > Programs > JAVA**, and enter the category to locate the application.
2. Select the application and tap **Option > Launch** to execute it.
3. You can also choose **Make a shortcut** to create a shortcut in **Programs**.



8.4 Photo Editor

You can handwritten messages on photos, or apply colorful frames and stamps by tapping **Start > Programs > Photo Editor**.

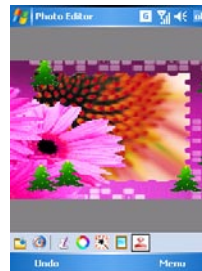On the editor screen, you can tap **Undo** to reverse the steps, or tap **Menu** to get further editing options.



The tool bar on the bottom also provides 7 functions:

No	Icon	Function	Description
1		Save	This button appears after you have modified a picture. Tap this to save the current image.
2		Undo	Revert
3		Pen Size	Choose a brush size
4		Choose Color	Choose a color of your pen from color palette or mix a paint by yourself
5		Effect	5 effects are available: Gray / Blur / Emboss / Negative / Classic
6		Choose Frame	3 photo frames are available: Star / Fall / Flower
7		Add Stamp	5 stamps for you to add more fun touches to your picture.


8.5 Pictures & Videos

You may use **Pictures & Videos** function to manage your photos or videos. By tapping **Start > Programs > Pictures & Videos**, you can:

1. Enter different folders
2. Select photo arrangement
3. Tap on a thumbnail picture to view the picture.
4. Select **Menu** for more options.





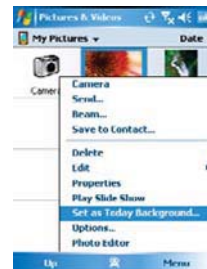


In **Menu**, you may resize the picture, also perform functions such as **Set As Today Background**, and **Play Slide Show**, or **Send**.



8.6 Recorder

Use **Recorder** to record voice memo and make note taking simple and efficient. Tap **Start > Programs > Recorder**.

1. Tap  to activate sound recording function.
2. Tap  to stop recording sound.
3. Before you start recording, you may set the recording time in **Duration** to set the duration of the recording.
4. Check **History** to show all your recorded files. Tap on any recorded file on your history list to play the file.
5. Uncheck **History** to hide the history window.
6. Tap **Menu > Save To** to choose the file location.
7. Tap  to leave recorder screen while still keep recording on the background; or tap **Menu > Exit**, to stop recording and exit.
8. When recording in the background, tap  to return to Recorder. Tap  to stop recording.



Please note: If there is an incoming call during recording, answering the call will automatically terminate recording. If you want to continue recording after ending call, you need to reactivate recording function.

Chapter 9 Applications

9.1 Calendar

9.2 Tasks

9.3 File Explorer

9.4 Internet explorer

9.5 Windows Media

9.6 Games

9.7 Download Agent

9.8 Calculator

9.9 Backup

9.10 Torch

9.11 ZIP

9.12 O₂ Auto Configurator

9.13 ClearVue

9.14 Excel Mobile

9.15 Notes

9.16 PowerPoint Mobile

9.17 Search

9.18 Voice Speed Dial

9.19 Word Mobile

9.20 Answer Machine

Chapter 9. Applications

9.1 Calendar

Appointments and meetings

You may use **Calendar** to arrange appointments, meetings, and other events. You may view your appointments in different display modes. You may select preferred display mode by tapping on the bottom left of screen to switch between day, week, month, and year.

1. Tap **Start > Calendar**. Select a date to go to the desired date.
2. Select an appointment on the list to view or edit appointment details.
3. Tap on **Day** (or **Week**, **Month**, **Year** and **Agenda**) on the bottom left of the screen to switch between display modes.
4. Tap on the keypad icon to activate or hide screen keypad.
5. Tap **Menu** on the bottom right of the screen to open menu.
6. Tap **Options** in **Menu**, you may change the display setup of Calendar by preference.

Creating an appointment

1. Tap **Start > Calendar**. Select the date and time of appointment.
2. Highlight the desired date and time, and then tap **Menu > New Appointment**.
3. Tap **OK** to save the entry and return to calendar.
4. Tap **Subject** to edit the field or select predefined text.
5. Tap **Location** to edit the field.
6. Tap **Starts** to select the start time.
7. Tap **Ends** to change the end time.
8. You can add your personal notes in **Notes** tab.
9. Tap **OK** to save the appointment and return to **Calendar** screen.

If you select **Remind Me** in **Reminder** field, then your O2 Xda Stealth will remind you according to the settings in **Start > Settings > Personal tab > Sounds & Notifications**.

Viewing and updating calendar

Select an appointment on **Calendar** to view appointment summary. If you want to change the details of an appointment, tap **Edit**.

Sending a meeting notice

You may use **Calendar** to set meeting notice by combining with the information on **Outlook** or **Pocket Outlook**. When you synchronize messages or connect your O2 Xda Stealth with e-mail server, meeting reminders will be generated automatically. Tap **Calendar > Menu > Options > Appointments** tab, and select desired meeting sending method in **Send meeting requests via** field.

Generating a meeting notice

1. Tap **Start > Calendar > Menu > New Appointment**.
2. Tap **Attendees** field. You will enter **Contacts**.
3. Select attendees from the e-mail addresses of your contacts.
4. The new meeting notice will be generated automatically and saved in **Outbox** folder.

9.2 Tasks

You may use **Tasks** to help you track unfinished tasks.

1. To add a new task, tap **Tap here to add a new task**.
2. **"!"** Represent first priority.
3. Select a single item to enter the details screen of this time.
4. Select a single item and hold to activate the pop-up menu.
5. You may change the arrangement of the tasks list. On **Tasks** screen, tap **Menu > Sort By**.
6. You may choose to display a specific task category on your tasks list. Tap **Menu > Filter**.

Adding a new task

1. On **Tasks** screen, tap **Tap here to add a new task** to add the new text's subject. The newly created task will show on **Tasks** list.
2. Tap on the new task to enter the detail information screen of task.
3. Tap **Edit** to enter the editing screen.
4. Select **Starts** and **Due** field to set the first and the last day of the task.
4. You may select **Occurs** to select whether this task has periodicity.
5. You may select **Reminder** to set a time to remind you or select **None** (unnecessary to alert).
6. To appoint a task as certain category, tap on **Categories** field to select a category from the options list.
7. To add notes, tap **Note** tab and input desired content here.
8. Tap **OK** to save the task and return to tasks screen.

Checking and updating tasks

You may select a task from tasks list to view task summary. To change the details of this task, select **Edit**.

9.3 File Explorer

This feature allows you to view and manage all the files saved in your O2 Xda Stealth or theme memory card. To access **File Explorer**, tap **Start > Programs > File Explorer**. Select the source of where the files are saved.

To sort files by its types, tap **Sort By** and select a sorting method: **Name**, **Date**, **Size**, and **Type**. Tap **Up** to go up a level on the file hierarchy.

Tap Menu to access options:

Option	Description
My Documents	Display files saved in My Document.
Open Path	Create a new path to open a file.
Send	Send the selected document via e-mail.
Beam File	Send the file via Infrared or Bluetooth.
Refresh	Refresh the document display screen.
Show All Files	Show all the stored files.
New Folder	Create a new folder.
Rename	Rename a file.
Delete	Delete a file.
Edit	Manage the file list by using Undo, Cut, Copy, Paste, Paste Shortcut, and Select All.

Tap and hold on a file for more options:

Option	Description
Set As Ringtone	Set the file (must be in music format) as your current ringtone.
Set As Today Background	Set the file (must be in picture format) as your today background.
Add to Zip File	Compress the file.

9.4 Internet Explorer

Connecting to the web

1. Connect your O2 Stealth with the Internet using GPRS or WI-FI.
2. Tap **Start > Internet Explorer**.
3. Input website address in the blank text field
 - Select the arrow next to the blank field to go to the link.
 - You may use navigation keys or the scroll on browser screen to adjust your screen browsing content.
 - Tap **Back** to return to previous page
 - Tap the keypad icon in the bottom center to hide or reveal screen input panel or select input method.
 - Tap **Menu** to open Menu.
 - Select and hold any location of website content to open the pop-up menu.

Viewing favorites

1. On browser screen, tap **Menu > Favorites**.
2. On **Favorites** screen, select the website you want to view.
 - Select the website you would like to go to.
 - You may add or delete folders or URL links.

Mobile Favorites folder

After installing ActiveSync to your computer, **Mobile Favorites** folder will be added to **Favorites** in your computer. Only items saved in Mobile Favorites can be synchronized with your O2 Stealth. Follow the steps below to add your favorite website to **Mobile Favorites**:

1. On your computer, select **Internet Explorer > Tools > Create Mobile Favorites**.
2. To change name, enter the new name in the new window.
3. To change storage location, select **Create In>>** to create a new folder or select a folder in the new window.
4. Click on **OK** to add this website to your **Mobile Favorites** folder.










9.5 Windows Media

You can use Microsoft Windows Media Player 10 to play the audio and video files stored in your O2 Xda Stealth or from Internet.

Tap **Start > Windows Media** to activate Windows Media Player.

1. Tap **Menu > Library** to display the library screen.
2. Select a library folder.
3. Tap **Menu**, and then select **Open File** to open files not in the library; Select **Update Library** to update library list.
4. Select and hold the file or folder for playing, and then select **Play** or **Queue Up**.
5. By tapping **Back** icon, you can return to the Windows Media Player control panel.

Playing Audio or Video Files

1. Tap  to view in full screen.
2. Tap  to connect to Windows Media Mobile website, from which you can find the music and image you want to play.
3. Tap  to return to the beginning of current file or previous file.
4. Tap  or  to play or pause
5. Tap  to skip to next file
6. Tap  or  to adjust volume
7. Tap the  icon to active or disable sound.

You may use synchronization to copy sound and image files from your computer to this device. The Windows Media Player in this device can play Windows Media and MP3 files.

9.6 Games

You may access **Games** to select games you like in your O2 Xda Stealth for entertainment.

1. Tap **Start > Programs > Games**.
2. Tab **Bubble Breaker** or **Solitaire** to launch a game.

9.7 Download Agent

Download Agent allows you to manage downloaded files, including installation or deletion.

Select the desired downloaded file and tap **Install** or **Cancel** to install the file or cancel installation.

Installing applications

O2 Xda Stealth is powered by Windows Mobile 5.0. It allows installation and removal of external applications downloaded from the web, purchased from stores or sent to you from friends over Bluetooth, e-mail or other means.

Please note: Always try to install applications to your Storage Card instead of the phone in order to leave more main storage space for your Contacts, Messages, E-mail and other system applications.

9.8 Calculator

Calculator allows you to run simple operations in your O2 Xda Stealth.

Tap **Start > Programs > Calculator** to use your calculator.

9.9 Backup

You can create backup of your personal settings and data, and restore the data later.

1. Tap **Start > Programs > Backup**.
2. Check **Create backup image** to create system backup. Check **Restore** to restore the settings and data. When you select to create a backup or restore an image, your O2 Xda Stealth will need to reboot.

Please note: If you install a new version firmware on your O2 Xda Stealth, the backup file of previous version can't be used to restore on the new one.

9.10 Torch

By tapping this icon, you can switch on/off the LED light beside the camera lens to get significant light to let you see in the dark. At standby mode, you can also hold **End** key to turn the light on, and press **5 Way Navigation key Center** or **OK** key to turn the light off.

9.11 ZIP

You can save storage space and increase efficiency of your O2 Xda Stealth by compressing some of your files with this ZIP tool.

Zippping files


1. To zip a file, tap **Start > File Explorer**.
2. Tap and hold on a file you would like to zip. A pop-up menu will appear.
3. Select **Add to Zip file** in the pop-up menu. In the newly appeared window, you may:
 - Select a zip method according to your need.
 - Set a password, which will be asked for when you unzip the file.
4. Tap **Start** to start compressing the file.

Unzipping Files

1. To unzip a file, tap **Start > Programs > ZIP**.
2. Tap **Unzip** button on the pop-up window. A list of zipped files will appear.
3. You may select a different folder for more zip files. In the file list, tap on the file you would like to unzip.
4. Tap **OK** and enter the password (if required) to decompress the zip file.

9.12 O2 Auto Configurator

When you first switch on your O2 Xda Stealth, you can use **O2 Auto Configurator** to setup your GPRS for using MMS and surfing the Internet. This application provides a user-friendly way to set up operator specific settings, including GPRS, WAP, and MMS. The auto-configuration process can be performed as soon as the SIM card is accessible.

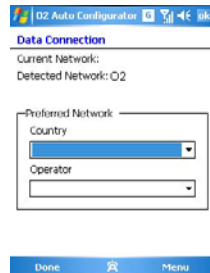

The ways in which this function operates are:

1. During every cold/warm boot, your O2 Xda Stealth will compare the operator ID with the current setting. If these two don't match, a dialog box will ask if you want to perform network configuration now. Once confirmed, the auto configurator will be launched to configure your O2 Xda Stealth to the current preferred network.
2. By tapping **Start > Programs > O2 Auto Config**, the same detection process will be carried out and possible selections will be listed in the preferred network. Confirm your choice and tap Done to apply the setting or tap **List All Settings** to choose other operator settings. If you cannot find your operator network in the list, you can always setup data connection manually.

Launch **O2 Auto Config** by tapping **Start > Program > O2 Auto Config**. The application will search from its internal database for appropriate network setting profiles and display the names of these profiles in the **Preferred Network** list.

Please note: Please ensure your SIM card is inserted and flight mode is turned off, for The auto-configuration process is started only when your O2 Xda Stealth is in **HOME** network (not international roaming).

9.13 ClearVue

ClearVue allows you to read Portable Document Format files. These files usually have a .pdf extension.

Opening a PDF file

1. Tap **Start > Programs > ClearVue**
2. Tap **File > Open** to view a list of PDF files stored on your O2 Xda Stealth, and choose the file you would like to view.

Reading a PDF file



You can move around using scroll bars in the page when a document is larger than one screen:

- Tap the up/down and right/left arrows to move one line in the desired direction.

You can also use the navigation pad to move around the screen.

- Click and hold the space between the arrow and the scroll bar to move one screen to the desired position.
- Use the left, right, up and down arrow keys on the soft keyboard to move to the desired position.
- You can also tap and hold and then drag the screen to move around the document to the desired position.

Zooming in/out

The Zoom feature allows you to enlarge or reduce the document content on display. Zoom is available from **Zoom** menu.

To get a different view of a document, select from the preset **Zoom** settings, or choose a **Custom** Zoom.

9.14 Excel Mobile

You may use **Excel Mobile** in your O2 Xda Stealth with Microsoft Excel in your computer to easily copy or move files between your O2 Xda Stealth and your computer. Through computer synchronization, you can keep updated content in both your O2 Xda Stealth and your computer.

Creating a new Excel document

Tap **Start > Programs > Excel Mobile > New**, and the screen will open a new Excel file.

Please note: Your **Excel Mobile** can only open one file at a time. When you open a second file at the same time, your O2 Xda Stealth will ask you to save first file. The saved Excel Mobile file in your O2 Xda Stealth could be opened by selecting from **Excel Mobile** list screen.

Deleting / copying or sending a document

To delete, copy or send a file, tap and hold the desired file name to open pop-up menu. Your **Excel Mobile** provides basic worksheet tools, for example, formula, function, sorting and filtering. To show toolbar, tap **View > Toolbar**.

Synchronizing with Excel files on you PC

Excel Mobile workbooks can be synchronized with Excel workbooks on your PC. To synchronize files, select the File type for synchronization in ActiveSync Options settings on your PC. When you select **Files**, a **\My Documents** folder is created on your PC's desktop. Place all the files you want to synchronize with your O2 Xda Stealth in this folder. Password-protected files cannot be synchronized. All Excel Mobile files that are stored in **\My Documents** and its subfolders are synchronized with the PC. **ActiveSync** converts documents during synchronization. When you delete a file on your PC or your O2 Xda Stealth, the file will be deleted in the other location the next time you synchronize. For more information on synchronization or file conversion, see **ActiveSync Help** on the PC.

Workbook conversion

Excel files (.xls) and templates (.xlt), created in Excel version 5.0/95 or later on the PC, will be converted to Excel Mobile workbook (.pxl) or template (.pxt) files. The conversion takes place during the following actions:

- During file synchronization.
- When you copy an Excel file to your device from the PC.
- When you open an e-mail message with an Excel file as an attachment.

Excel Mobile workbooks are converted to **Excel** workbooks when they are synchronized or copied back to the PC.

Tips:

When working with **Excel Mobile**, the following tips will help simplify your tasks:

1. Tap **View** > **Full Screen** to view in full screen. To exit full screen view, tap **View** > **Full Screen** to return to general view.
2. You can freeze panes: select a cell, then tap **View** > **Freeze Panes**. You may freeze the top and most left window cell on worksheet. Once you freeze the panes, you can see the frozen window cell no matter where the screen is scrolled.
3. You can split the worksheet to view different areas of this worksheet on the same screen. Tap **View** > **Split**, and then drag the split line to the desired location. To remove the split, select **View** > **Remove Split**.
4. Display or hide full horizontal and vertical lines. To hide a row or a column, select any cell on the row or column you wish to hide, then tap **Menu** > **Format** > **Row** or **Column** > **Hide**. To unhide a column or row, **Menu** > **Format** > **Row** or **Column** > and select **Unhide**.

Please note: When you are synchronizing or copying files from your O2 Xda Stealth to PC, Excel Mobile files will be transformed into Excel files. While most of the settings will be kept during this transformation, some of the format and properties may be lost.

9.15 Notes

You may use text notes or voice notes to record information. You may also record voice in **Notes**. If a note file contains voice notes in addition to text, a small icon representing voice notes will appear in the content area of the note. If notes recording is done under the notes file list, then the recording content will be saved as a single file. You can also share your notes with others through e-mail and PC synchronization.

Creating a new note

Tap **Menu** > **View Recording Toolbar** to show or hide recording tool bar. To add a new note:

1. On **Notes** screen, tap **New**.
2. You may generate notes by writing, drawing, text entry and recording.
 - Tap the keypad icon to hide or display screen input panel.
 - Tap **▲** next to the keypad icon to select input method.

- Tap **Menu** for **Options**.
- Tap **OK** to save the note and return to **Notes** screen.

3. To insert the date in a note, deselect and make sure that no drawings are selected. Next, tap and hold anywhere on the note and tap **Insert Date**.

Sending a note by e-mail

In **Notes**, **Word Mobile**, **Excel Mobile**, **PowerPoint Mobile**, and **Pictures & Videos**, you can send files and information to other devices via e-mail.

1. First you must set up **Messaging** to send and receive messages.
2. From the program, select the item you want to send.
3. Tap **Menu** > **Send**. A new message is created with the item attached.
4. Enter the recipient name and subject and tap **Send**. The message will be sent the next time you synchronize your O2 Xda Stealth.

Beaming a note

To beam a note, on the note list, tap and hold the note. On the pop-up menu, tap **Beam File**.

9.16 PowerPoint Mobile

You may use **PowerPoint Mobile** in your O2 Xda Stealth with Microsoft PowerPoint in your computer to easily copy or move document between your O2 Xda Stealth and your computer. Through computer synchronization, you may keep the files in both your O2 Xda Stealth and your computer updated. You may use **PowerPoint Mobile** to browse or play PowerPoint file.

Opening a PowerPoint file

Tap **Start** > **Programs** > **PowerPoint Mobile**, the screen will show your PowerPoint files list, from which select the file you want to open.




1. Select the folder type displayed in the list.
2. Select **Name** (or **Date**, **Size**, **Type**) to change the arrangement of list.
3. Select the document to open.
4. Select and hold a document to activate pop-up menu.
5. Tap **Open** to open a file.
6. Select the keypad icon to hide or reveal screen input panel and select input method.
7. Tap **Menu** for options.

Overriding the playback options in a PowerPoint presentation

1. Tap **Start > Programs > PowerPoint Mobile**.
2. Open the presentation file you want to view, tap ▲ > **Show Options**.
3. Tap Playback tab, select the Override playback options for all files, and do any of the following:
 - To turn off builds and other animations, select **Show without animation**.
 - To prevent slide transitions from playing, select **Show without slide transition**.
 - To use the timings recorded with each slide in a presentation, select **Use timings, if present**.
 - To automatically advance to the first slide after the last slide in a presentation, select **Loop continuously**.
4. Tap **OK**.

Zooming in / out

Zoom in to see a portion of a slide in more detail and zoom out to see the entire slide again.

1. In a PowerPoint Mobile presentation, tap ▲ arrow > **Zoom In**.
2. Do one of the following:
 - To zoom in another level, tap .
 - To zoom out, tap .
 - To return to the slide show, tap .

9.17 Search

This feature allows you to search a file easily.

Finding a file

1. Tap **Start > Programs > Search**.
2. Enter the file name on **Search for** field and select a file type in **Type** field.
3. Tap Search to start searching and the result will be displayed in **Results** field.

9.18 Voice Speed Dial

You can press down volume key to launch voice commanding procedure, or tap here to start speaking voice commands to your O2 Xda Stealth. Please create your own voice tag before using this function.

9.19 Word Mobile

You may use **Word Mobile** in your O2 Xda Stealth with **Microsoft Word** in your computer to easily copy and move document between the phone and your computer. Through computer synchronization, you may keep updated contents in both your O2 Xda Stealth and your computer.

You may use **Word Mobile** to generate documents like letters, meeting minutes and reports.

Generating a new word document

Tap **Start > Programs > Word Mobile > New**, a new blank document will appear on screen. You may also select default settings from **Menu > Options**.

Please note: Your **Word Mobile** can only open one document at a time. When you open a second document at the same time, your O2 Xda Stealth will ask you to save the first document first. When creating a new document or editing an old document, you may choose to save in the following format: Word file, RTF file and text-only file.

The saved **Word Mobile** file in your O2 Xda Stealth could be opened by selecting from Word Mobile list screen. To delete, copy, or send a file, select and hold desired file names to open pop-up menu.

After opening a Word Mobile file, you may tap **View** to set **Toolbar**, **Wrap to Window**, and **Zoom**.

1. Select a folder category shown on list display field.
2. Tap **Name** (or **Date**, **Size**, **Type**) to change the arrangement of list.
3. Tap on a file to open it.
4. Tap and hold a file to open pop-up menu
5. Tap **New** to create a new document.
6. Tap the keypad icon to show or hide screen input panel and select input method.
7. Tap **Menu** to open menu for more options.

Synchronizing with Word files on you PC

Word Mobile documents can be synchronized with Word documents on your PC. To synchronize files, select the Files type for synchronization in ActiveSync Options settings on your PC. When you select Files, a **My Documents** folder is created on your PC's desktop. Place all the files you want to synchronize with your O2 Xda Stealth in this folder. Please note that password protected files cannot be synchronized. All **Word Mobile** files that are stored in **My Documents** and its subfolders are synchronized with the PC. ActiveSync will convert the documents during synchronization. When you delete a file on your PC or your O2 Xda Stealth, the file will be deleted in the other location the next time you synchronize. For more information on synchronization, or file conversion, see **ActiveSync Help** on the PC.

Document Conversion

The Word documents (.doc) and templates (.dot), created in Word 6.0 or later on the PC, are converted to Word Mobile documents (.psw) and templates (.psw). The conversion takes place during the following actions:

- During file synchronization.
- When you copy a Word file from the PC to your O2 Xda Stealth.
- When you open an e-mail message with an attached Word file on your O2 Xda Stealth.

Please note: When you are synchronizing or copying files from your O2 Xda Stealth to PC, Word Mobile files will be transformed into Word files. While most of the text and paragraphing will be kept during this transformation, some of the format and properties may be lost.

9.20 Answer Machine

This function is different from voice mail, you may use answer machine in your O2 Xda Stealth to directly save caller's message to it, which allows you to listen to message more easily and also save call expenses.

Tap **Start** > **Program** > **Answer Machine**.

1. Check **Enable Answer Machine** to activate answer machine function.
2. Tap **Save In** to select a storage location for messages.
3. Select **Recording Time** to set the time length for a caller message.
4. Select **Activate Time** to set how many seconds that your answer machine will wait before answering an incoming call.
5. Select **Greeting Setup** to set up answer machine greeting.
6. Tap **OK** to save setup and return to **System** tab screen.

You will find callers' messages in **My Greeting** folder.

Greeting Setup

Tap **Greeting Setup** to set default answer machine greeting or record your own greeting. Press on the file name to listen to the current greeting. To record a new greeting

1. Tap **User Define** under **Greeting Setup** column.
2. User can type in the file name preferred or use the default one.
3. Tap the record button to record your own greeting.
4. Tap the play button to listen to greeting recorded.
5. Tap **OK** to validate the settings and exit.

Please note:

1. Your answer machine will stop recording when caller ends the call. After activating answer machine, you may press **Stop** to stop recording without interrupting the conversation.
2. When Caller 1 is leaving a message, the incoming call from Caller 2 will become call waiting. You may select to answer or reject call waiting. If you select to answer call waiting, the message of Caller 1 will stop; if you select to reject call waiting, the call waiting from Caller 2 will continue to ring until Caller 2 enters voice mail.
3. If you have checked **Auto Answer** in Phone, Answer Machine will automatically be deactivated.

Chapter 10 Managing Your O2 Xda Stealth

10.1 O2 Auto Install

10.2 O2 Connect

10.3 Memory management

10.4 Running programs management

10.5 Adding or removing programs

Chapter 10. Managing Your O2 Xda Stealth

10.1 O2 Auto Install

O2 Auto Installer provides you with a list of ready-to-install applications for your O2 Xda Stealth. These optional applications can help you do more with your device. When you need them, you can choose to install them anytime by tapping **Start > Programs > O2 Auto Install > checking Option** next to the application and tap **Next** to start.

10.2 O2 Connect

O2 Connect gives you a direct access to the latest software upgrades, downloads, repair center locations, helpdesk numbers, products and promotions.

Accessing O2 Connect

You can access **O2 Connect** via ActiveSync, GPRS or Wireless LAN.

Once connected, you can synchronize information to your O2 Xda Stealth and read it offline. If you find an item in **O2 Connect** that you would like to download, you can do so and install it instantly, or choose to install later.

Options

Some content items require a user name and password. You can save this username and password on your O2 Xda Stealth so you don't have to enter them again; simply tap **Menu > Options** and then enter your user name and password when prompted. You can program your O2 Xda Stealth to receive O2 Connect updates at 1, 2, 4, 8 and 12-hour intervals through an ActiveSync connection, or choose between 6 and 12-hour intervals through an active Internet connection.

Enabling/disabling O2 Connect

To disable **O2 Connect**, tap **Menu > Options** and then select **Stop O2 Connect Service**. To enable **O2 Connect**, tap **Menu > Options** and then select **Start O2 Connect service**. By default, if your O2 Xda Stealth is connected to the Internet via ActiveSync, **O2 Connect** will make a connection to the O2 Server every 4 hours to refresh contents. You will always have access to the latest information.

10.3 Memory management

When the memory is insufficient, this device cannot automatically allocate memory, you may follow the steps below to free up more memory:

Moving some files to mini SD card

1. Tap **Start > File Explorer**.
2. Tap and hold selected items.
3. Tap **Cut** on the pop-up menu.
4. Switch to **Storage Card** category
5. Tap and hold and then tap **Paste**.

Deleting the unwanted files

1. Tap **Start > File Explorer**.
2. Tap and hold selected items.
3. Select **Delete**.

Saving attachments to mini SD card

1. Tap **Start > Messaging > Menu > Tools > Options > Storage tab**.
2. If you have inserted a memory card, check **Store attachments on storage card**.
3. E-mail attachments will automatically be saved to memory card.

Clearing histories and deleting files from Internet Explorer

1. Tap **Start > Internet Explorer > Menu > Tools > Options > Memory tab**.
2. Tap **Clear History** and **Delete Files** to delete browsed web page related record.

10.4 Running programs management

1. Tap **Start > Settings > System tab > Memory > Main tab**:
Display current memory status of this device.
2. Tap **Start > Settings > System tab > Memory > Storage Card tab**:
Display the memory status of storage card in this device.
3. Tap **Start > Settings > System tab > Memory > Running Programs tab**:
Display all current running programs in this device. Select any program from **Running Programs List**, you may select to **Activate** or **Stop**.
Activate: run the highlighted programs
Stop: stop running highlighted programs
Stop All: stop running all programs on **Running Programs List**

10.5 Adding or removing programs

All programs pre-installed in the device will be saved in ROM (Read Only Memory) and are not removable. Data saved in ROM will not be lost by accident. All programs that you installed will be saved in RAM (Random Access Memory). As long as there is sufficient space in this device, you may install suitable programs by preference.

Adding programs through ActiveSync

1. Before installing the program, please make sure that your O2 Xda Stealth processor is suitable for the software. Tap **Start > Settings > System tab > About > Version** tab to check for information of this device.
2. Download the desired software to your computer (Please select software that is designed for Pocket PC and this device).
3. Read installation instructions, readme file, or accompanied programs provided to you.
4. Connect your computer with this device.
5. Install executive file to your computer.

If this file contains installation program, the installation wizard will automatically activate. Please follow the instructions on screen. Once the installation on your computer is completed, the program will automatically be installed to this device. If this file does not contain any installation program, an error message will show on the screen and tell you this program is invalid, which is not suitable for your computer. You must move this program to this device manually. If you cannot find any installation instructions for this program, please use "Browse" function of **ActiveSync** to copy program file to **Program Files** folder in this device. After completing installation, tap **Start > Programs**, and then select the program icon to launch that program.

Adding programs through Internet

You may download software suitable for this device from Internet.

1. Before installing the program, please make sure that your O2 Xda Stealth processor is suitable for the software.
- Tap **Start > Settings > System** tab > **About > Version** tab to check information in this device.
2. Directly download programs to this device by using **Internet Explorer** in this device. (Please select programs designed for Pocket PC and this device)
3. Read installation instructions, readme file, or accompanied programs provided to you.
4. Run installation executive file in your computer.

Adding programs to Start menu

Tap **Start > Settings > Personal** tab > **Menu**.

1. Check the programs to be displayed on **Start** menu.
2. Tap **OK** to save settings and return to Personal tab screen.

Removing programs

Tap **Start > Settings > System** tab > **Remove Programs**.

Select the programs you would like to delete from **Programs in storage memory** list, and then select **Remove** to delete highlighted programs. If the installed programs list does not contain the program you intend to remove, you may use **File Explorer** in this device to find the program and delete it by selecting and holding the program's name and then select **Delete** from the pop-up menu.

Chapter 11 Specifications

Chapter 11. Specifications

Item	Specifications
System Information	
Operating System	Windows Mobile 5.0
Processor	Intel PXA 272 416MHz
Memory	192 MB ROM, 64MB SDRAM
Size	
Dimensions (mm)	110 x 53 x 22.5
Weight (in grams)	150g (with battery)
Battery	
Battery capacity	Li-Polyma pack1300 mAh or higher
Standby time	150Hr
Talk time	4.5Hr
Charging time	
Charger	1.5Hr
Display Characteristics	
Type	2.4-inch, 65k-color TFT LCD touch panel
Resolution	240 x 320
Band	
Band	GSM 900/1800/1900
Connectivity	
Bluetooth	1.2
WLAN	IEEE 802.11b/g
GPRS	GPRS Class A/B GPRS Uplink/Downlink Class 10
WAP	Yes
CSD	Yes
USB	1.0
Image	
Format	JPG/GIF/PNG
Max size (per)	Depends on available RAM
Audio	
Format	MP3/WAV/WMA/MIDI/AMR/AAC/AAC+
Max size	Depends on available RAM

Item	Specifications
Video	
Format	PEG4/3GPP/WMV
Max size	Depends on available RAM
Phonebook	
Size	Depends on available RAM
Ring tone	
Type	MP3, WAV, SMF
Polyphone	192 Polyphonics
Digital camera	
Type	JPEG
Pixels	2.0 mega-pixel
Auto focus	Yes
Video recording	Yes
Messaging	
Push E-mail	Windows Direct Push
SMS	Yes
MMS	Yes
E-mail	Yes
MSN	Yes
External memory	
Type	Mini SD Card
Max size	Support up to 1 GB

Chapter 12

FAQs

Chapter 12. FAQs


Why can't I turn on my device as I press the power key?

Either you didn't press the key long enough, or the device has shut down because the battery power level is too low to make calls. Please recharge the battery.

How do I suspend the screen display or wake up the device?

Press and hold the power key to turn off the device. If the screen display is off, press the power key to wake up your device.

Why does the screen freezes and does not respond to my commands or input?

Reboot the system to free up memory. The system shall operate more efficiently. If the system still lags after rebooting, you will need to clean boot your O2 Xda Stealth. To clean boot, power off your O2 Xda Stealth and then press Windows  key, OK key and the Power key at the same time, for about 5 seconds. Your O2 Xda Stealth will reset to factory defaults and reboot.

Please note: When you perform a clean boot on your O2 Xda Stealth, all your personalized settings, information, and programs installed will be removed. The system will reset to factory defaults.

Why does my device display "INSUFFICIENT MEMORY" when I open a file or a program?

The device memory is shared by both storage and programs. You can free up some memory by removing some of the rarely used programs you installed or removing rarely used files.

Why doesn't the screen respond accurately to my stylus taps?

Tap **Start** > **Settings** > **System** tab > **Screen** > **General** tab. Select **Align Screen** to align the screen.

Why does my O2 Xda Stealth launch wrong programs or ignore my command when I press a device key?

Tap **Start** > **Settings** > **Personal** tab > **Buttons** and check whether the programs assigned to each key is correct. You can change these key assignments by preference.

My O2 Xda Stealth can't form a successful connection with ActiveSync.

Please make sure you have installed ActiveSync 4.2 or later on your computer. You can find ActiveSync in the installation CD, or you can download the latest version from Microsoft's website. Please make sure you have connected your O2 Xda Stealth to the computer by plugging in the USB cable to both your O2 Xda Stealth and the computer. Make sure that you are not running another program that uses the same serial port. If the connection still fails, remove ActiveSync on your computer and reinstall it.

Why does my device display 'Insert SIM', what does this mean?

Please insert the SIM card before you can use the device. If it is already installed, remove and clean the metal contacts area with a dry cloth, and then insert it again.

Why does my device display 'EMERGENCY ONLY', what does this mean?

You may not have your SIM card properly installed, or you are out of network range.

Why does my device display 'NO NETWORK', what does this mean?

You're outside network range. If you're inside a building or a basement, try moving towards a window.

Why are there double entries in my Contacts list?

You may have selected **Show SIM Contacts** in **Contacts** menu. If you have already copied your SIM contacts to your O2 Xda Stealth, then you do not need to select this option.


Why are some calls not processed?

Certain call barring function may have been set to restrict device usage. Check the call barring status and cancel as necessary.

Can I send and receive e-mails and surf the Mobile Internet on my device?

O2 Xda Stealth allows you to access the Internet from your device. For instructions on how to send and receive e-mails, please refer to the user manual or contact O2 Customer Service.

Why can't my O2 Xda Stealth make any sound alerts?

Tap on the speaker icon  on the top right corner of the screen, and then adjust the alert or ring volume. You could also use the volume key on the left side of your O2 Xda Stealth to adjust volume.

Where can I check why my device has gone wrong?

Please have your warranty card and device ready and contact your local dealer.

Chapter 13

Safety Bit

13.1 Safety information

13.2 Phone care

13.3 Driving safety

13.4 Electronic devices

13.5 Other safety guidelines

13.6 Cautions

13.7 About this guide

Chapter 13. Safety Bit

This chapter contains important information on safe and efficient operation. Please read this information before using your O₂ Xda Stealth.

13.1 Safety information

Your O₂ Xda Stealth Pocket PC Phone has been designed, manufactured and tested so as not to exceed the limits for exposure to electromagnetic fields recommended by the Council of the European Union. These limits are part of comprehensive guidelines developed by independent scientific organizations.

European standards provide for the amount of radio frequency electromagnetic energy absorbed by the body when using a phone to be measured by reference to the Specific Absorption Rate (SAR). The highest SAR value for your O₂ Xda Stealth when tested for use at the ear is 0.626 W/kg.

The maximum SAR values for the O₂ Xda Stealth are:

- 0.436 W/kg @10g (CE)
- 0.224 W/kg @1g (FCC) head
- 0.786W/kg @1g (FCC) body

13.2 Phone care

You should never attempt to open the phone casing. There are no user-serviceable parts inside, and you might damage sensitive electronic circuits and components.

Un-authorized disassembly will void the warranty. You should never leave your device in the window of your car or otherwise expose it to strong sunlight or excessive heat for a prolonged period of time as this may damage it. You should never handle your device with wet hands or expose it to moisture or liquids of any kind. Continuous changes from a cold to a warm environment may lead to condensation inside the device, resulting in corrosion and possible damage. If you pack your device in your suitcase during travel, beware not to damage it. Cramming a suitcase may crack the LCD display. While in flight, switch your O₂ Xda Stealth to flight mode. (Turn off device or wireless functions). When instructed to do so, turn off your device when on board an aircraft. As with all other radio devices, touching the built-in antenna area during telephone conversation may impair the quality and lead to shorter standby time due to increased power consumption.

The battery

Your device is equipped with a high performance Li-Ion battery. Optional battery types may be available, check with your local retailer. Observe the maintenance guidelines and your battery should give you a long service life.

- At the beginning of the battery's life, fully charge and discharge (let it go flat) three times.
- Do not over charge the Li-Ion battery, as this can result in a reduction in battery performance and life span. The recommended maximum charge time is 2.5 hours.
- Avoid repeated short charging. It is preferable to let the battery go flat and then recharge it completely.
- Avoid charging in strong heat or extreme cold. Ambient room temperature is preferable. The battery has its optimum performance in an ambient temperature of +5 °C to +50 °C.
- Don't store a battery near a fire or heat source.
- Use only the battery approved by the manufacturer.
- Never replace the battery with a non-approved battery.
- Never soak the battery in water or any other fluid.
- Never try to open the battery as it contains substances that might be harmful if swallowed or allowed to come into contact with unprotected skin.
- Never short-circuit the battery, as it may overheat and cause a fire. Keep away from jewellery and other metal objects.
- Never dispose of the battery in a fire. It could explode and release harmful substances into the environment.
- Never dispose of the battery with your regular household waste. Take it to a hazardous material collection point.
- Do not touch the battery terminals.

Caution: Risk of explosion if battery is replaced by an incorrect type.

The charger

- Use only the charger supplied with your device.
- Never pull the charger cord to release it from the mains – pull the charger itself.

Memory card

- Do not remove or insert a memory card or turn off the handset whilst data on the card is being edited.
- Do not touch the metal terminals with your hands or metal objects.
- Do not bend the memory card or subject it to violent impacts. Keep away from water and high temperatures.
- Keep all memory cards out of the reach of small children.
- Do not short circuit the contact points or expose it to liquids or moisture. When not in use, keep it in the antistatic container it came in.
- Do not use force when inserting or handling the card, and do not expose to excessive heat or strong magnetic fields.

Cleaning and storing

- Your device should always be handled with care and protected from dirt, dust and damp. To avoid scratches, never place your device face down.
- If cleaning is necessary, switch the device off and wipe carefully with a soft, slightly damp (not wet) cloth. Use a cotton swab to clean the camera lens. Allow the device to dry completely before switching it on. Never use solvents for cleaning.
- If you are not going to use your device for some time, fully charge the battery and store the device in a dry place away from direct sunlight. Your device should be switched off during storage. Recharge every 6 to 12 months.
- Never expose your device to heat or strong sunlight.
- Never expose your device to moisture or liquids of any kind.
- Do not paint your device or otherwise block the keypad, microphone or earpiece function, i.e. with stickers.

13.3 Driving safety

Never use the handheld devices whilst driving. It is an offence whilst driving to hold a phone or cradle it in your neck, at any point during the setup, making or taking of a phone call, text message or any other data related mobile communication. Use of fully installed car kits is still permitted, as are the use of alternate hands-free accessories.

In the interest of safety, we would recommend to use cradle whilst using any form of hands-free accessory.

We recommend that you use voicemail wherever possible, and that you listen to your messages when you are not in the car. If you must make a hands-free call when driving, keep it brief.

An airbag inflates with great force. **Do not** place objects, including both installed and portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Warning: Failure to follow these instructions may lead to serious personal injury and possible property damage.

13.4 Electronic devices

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your pocket PC phone.

Pacemakers

The Health Industry Manufacturers' Association recommends that a minimum separation of six (6") inches be maintained between a phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

If you have a pacemaker

- Always keep your device more than six inches from your pacemaker when it is turned on.
- Do not carry your device in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference
- If you have any reason to suspect that interference is taking place, turn your device off immediately.

Hearing aids

Some digital phones may interfere with some hearing aids. In the event of such interference, call O2 Customer Service to discuss alternatives.

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your device **off** in healthcare facilities when any regulations posted in these areas instruct you to do so.

Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Turn your phone **off** where posted notices so require.

Magnetic media

Magnetic fields generated by Pocket PC Phone may damage data on magnetic storage media such as credit cards, computer discs or tapes. Do not place your device next to such media. You should never expose your device to strong magnetic fields as this may cause temporary malfunction.

13.5 Other safety guidelines

Aircraft

Regulations prohibit using your device while in the air. Switch **off** your device before boarding an aircraft or change to flight mode.

Blasting areas & Potentially explosive atmospheres

The user needs to switch off the device when exposed to areas with potentially explosive atmospheres such as petrol stations, chemical storage depots and blasting operations.

Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fuelling areas such as petrol stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or articles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

FCC Regulations

This mobile phone complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Choking

Keep your device away from children as the SIM card or other small parts present a choking hazard.

13.6 Cautions

Your Pocket PC Phone is a high quality piece of equipment. Before operating the equipment, read all instructions and cautionary markings. Use only original or manufacturer approved accessories, batteries and chargers.

- **Do not** use this equipment in an extreme environment where high temperature or high humidity exists.
- **Do not** abuse the equipment. Avoid striking, shaking or giving it a shock. When not using the unit, lay it down to avoid possible damage due to instability.
- **Do not** expose this equipment to rain or spilled beverages.
- **Do not** use unauthorized accessories.
- **Do not** disassemble the device or its accessories. If service or repair is required, return the unit to an authorized service centre. If the unit is disassembled, the risk of electric shock or fire may result.
- **Do not** short-circuit the battery terminals with metal items, etc.

13.7 About this guide

This document is provided as a user guide to the O₂ Xda Stealth Pocket PC Phone and to this system only. O₂ Xda Stealth is a trademark of the O₂ group of companies.

Latest version of user guide can be found on our website <http://SeeO2.com>. Year of Manufacturing: 2006

Mandatory statements

We hereby declare that the O₂ Xda Stealth is in conformity to all the essential requirements of Directive 1999/5/EC.

Index

A

About	45
ActiveSync Synchronization Tool	48
Answer Machine	112
Applications	100
Attachments	115

B

Background	42
Backlight	14, 45
Backup	14, 104
Battery	12, 14
Beam	60, 109
Block Recognizer	27
Bluetooth	58
Bluetooth Connection	50
Bluetooth Headset	61
Bonds	59
Brightness	14
Buttons	38

C

Calculator	104
Calendar	51, 100
Call Barring	41
Caller ID	41
Call Forwarding	41
Call Waiting	41
Call History	35
Camera	90
Charging the Battery	12
Cell Broadcast Setting	66
Certificates	45
ClearVue	106
Connections	56
Contacts	34

D

Device Lock	13, 24
DNS	64
Download Agent	104
Drawing on the Screen	29
Driving Safety	128

E

E-mail	83
E-mail Account	52, 83
Emergency Calls	34
Excel Mobile	107
eZiText	28

F

Favorites	66, 103
File Explorer	102
Flash light	9, 90
Flight Mode	57, 106
Frame	96

G

Games	104
GPRS	57
GPS	45

H

Headset Volume Limiter	45
Headset Plug	8
Icons	23
Input	38
Input Method	27
Insert the battery & SIM card	11
Installing ActiveSync	49

International Calls	33
Internet Explorer	66, 102
Internet Sharing	65
ISP	57, 65

J

JAVA	95
------	----

K

Keyboard	27
Keypad Tone	40

L

Landscape	25
LED Indicator	8
Letter Recognizer	28
Lock (Device Lock)	13
Lock 41	

M

Making a call	33
Menus	39
Memory	45
Memory Management	114
Memory Expansion	14
Messaging	70
Microsoft® Exchange Server	82, 85
MSN Account	86
MSN Hotmail	87
MSN Messenger	86
MSN Options	39
Multimedia messages (MMS)	74

N

Navigation Key	7, 10
Notes	108

O

O2 Auto Configurator	105
O2 Auto Installer	114
O2 Connect	114
Outlook E-mail	52
Owner Information	30

P

Password	30, 35
Personal settings	38
Phone	40
Photo Editor	95
Pictures & Videos	96
PIN	41
Pocket MSN	86
POP3	83
Power	45
Power Management	14
Power on/off	8
PowerPoint Mobile	109
Portrait	25
Programs	20
Push E-mail	85

R

Receiving/Ignoring a call	33
Recorder	97
Recording a Message	29
Recording a Clip	94
Recording Time	97
Regional Settings	46
Remove Programs	46
Reset	8
Ring Tone	35

S

SAR	126
Safety Information	126
Screen	46
Screen Orientation	25
Screen Alignment	26
Search	110
Show SIM Contacts	123
Shutter Sound	90
Signing in MSN Messenger	87
SIM	12
SMS	71
Smart Input	28
Sounds & Notifications	42
Spb GPRS Monitor	58
Speed Dial	33
Spell check	71
Start Menu	16
System Info	46

T

Taking a Photo	91
Tasks	101
Terminal Services Client	65
Today	13
Torch	104
Transcriber	28

U

USB Cable	66
USB Card Reader	65

V

Vibrate	34
Voice Mail	82
Voice Speed Dial	42, 110
VPN	66

W

Wi-Fi	64
Wi-Fi Utility	64
Windows Media	102
Wireless LAN	64
Wireless Manager	56
Word Mobile	110

Z

Zoom In/Out	91, 110
ZIP	104