
USER MANUAL NUPOWERTM MICRO L- & S-BAND POWER AMPLIFIER MODULE

PART NUMBERS:

NW-SSPA-MICRO-5W-1.0-2.5 NW-SSPA-MICRO-5W-1.0-2.5-D30



RF, Wireless, and Embedded Systems Engineering

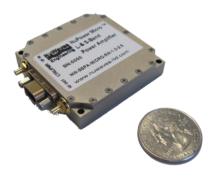

NuWaves Engineering 132 Edison Drive Middletown, Ohio 45044

> PH: 513-360-0800 FAX: 513-539-8782

www.nuwaves-ltd.com

product.sales@nuwaves-ltd.com



1 NUPOWERTM PRODUCT LINE OVERVIEW

The NuPower family of solid state RF power amplifier (PA) modules is designed to meet the demanding needs of the Aerospace & Defense, Industrial, and Commercial markets. Based on the latest gallium nitride (GaN) technology, NuPower's miniature form factor and power efficiency make it ideal for size, weight, and power-constrained broadband RF telemetry and tactical communications systems.

1.1 NUPOWER[™] PRODUCT LINE HIGHLIGHTS

- <u>High Performance</u>: Unique combination of broadband coverage, miniature form factors, and high efficiency.
- <u>Enclosures</u>: The NuPower family of power amplifiers is housed in a silver nickel plated aluminum enclosure with mounting holes incorporated into the chassis.
- <u>Completely Characterized</u>: The NuPower family of solid state power amplifiers has been completely characterized over temperature, voltage, and frequency. These high-performance modules offer significant value for the OEM user or the Systems Integrator.
- <u>User Friendly</u>: Reverse-Voltage & Over-Voltage protection and regulator thermal shutdown provide defenses against user interface issues.
- <u>High Reliability</u>: NuWaves' selection of conservatively rated components provides high reliability. Each NuPower is inspected to IPC-A-610 Class II quality standards.
- <u>Applications</u>: Unmanned Aircraft Systems (UAS) Unmanned Ground Vehicles (UGV) Unmanned Surface Vehicles (USV) Broadband RF Telemetry RF Communication Systems Software Defined Radios Test Labs
- Available Options:
 - Fan-cooled heat sink with North American AC/DC wall plug adapter
 - o Labeled interface cable with banana jack plugs
 - 1 Watt input drive level (Part Number: NW-SSPA-MICRO-5W-1.0-2.5-D30)



2 NUPOWERTM MICRO L- & S-BAND POWER AMPLIFIER

The NuPower™ Micro L- & S-Band PA boasts the smallest form factor of the NuPower family of PAs at 1.3 cubic inches. This highly efficient solid state power amplifier provides over 5 watts of RF power across both L and S frequency bands.

Based on the latest GaN technology, NuPower's power efficiency and miniature form factor make it ideal for size, weight, and power-constrained broadband RF telemetry and tactical communication systems. The NuPower Micro L- & S-band power amplifier takes low SWaP to a new level, allowing it to be integrated into the smallest aerial platforms flying today.

The NuPower Micro L- & S-Band PA is also available with a 1 watt input drive level version (P/N: NW-SSPA-MICRO-5W-1.0-2.5-D30), making it ideal for use with L-3 Communications' Bandit miniature L- and S-band transceiver.

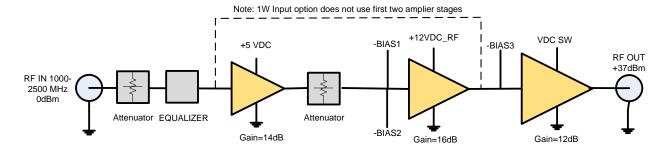


Figure 1: NuPower Micro L- & S-Band PA Functional Diagram

2.1 NUPOWER MICRO L- & S-BAND PA SPECIFICATIONS

Table 1 depicts the NuPower Micro L- & S-Band PA's electrical specifications.

Parameter	Specification	
Frequency Range	1.0 GHz to 2.5 GHz	
RF Output Power	5 Watts (min)	
RF Gain	37 dB (typ) (7 dB w/ 1 Watt input drive level option)	
2 nd Harmonic	≤ -13 dBc	
Supply Voltage	+28 VDC (nominal) +/- 2 VDC	
Current Consumption ¹	1.25 A @ +28 VDC (max)	

Table 1: NuPower Micro L- & S-Band PA Electrical Specifications



Parameter	Specification		
Nominal Input Drive Level ²	0 dBm		
Maximum Input Drive Level (No damage)	+10 dBm (standard model only; not applicable to 1 Watt input drive level option)		
Power Amplifier Enable	GND On		
Impedance	50 Ω		

¹Part number NW-SSPA-MICRO-5W-1.0-2.5-D30 has a current consumption of 0.85 A @ +28 VDC (max).

Table 2: NuPower Micro L- & S-Band PA Environmental Specifications

Operating Conditions	Specification	
Operating Temperature for Continuous Operation (>5 minutes)	-30 to +55 °C (ambient) -30 to +60 °C (baseplate)	
Operating Temperature for 20% Duty Cycle	-30 to +60 °C (ambient) -30 to +65 °C (baseplate)	
Storage Temperature	-40 to +85 °C	

2.2 NUPOWER MICRO MECHANICAL SPECIFICATIONS

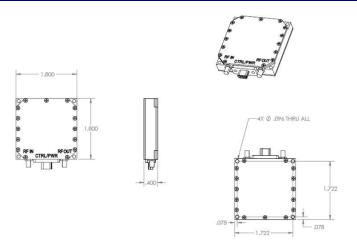


Figure 2: NuPower Micro L- & S-Band PA Mechanical Outline

²The nominal input drive level for part number NW-SSPA-MICRO-5W-1.0-2.5-D30 is +30 dBm.



Table 3: NuPower Micro L- & S-Band PA Mechanical Specifications

Parameter	Specification		
RF Connectors	SSMC (female)		
Power / Interface Connector	9 Pin Micro-D (socket)		
Dimensions (L x W x H)	1.80" x 1.80" x 0.40"		
Weight	1.3 oz.		

2.3 HEAT SINKING

The NuPower Micro L- & S-Band PA is offered as a stand-alone module or with a kit, which also includes a fan-cooled heat sink with an AC/DC adapter, and an interface cable.



Figure 3: The NuPower PA Kit offers "out-of-the-box" operation for the user. The fan-cooled heat sink with an AC/DC adapter is shown with the NuPower Micro L- & S-Band PA.



Caution: The use of external heat-sinking is required especially for those applications requiring high duty cycle operation (e.g. continuous wave) or for extended on-time testing. Operation without a proper heat sink under these conditions will cause permanent damage to the product and will void the product warranty.



3 SETUP AND OPERATION

This section provides specific details for proper operation of the NuPower Micro L- & S-Band PA module. Following these guidelines will prevent damage to the power amplifier or external equipment.

3.1 POWER SUPPLY REQUIREMENTS

To operate the NuPower Micro L- & S-Band PA, ensure that the power supply has adequate overhead to source the current demand of the RF power amplifier. The power supply source must provide a typical voltage of +28 VDC with greater than 3 amps capability.

3.2 CONNECTING A PROPER LOAD TO THE ANTENNA TERMINAL

To prevent damage to the PA, the antenna terminal must be terminated into a 50 Ω load. Examples of a proper load include:

- Directly connecting to an antenna specified for the frequency range (1.0 GHz to 2.5 GHz). Connecting to an inappropriate antenna may result in damage to the PA module.
- Connecting to a proper antenna through a 50 Ω transmission line or coaxial cable. Avoid using damaged cables or corroded connectors while attaching the unit to an antenna.
- \bullet Terminating the antenna terminal into a 50 Ω power attenuator with minimum 20 dB attenuation.
- Connecting to a load capable of dissipating the RF power from the PA module. Loads capable of handling 20 Watts (min) are recommended.

3.3 POWERING-UP THE MICRO L- & S-BAND PA

The NuPower Micro L- & S-Band PA must be terminated to a proper load before power is applied. Refer to Section 3.2 for the specifications of the proper load. After the PA is properly terminated, the interface cable can be connected to the unit and power can be applied. The PA is now ready for operation.

3.4 TRANSMIT TURN-ON TIME



Caution: Do not apply transmit data until the PA module is at full power. This will prevent loss of data at the beginning of a message.

The NuPower Micro L- & S-Band PA is at full power approximately 500 μ S after the RF Enable line goes low (ground). Therefore, transmit data can be applied to the input after 500 μ S without loss of data.



4 HARDWARE INTERFACE

- The RF Input connector is SSMC (female).
- The RF Output connector is SSMC (female).
- The pin-out definitions for the 9 pin Micro-D socket connector are provided in Table 4. In a typical installation, the PA module is mated to a host controller board via a cable harness.



The RF Out SSMC connector is the antenna connection. This connection should always be loaded into 50 Ω , otherwise the PA could be damaged.

4.1 INTERFACE CABLE HARNESS

The cable harness that connects the host controller to the 9 pin Micro-D connector of the NuPower Micro L- & S-Band PA is made up of 9 wires.

Table 4: NuPower Micro L- & S-Band PA Interface Pin-Out Definitions

Pin No.	Pin Name	1/0	Description
1, 2	V Supply	I	Primary Power (+28 VDC)
3, 4	GND	I	Signal and Power Ground
5	RF Enable	I	Transmit Control
6, 7, 9	N.C.	-	N/A
8	Temp Flag	0	Over-temp Indicator

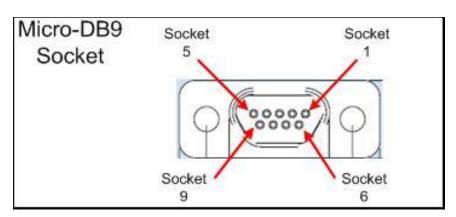


Figure 4: Micro-D Socket Locations



4.2 DC POWER

The typical supply voltage for the NuPower Micro L- & S-Band PA is +28 VDC; however, the amplifier module is able to support operation over a supply voltage range of +26 to +30 VDC.

4.3 **GND**

The signal and power grounds are tied together in the PA module.

4.4 RF ENABLE

This signal is the logic control input that designates whether the unit is in transmit or standby mode. The RF Enable line is pulled high internally placing the PA module in *standby* mode. If the pin is left floating (i.e. not connected), the unit will default to *standby* mode.

Grounding the pin (i.e. a voltage below +0.2 VDC) places the unit in *transmit* mode. The user can either connect the RF Enable line to pins 3 & 4 on the CTRL/PWR interface connector, or an open drain logic line capable of sinking $500 \, \mu A$ to place the unit in *transmit* mode.

4.5 TEMP FLAG

This signal is a logic-level output to indicate an over-temperature condition in the NuPower Micro L- & S-Band PA. A logic high (+5 VDC) indicates normal operation, while a logic low (+0 VDC) indicates an over-temperature condition. The NuPower Micro L- & S-Band PA incorporates internal logic circuitry that turns off the DC bias to the RF transistors.



Caution: The amplifier should be shut down and allowed to cool off when the over-temperature flag is set low to avoid damage to the module.



5 GETTING HELP - APPLICATIONS ENGINEERING

NuWaves Engineering offers technical support for basic configuration help and troubleshooting, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time.

Technical Assistance and Application Engineering:

Mr. Kevin Harrison (513) 360-0800 Ext. 313 FAX: (513) 360-0888

Email: kevin.harrison@nuwaves-ltd.com

Sales:

Mr. Bam Huon

(513) 360-0800 Ext. 322 FAX: (513) 360-0888

Email: bam.huon@nuwaves-ltd.com

NuWaves Home Page: www.nuwaves-ltd.com

Product Warranty:

http://nuwaves-ltd.com/wp-content/uploads/2011/04/NuWaves Warranty Repair.pdf

5.1 GENERAL INFORMATION

Copyright © 2006 - 2013 NuWaves Ltd. All rights reserved. The information contained in this user manual is copyright protected. NuWaves reserves the right to make periodic modifications and product improvements to the NuPower product line and the associated documentation.