

# **User's Manual**

## Purifier<sup>®</sup> Non-Ventilated PCR & Tissue Culture Enclosures

Register your product online at www.labconco.com/productreg.html or return the attached card and receive FREE LabbyWear™!





LABCONCO CORPORATION 8811 PROSPECT AVENUE KANSAS CITY, MO 64132-2696 800-821-5525, 816-333-8811 FAX 816-363-0130 E-MAIL labconco@labconco.com HOME PAGE www.labconco.com

#### **Copyright Information**

Copyright © 2004 Labconco Corporation. All rights reserved.

Labconco Corporation 8811 Prospect Avenue Kansas City, Missouri 64132

The information contained in this manual and the accompanying product is copyrighted and all rights are reserved by Labconco Corporation. Labconco Corporation reserves the right to make periodic design changes without obligation to notify any person or entity of such change.

Purifier Passive PCR Enclosure and Purifier Tissue Culture Enclosure

#### Warranty

Labconco provides a warranty on all parts and factory workmanship. The warranty includes areas of defective material and workmanship, provided such defect results from normal and proper use of the equipment.

The warranty for all Labconco products will expire one year from date of installation or two years from date of shipment from Labconco, whichever is sooner, except the following:

- Purifier® Delta® Series Biological Safety Cabinets and PuriCare® Procedure Stations carry a three-year warranty from date of installation or four years from date of shipment from Labconco, whichever is sooner.
- FlaskScrubber®, SteamScubber and FlaskScrubber Vantage<sup>™</sup> Series Glassware Washers carry a two-year warranty from date of installation or three-years from date of shipment from Labconco.
- Carts carry a lifetime warranty.
- Glass is not warranted from breakage due to accident or mishandling.

This limited warranty covers parts and labor, but not transportation and insurance charges. In the event of a warranty claim, contact Labconco Corporation or the dealer who sold you the product. If the cause is determined to be a manufacturing fault, the dealer or Labconco Corporation will repair or replace all defective parts to restore the unit to operation. Under no circumstances shall Labconco Corporation be liable for indirect, consequential, or special damages of any kind. This statement may be altered by a specific published amendment. No individual has authorization to alter the provisions of this warranty policy or its amendments. Lamps and filters are not covered by this warranty. Damage due to corrosion or accidental breakage is not covered.

#### Limitation of Liability

The disposal and/or emission of substances used in connection with this equipment may be governed by various federal, state, or local regulations. All users of this equipment are required to become familiar with any regulations that apply in the user's area concerning the dumping of waste materials in or upon water, land, or air and to comply with such regulations. Labconco Corporation is held harmless with respect to user's compliance with such regulations.

#### **Contacting Labconco Corporation**



If you have questions that are not addressed in this manual, or if you need technical assistance, contact Labconco's Customer Service Department or Labconco's Product Service Department at 1-800-821-5525 or 1-816-333-8811, between the hours of 7:00 a.m. and 6:00 p.m., Central Standard Time.

Visit Labconco's web site at: http://www.labconco.com or email Labconco at: labconco@labconco.com.

#### Part #3939200, ECO B730

## TABLE OF CONTENTS

| CHAPTER 1: INTRODUCTION                                   | 1  |
|---|----|
| Polymerase Chain Reaction® Definition (PCR)               | 1  |
| About This Manual   | 2  |
| Typographical Conventions                                 | 3  |
| CHAPTER 2: PREREQUISITES                                  | 4  |
| Support Requirements                                      | 4  |
| Location and Air Current Requirements                     | 4  |
| Electrical Requirements                                   | 5  |
| Space Requirements  | 5  |
| CHAPTER 3: GETTING STARTED                                | 6  |
| Unpacking Your Enclosure                                  | 7  |
| Installing the Enclosure on a Supporting Structure & Work |    |
| Surface   | 7  |
| Connecting the Electrical Supply                          | 9  |
| Sealing the Enclosure to the Work Surface                 | 9  |
| CHAPTER 4: FEATURES AND SAFETY PRECAUTIONS                | 10 |
| Features  | 10 |
| Safety Precautions  | 12 |
| <b>CHAPTER 5: USING YOUR ENCLOSURE</b>                    | 14 |
| <b>CHAPTER 6: MAINTAINING YOUR ENCLOSURE</b>              | 15 |
| Routine Maintenance Schedule                              | 15 |
| UV Light Replacement                                      | 15 |
| Fluorescent Light Replacement                             | 16 |
|   |    |

| CHAPTER 7: ACCESSORIZING YOUR ENCLOSURE<br>Work Surfaces<br>Storage Cabinets<br>Base Stands & Mobile Stands | 17<br>17<br>18<br>18 |
|---|----------------------|
| <b>CHAPTER 8: TROUBLESHOOTING</b>   | 19                   |
| APPENDIX A: REPLACEMENT PARTS   | 20                   |
| APPENDIX B: DIMENSIONS  | 23                   |
| APPENDIX C: SPECIFICATIONS  | 24                   |
| DECLARATION OF CONFORMITY   | 27                   |

## CHAPTER 1 INTRODUCTION

Congratulations on your purchase of a Labconco Purifier Passive PCR Enclosure or Purifier Tissue Culture Enclosure. Your **nonventilated** enclosure is designed to reduce cross-contamination in laboratory applications.

The Purifier Passive PCR Enclosure and Purifier Tissue Culture Enclosure offer a UV light for disinfecting the interior and an interior switched electrical outlet. The Purifier Passive PCR Enclosure UV light has the added feature of a digital timer to accommodate PCR protocol. To take full advantage of all the features, please acquaint yourself with this manual and keep it handy for future reference.

## Polymerase Chain Reaction Definition (PCR)

Polymerase Chain Reaction® (PCR), is a laboratory process in which a particular DNA segment from a mixture of DNA chains is rapidly replicated, producing a large, readily analyzed sample of a piece of DNA. In PCR, DNA is immersed in a solution containing the enzyme DNA polymerase, unattached nucleotide bases (the subunits that DNA is composed of), and "primers", short sequences of nucleotides designed to bind with an end of the desired DNA segment. Two primers are used: one primer binds at one end of the desired segment on one of the two paired DNA strands and the other primer binds at the other end but on the other strand. The solution is heated to break the bonds between the strands of the DNA. When the solution cools, the primers bind to the separated strands, and DNA polymerase quickly builds a new strand by joining the free nucleotide bases to the primers. When this process is repeated, a strand that was formed with one primer binds to the other primer, resulting in a new strand that is restricted solely to the desired segment. Thus, the region of DNA between the primers is selectively replicated. Further repetitions of the process can produce billions of copies of a small piece of DNA in several hours. PCR was developed in 1985 by Kary B. Mullis, who was awarded the 1993 Nobel Prize in chemistry for his work. It is used in a broad range of applications from DNA fingerprinting to medical tests to identify diseases from the infectious agent's DNA. See also nucleic acid. *The Concise Columbia Encyclopedia* is licensed from Columbia University Press. Copyright © 1995 by Columbia University Press. All rights reserved.

### About This Manual

This manual is designed to help you learn how to install, use, and maintain your non-ventilated enclosure. Instructions for installing optional equipment on your enclosure are also included.

*Chapter 1: Introduction* provides a brief overview of the nonventilated enclosure, explains the organization of the manual, and defines the typographical conventions used in the manual.

*Chapter 2: Prerequisites* explains what you need to do to prepare your site before you install the enclosure. Electrical and service requirements are discussed.

*Chapter 3: Getting Started* contains the information you need to properly unpack, inspect and install the enclosure.

*Chapter 4: Features and Safety Precautions* explains how the enclosure operates and the appropriate precautions you should take when using it.

*Chapter 5: Using Your Enclosure* discusses the basic operation of how to prepare, use and turn off your non-ventilated enclosure is included.

*Chapter 6: Maintaining Your Enclosure* explains how to perform routine maintenance.

*Chapter 7: Accessorizing Your Enclosure* explains acceptable modifications or how to add accessories.

*Chapter 8: Troubleshooting* contains a table of problems you may encounter while using the product including the probable causes of the problems and suggested corrective actions.

*Appendix A: Components* contains labeled diagrams of all of the components of the enclosures.

*Appendix B: Dimensions* show all of the dimensions for the enclosures.

*Appendix C: Specifications* contains the electrical requirements. Wiring diagrams are also included in this section.

## **Typographical Conventions**

Recognizing the following typographical conventions will help you understand and use this manual:

- Book, chapter, and section titles are shown in italic type (e.g., *Chapter 3: Getting Started*).
- Steps required to perform a task are presented in a numbered format.
- Comments located in the margins provide suggestions, reminders, and references.
- Critical information is presented in boldface type in paragraphs that are preceded by the exclamation icon. Failure to comply with the information following an exclamation icon may result in injury to the user or permanent damage to the enclosure.
- Critical information is presented in boldface type in paragraphs that are preceded by the wrench icon. A trained certifier or contractor should only perform these operations. Failure to comply with the information following a wrench icon may result in injury to the user or permanent damage to your hood.
- Important information is presented in capitalized type in paragraphs that are preceded by the pointer icon. It is imperative that the information contained in these paragraphs be thoroughly read and understood by the user.
- The PCR icon indicates the text is specific to the Purifier PCR Enclosure.
- The TC icon indicates the text is specific to the Purifier Tissue Culture Enclosure.







## CHAPTER 2 PREREQUISITES

Before you install the enclosure, carefully examine the location. You must be certain that the area is level and of solid construction. In addition, a dedicated source of electrical power should be located near the installation site to power the enclosure.

Carefully read this chapter to learn the requirements for your installation site:

- The support requirements.
- The location and air current requirements.
- The electrical power requirements.
- The space requirements.

### **Support Requirements**

At a minimum, the supporting structure usually consists of a base cabinet and chemically resistant work surface. A mobile stand or cart is allowable. See Chapter 7 for accessory work surfaces, stands, mobile stands and cabinets.

## Location and Air Current Requirements

The Purifier Passive PCR and Purifier Tissue Culture Enclosures have been designed to reduce cross drafts and air circulation with the sash and UV sash closure shut. However, as a precautionary measure of safety and a higher level of quality management, it is recommended that the enclosure be placed in such an area away from:

- High traffic areas where walking might cause an air disturbance.
- Overhead or wall HVAC diffusers, fans, radiators or other lab equipment producing air currents.
- Next to doorways or windows that may be opened.

### **Electrical Requirements**

Standard duplex electrical receptacles should be nearby for connecting the non-ventilated Purifier Passive PCR Enclosure or Purifier Tissue Culture Enclosure. For your convenience the enclosures have a switched auxiliary outlet receptacle. The auxiliary switched outlet is rated for either 115V, 8 amps or 230V, 4 amps.

## **Space Requirements**

The dimensions for the non-ventilated enclosures are shown in *Appendix B: Enclosure Dimensions*.

## CHAPTER 3 Getting Started

Now that the site for your non-ventilated Purifier PCR or Purifier Tissue Culture Enclosures is properly prepared, you are ready to unpack, inspect and install your non-ventilated enclosure. Read this chapter to learn how to:

- Unpack and move the enclosure.
- Set up the enclosure with the proper supporting structure and work surface.
- Connect the electrical supply.
- Seal the enclosure to the work surface.

Depending upon which model you are installing, you may need wrenches, ratchets, sockets, a nut driver set, a flat-blade screwdriver, a Phillips screwdriver, and a carpenter level to complete the instructions in the chapter.



The enclosures weigh 100 lbs. (45 kg). The shipping container allows for lifting with a mechanical lift truck or floor jack. If you must lift the enclosure manually, follow safe-lifting guidelines. <u>Do not lift by the front lower support</u>.

### **Unpacking the Enclosure**

Carefully remove the shrink-wrap or carton on the enclosure and inspect it for damage that may have occurred in transit. If damaged, notify the delivery carrier immediately and retain the entire shipment intact for inspection by the carrier.



DO NOT RETURN GOODS WITHOUT THE PRIOR AUTHORIZATION OF LABCONCO. UNAUTHORIZED RETURNS WILL NOT BE ACCEPTED.



IF ENCLOSURE WAS DAMAGED IN TRANSIT, YOU MUST FILE A CLAIM DIRECTLY WITH THE FREIGHT CARRIER. LABCONCO CORPORATION AND ITS DEALERS ARE NOT RESPONSIBLE FOR SHIPPING DAMAGES.

Do not discard the packing material until you have checked all of the components and tested the enclosure.

We recommend that you do not remove the enclosure from its shipping container until it is ready to be placed into its final location. Move the unit by using a floor jack.



Do not move the enclosure by tilting it onto a hand truck.

### Installing the Enclosure on a Supporting Structure and Work Surface

When installing the enclosure onto a chemically-resistant work surface or benchtop, ensure that the structure can safely support the combined weight of the enclosure and any related equipment. The work surface should be at least as wide and deep as the nonventilated enclosure to properly support it. The front of the nonventilated enclosure should be aligned within 1/8" of the front of the work surface. Mounting holes are provided in the Labconco accessory work surfaces to secure the enclosure. The United States Interstate Commerce Commission rules require that claims be filed with the delivery carrier within fifteen (15) days of delivery.

#### **Work Surface Specifications**

The work surface should be smooth, rigid, and durable, such as a chemically-resistant epoxy resin. The surface should be non-porous and resistant to the materials used in conjunction with the Purifier PCR or Purifier Tissue Culture Enclosures. The work surface should also contain a dished recessed area for containing primary spills.

#### Work Surface and Non-Ventilated Enclosure Installation

- 1. Level the base cabinets and the work surface. Work surface should be placed flush with the front of the base cabinet as shown in Figure 3-1.
- 2. Position the work surface in its intended location and with the front of the work surface, (wide flange), towards you.
- 3. Secure the work surface to the base cabinet with a structural adhesive or silicone sealant.
- 4. Insert the supplied mounting screws in the four holes. Allow a minimum of 1/8" clearance under the head of the screw for positioning the enclosure.
- 5. Place the enclosure on the work surface and slide the rear flange and lower front bracket flanges under the mounting screw heads.
- 6. Tighten the four screws to complete the installation.

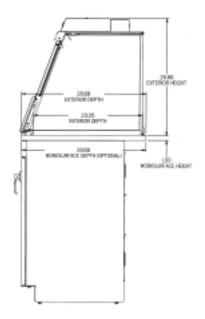


Figure 3-1 Side View of Typical Installation

### **Connecting the Electrical Supply**

A grounded receptacle should be nearby for connecting the Purifier PCR or Purifier Tissue Culture Enclosures. Please review Chapter 2 for electrical prerequisites.



All wiring for the building electrical outlets SHOULD be performed by a licensed electrician and conform to all local codes.

### Sealing the Enclosure to the Work Surface

When the enclosure has been set in place, it may be sealed at the work surface to prevent spilled materials from collecting under the walls. A bead of silicone sealant is recommended to seal it to the work surface.

## CHAPTER 4 FEATURES AND SAFETY PRECAUTIONS

#### Features:

Labconco engineered the Purifier Passive PCR Enclosure and Purifier Tissue Culture Enclosure to provide a **non-ventilated**, circulation-free work area to reduce cross-contamination in laboratory applications. A spacious interior and convenience outlet give ample room for media preparation and equipment used for procedures. A UV light with digital timer, included on the Purifier PCR Enclosure, provides decontamination control after PCR protocols are conducted. The Purifier Tissue Culture Enclosure may be used for techniques such as tissue staining, culture growth and virus harvesting. A built-in UV light on the Purifier Tissue Culture Enclosure provides secondary surface decontamination while the enclosure is not in use. Chapter 4: Features and Safety Precautions

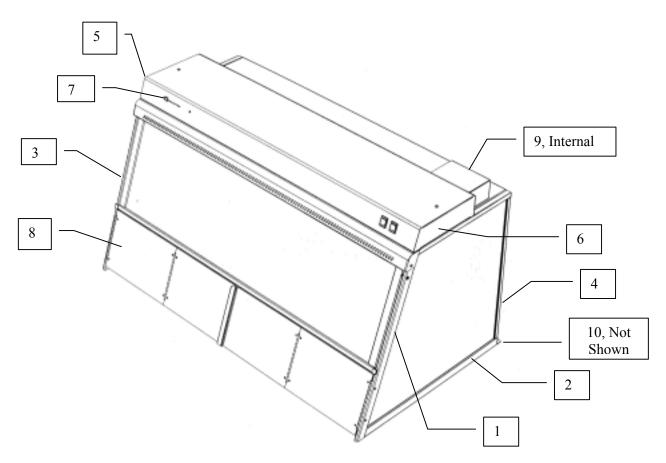


Figure 4-1 Features

- 1. Ergonomic Slope and Front of 20° provides maximum visibility, and comfort, reduces glare, thereby minimizing operator fatigue.
- 2. Internal Depth of 23" and interior height of 22" provides necessary depth and height to support procedures and other auxiliary equipment without extending outside the non-ventilated enclosure.
- 3. **Flush Sash** has a wiping seal and features a spring-loaded latch for loading auxiliary equipment. The sash pivots down for normal operation.
- 4. Electrical Pass-Through Iris allows electrical cords and data cords to pass through the back of enclosure. The unit ships with solid plugs and the iris plugs are included with the User's Manual for your convenience.

- 5. **Fluorescent Light** provides illumination for the interior of the enclosure.
- 6. Ultraviolet Germicidal Light provides surface decontamination and maintains sterility inside the enclosure. It is located above the work area.
- 7. Variable PCR Digital UV Light Timer (Purifier PCR Enclosure only) allows the operator to time the surface disinfection of the work area for PCR protocols. The UV light timer has eight settings of 5, 10, 15, 30, 60, 120, 240 minutes and infinitely ON. It is easily changed by selecting the time necessary on the control panel.
- 8. UV Sash Closure provides added safety to prevent access and air currents inside the non-ventilated enclosure when the UV light is activated.
- 9. **Switched Outlet** is located inside the non-ventilated enclosure for powering electrical equipment.
- 10. Accessory Work Surface is dished to contain spills and is contoured to fit the dimensions of the non-ventilated enclosures.

### **Safety Precautions**



Use good housekeeping in the enclosure at all times. Clean up spills immediately. Periodically clean all interior surfaces.



Do not work with hazardous volatile chemicals in this enclosure.

Radioisotope materials are prohibited in this enclosure.

All acid use in this enclosure is prohibited.

aviolet Germicidal Light provides surface

PCR

The use of safety goggles, protective clothing, gloves and any other personal protective equipment recommended by your safety officer should be used.

The sash should remain in the down position while using the enclosure.

Ensure the enclosure is connected to an electrical service in accordance with local and national electrical codes. Failure to do so may create a fire or electrical hazard. Do not remove or service any electrical components without first disconnecting from electrical service.

Ensure only trained operators use the nonventilated enclosure. All users should review the User's Manual and become familiar with the operation.

Avoid direct exposure to ultraviolet (UV) radiation; NEVER work in the nonventilated enclosure with the UV light on. Always use the UV sash closure in the closed position when using the UV light to provide added protection.

## Chapter 5 Using Your Enclosure

#### <u>Planning</u>

- Thoroughly understand procedures and equipment required before beginning work.
- Arrange for minimal disruptions, such as room traffic or entry into the room while the enclosure is in use.

#### <u>Start-up</u>

- Clean and surface disinfect the inside of the enclosure. Use UV light as required for protocol.
- Turn on the fluorescent light.
- Only raise the sash for loading.
- Wear a long sleeved lab coat and rubber gloves. Use protective eyewear. Wear a protective mask if appropriate. Consult your Safety Officer for additional personal protective equipment recommendations.

#### **Work Techniques**

• Keep all materials inside and perform all operations inside the work area.

#### **Unloading Materials and Equipment**

• All open trays, weigh vessels and containers should be covered before being removed from the enclosure.

#### <u>Shutdown</u>

- Turn off the fluorescent light and close the UV sash closure.
- Clean and surface disinfect the interior surfaces after completion.
- Turn on the UV light to decontaminate the work area as determined by your protocol.

## Chapter 6 Maintaining Your Enclosure

Now that you have an understanding of how to work in the nonventilated enclosure, we will review the suggested maintenance schedule and common service operations.

### **Routine Maintenance Schedule**

#### Weekly

• Clean the enclosure interior appropriate for the application.

#### Monthly (or more often as required)

- Using a cloth and glass cleaner, clean the exterior surfaces of the non-ventilated enclosure, particularly the front to remove any accumulated dust.
- All weekly activities.

#### Annually

- Replace the UV lamp.
- All monthly activities.

### **UV Light Replacement**

- 1. Disconnect power.
- 2. Locate the UV lamp inside.
- 3. Rotate and remove the old UV lamp.
- 4. Reinstall the new UV lamp.
- 5. Switch unit on and try the new UV lamp.





### **Fluorescent Light Replacement**

- 1. Disconnect power.
- 2. Locate the two Phillips machine screws on top of the light and remove. Lift up the light assembly.
- 3. Rotate and remove the old fluorescent lamp.
- 4. Reinstall the new fluorescent lamp, light and screws in reverse order.
- 5. Switch unit on and try the new fluorescent lamp.

## Chapter 7 Accessorizing Your Enclosure

There are several ways to accessorize the enclosure for your individual requirements. These include the addition of accessory work surfaces, storage cabinets, base stands and mobile stands.

#### 1. Work Surfaces

An optional dished work surface is available.



Dished work surfaces are contoured to fit the enclosure to contain spills. Epoxy is chemical resistant.

| Catalog # | Description        | Dimensions (W x D x H) |
|-----------|--------------------|------------------------|
| 3908402   | Black, 4-foot wide | 48" x 26.66" x 1"      |
| 3908405   | Gray, 4-foot wide  | 48" x 26.66" x 1"      |

Chapter 7: Accessorizing Your Non-Ventilated Enclosure

#### 2. Storage Cabinets

|                          |            | SOLVENT     |            | ACID       |             |            |
|--------------------------|------------|-------------|------------|------------|-------------|------------|
| Size/Description         | Dual Doors | Right Hinge | Left Hinge | Dual Doors | Right Hinge | Left Hinge |
| 48"                      | 9902000    | -           | -          | 9901000    | -           | -          |
| 36"                      | 9902100    | -           | -          | 9901100    | -           | -          |
| 30"                      | 9902200    | -           | -          | 9901200    | -           | -          |
| 24"                      | -          | 9902300     | 9902400    | -          | 9901300     | 9901500    |
| 18"                      | -          | -           | -          | -          | 9901400     | 9901600    |
| 12"                      | -          | -           | -          | -          | -           | -          |
| 48" w/Self Closing Doors | 9903000    | -           | -          | -          | -           | -          |
| 36" w/Self Closing Doors | 9903100    | -           | -          | -          | -           | -          |
| 30" w/Self Closing Doors | 9903200    | -           | -          | -          | -           | -          |
| 24" w/Self Closing Doors | -          | 9903300     | 9903400    | -          | -           | -          |
| 24" ADA                  | -          | 9906000     | 9906100    | -          | 9905000     | 9905200    |
| 24" ADA w/Self Closing   | -          | 9906200     | 9906300    | -          | -           | -          |
| Doors                    |            |             |            |            |             |            |
| 18" ADA                  | -          | -           | -          | -          | 9905100     | 9905300    |
| 12" ADA                  | -          | -           | -          | -          | -           | -          |

|                          | STANDARD BASE |             |            | VACUUM PUMP |             |            |
|--------------------------|---------------|-------------|------------|-------------|-------------|------------|
| Size/Description         | Dual Doors    | Right Hinge | Left Hinge | Dual Doors  | Right Hinge | Left Hinge |
| 48"                      | 9900000       | -           | -          | -           | -           | -          |
| 36"                      | 9900100       | -           | -          | -           | -           | -          |
| 30"                      | 9900200       | -           | -          | -           | -           | -          |
| 24"                      | -             | 9900300     | 9900600    | -           | -           | -          |
| 18"                      | -             | 9900400     | 9900700    | -           | 9907000     | 9907100    |
| 12"                      | -             | 9900500     | 9900800    | -           | -           | -          |
| 48" w/Self Closing Doors | -             | -           | -          | -           | -           | -          |
| 36" w/Self Closing Doors | -             | -           | -          | -           | -           | -          |
| 30" w/Self Closing Doors | -             | -           | -          | -           | -           | -          |
| 24" w/Self Closing Doors | -             | -           | -          | -           | -           | -          |
| 24" ADA                  | -             | 9904000     | 9904300    | -           | -           | -          |
| 24" ADA w/Self Closing   | -             | -           | -          | -           | -           | -          |
| Doors                    |               |             |            |             |             |            |
| 18" ADA                  | -             | 9904100     | 9904400    | -           | -           | -          |
| 12" ADA                  | -             | 9904200     | 9904500    | -           | -           | -          |

#### 3. Base Stands and Mobile Stands

| 3746702 4' Telescoping Base Stand with Fixed Feet |    | Telescoping Base Stand with Fixed Feet | 48" w x 29.25" d x 27.5" to 33.5" h |  |
|---|----|--|-------------------------------------|--|
|   |    |  |                                     |  |
| 3746712   | 4' | Telescoping Base Stand with 5" Casters | 48" w x 29.25" d x 27.5" to 33.5" h |  |

## Chapter 8 Troubleshooting

Refer to the following table if your enclosure fails to operate properly. If the suggested corrective actions do not solve your problem, contact Labconco for additional assistance.

| PROBLEM                                     | CAUSE   | <b>CORRECTIVE ACTION</b>  |  |  |
|---|---|---|--|--|
| Lights do not work.                         | Circuit breaker(s)<br>tripped.<br>Lamp not installed<br>properly.<br>Lamp Wiring<br>disconnected.<br>Defective lamp.<br>Light switch is<br>defective. | Reset or replace circuit breaker.Inspect lamp installation.Inspect lamp wiring.Replace lamp.Replace light switch. |  |  |
|   |   |   |  |  |
| LIV light times door                        | No power.   | Power cable to UV light timer circuit board is disconnected.  |  |  |
| UV light timer does<br>not work. (PCR only) | No lights on.   | Verify connection.  |  |  |
| not work. (PCK only)                        | No display.   | Replace circuit board for UV light timer if it malfunctions.  |  |  |

## APPENDIX A Replacement Parts

The following illustrations indicate the replacement parts.

Appendix A: Replacement Parts

| Item | Qty.    | Part Number | Description                                  |  |
|------|---------|-------------|--|--|
| 1    | 1       | 3906500     | Glass, Side Short                            |  |
| 2    | 1       | 3906102     | Glass, Sash 4' Short                         |  |
| 3    | 1       | 3905602     | Lower Foil 4'                                |  |
| 4    | 2.3 Ft. | 6913700     | Wiper, Sash                                  |  |
| 5A   | 1       | 1927403     | Spring, Compression Sash Latch               |  |
| 5B   | 1       | 3906700     | Latch Bracket                                |  |
| 5C   | 1       | 6916500     | Latch Sash                                   |  |
| 5D   | 2       | 1893206     | Screw, #8-32 x .38 Phil, SS, Type F          |  |
| 6    | 1       | 3945200     | Sash Assembly 4'                             |  |
| 7A   | 1       | 3907400     | Bracket, Air Foil Right                      |  |
| 7B   | 1       | 3907401     | Bracket, Air Foil Left                       |  |
| 7C   | 2       | 1932401     | Washer, Shoulder Plastic                     |  |
| 7D   | 2       | 1912108     | Washer, .194 ID x .38 OD x .03 thick plastic |  |
| 7E   | 2       | 1909217     | Cap Nut #10-24 SS                            |  |
| 8    | 1       | 3905302     | Header 4'                                    |  |
| 9A   | 1       | 1934601     | Bushing, Heyco with Flex Shutter 1.50 dia.   |  |
| 9B   | 1       | 1936800     | Bushing, Heyco Closed 1.50 dia.              |  |
| 10A  | 2       | 7868402     | Spacer Bushing                               |  |
| 10B  | 2       | 1912108     | Washer, .194 ID x .38 OD x .03 T. Plastic    |  |
| 10C  | 2       | 1889316     | Screw, #10-24 x 1.00 PH. (SS)                |  |
| 11A  | 1       | 3929400     | Label, Tissue Culture Enclosure              |  |
| 11B  | 1       | 3929500     | Label, PCR Enclosure                         |  |
| 12   | 1       | 3945300     | Timer, Digital UV PCB                        |  |
| 13A  | 1       | 1307000     | Switch, 2 position Aux. Outlet               |  |
| 13B  | 1       | 1306300     | Switch, 3 position Light                     |  |
| 14   | 1       | 9721901     | Lamp, Fluorescent (FT25T8) 25 Watt           |  |
| 15   | 1       | 1271300     | Lamp, UV (G30T8) 30 Watt                     |  |
| 16   | 1       | 1294000     | Ballast, Fluorescent                         |  |
| 17A  | 1       | 1233400     | Ballast, UV 115V                             |  |
| 17B  | 1       | 1233600     | Ballast, UV 230V                             |  |
| 18A  | 2       | 1333800     | Inlet, Power IEC                             |  |
| 18B  | 1       | 1334500     | Power Cord 115V                              |  |
| 18C  | 1       | 1334100     | Power Cord 230V                              |  |
| 19A  | 1       | 1333900     | Receptacle, Outlet Power                     |  |
| 19B  | 1       | 1306000     | Power Cord, Outlet Power                     |  |
| 20A  | 1       | 1230700     | Receptacle, Interior Switched Outlet, 115V   |  |
| 20B  | 1       | 1294400     | Receptacle, Interior Switched Outlet, 230V   |  |
| 21A  | 1       | 1327201     | Circuit Breaker, 10 Amp, 115V                |  |
| 21B  | 2       | 1327204     | Circuit Breaker, 5 Amp, 230V                 |  |
| 22   | 8       | 1591606     | Rubber Bumper, UV Sash Closure               |  |

Appendix A: Replacement Parts



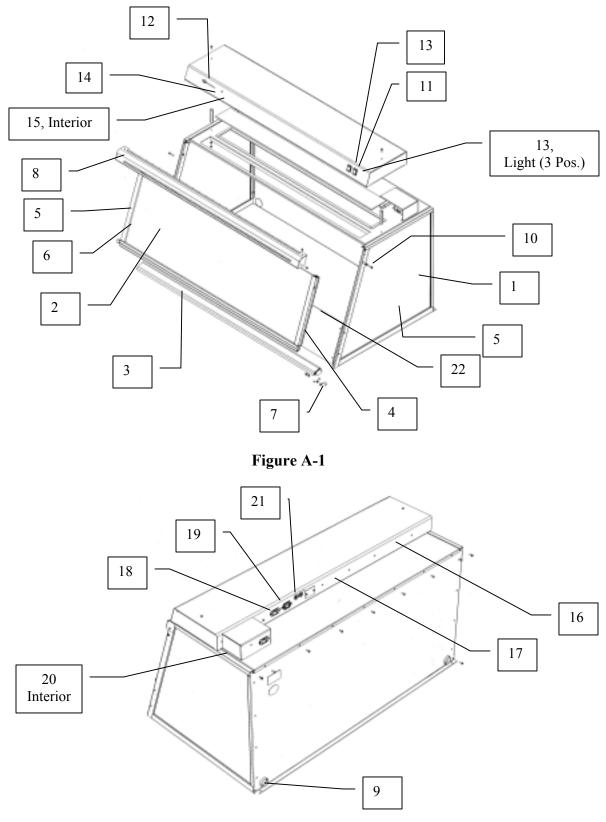


Figure A-2

## APPENDIX B DIMENSIONS

See the following dimensions.

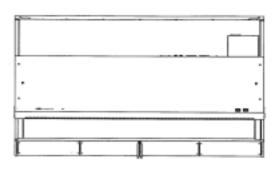

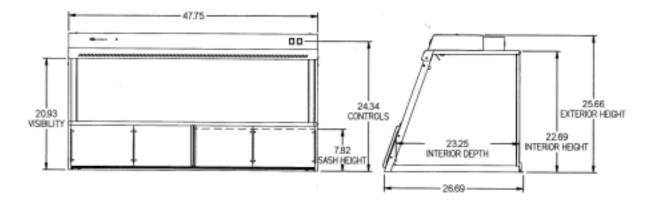

## APPENDIX C Specifications


This appendix contains electrical specifications, environmental conditions and wiring diagrams.

#### **Electrical Specifications**


• 10 Amps, 115V, 60 Hz, or 5 Amps, 230V, 50/60 Hz, Purifier Passive PCR Enclosure or Purifier Tissue Culture Enclosure. The auxiliary outlet load is 8 Amps on 115V and 4 Amps on 230V.

#### **Environmental Conditions**

- Indoor use only.
- Maximum altitude: 6562 feet (2000 meters).
- Ambient temperature range: 41° to 104°F (5° to 40°C).
- Maximum relative humidity: 80% for temperatures up to 88°F (31°C), decreasing linearly to 50% relative humidity at 104°F (40°C).
- Main supply voltage fluctuations not to exceed ±10% of the nominal voltage.
- Transient over-voltages according to Installation Categories II (Over-voltage Categories per IEC 1010). Temporary voltage spikes on the AC input line that may be as high as 1500V for 115V models and 2500V for 230V models are allowed.
- Used in an environment of Pollution degrees 2 (i.e., where normally only non-conductive atmospheres are present). Occasionally, however, a temporary conductivity caused by condensation must be expected, in accordance with IEC 664.

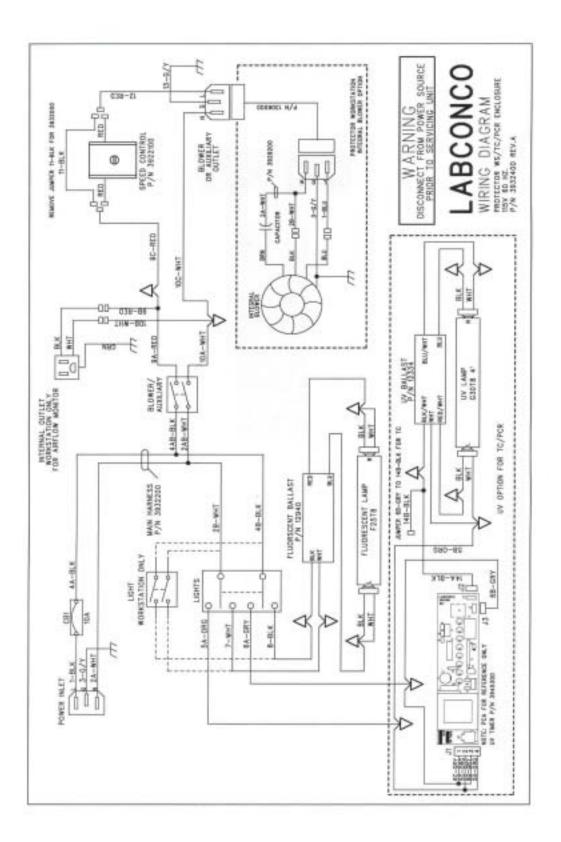

Appendix C: Specifications

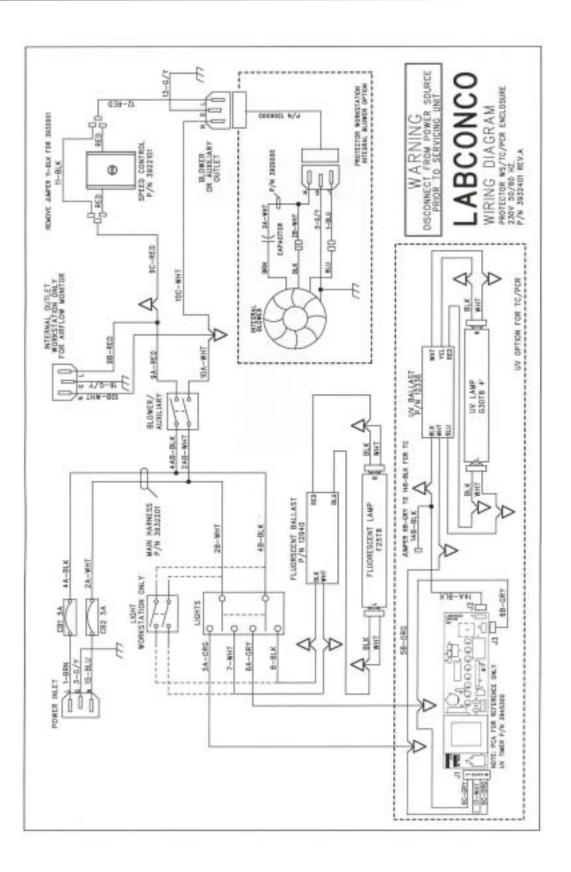

#### DECLARATION OF CONFORMITY

Application Council Directive(s): 73/23/EEC, 89/336/EEC

Standard(s) to which conformity is declared: EN61010, EN55022, EN50082-1

| Manufacturer's Name:  | Labconco Corporation   |  |  |
|---|--|--|--|
| Manufacturer's Address:   | 8811 Prospect Avenue<br>Kansas City, MO 64132 USA  |  |  |
| Importer's Name:  | See Shipping/Customs Documents*  |  |  |
| Importer's Address:   | See Shipping/Customs Documents for your equipment  |  |  |
| Type of Equipment:  | Purifier PCR Enclosure and Purifier Tissue Culture   |  |  |
|   | lture Enclosure<br>CR Enclosure  |  |  |
| Serial No.: Various - See   | e Individual Declaration   |  |  |
| Year of Manufacture: 2004   | and subsequent   |  |  |
| I, the undersigned, hereby de<br>above Directive(s) and Stand       | clare that the equipment specified above conforms to the<br>lard(s).                               |  |  |
|   | See individual Declaration of Conformity which<br>will be signed by the importer for your country. |  |  |
| Place:  | (0)  |  |  |
|   | (Signature)  |  |  |
| Date: (Full Name)   |  |  |  |
|   | (Position)   |  |  |
| <ul> <li>An individual version of the<br/>documentation.</li> </ul> | is declaration is included with your shipping/customs  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |

Labconco P/N 36960-54 REV -

### **PRODUCT REGISTRATION CARD**

Register Online! Go to www.labconco.com/productreg.html

By registering your product, you will receive these important benefits: • Warranty Confirmation • Product Registration • Product Protection • Free LabbyWear™ Merchandise

| NAME   |                              | TITLE                     |                              |
|--|------------------------------|---------------------------|------------------------------|
| DEPARTMENT   | II                           | NSTITUTION                |                              |
| ADDRESS  |                              |                           |                              |
| CITY/STATE/ZIP/COUNTRY   |                              |                           |                              |
| TELEPHONE  | EXT F                        | AX                        | E-MAIL                       |
| Which of the following com   | es closest to describing th  | e type of activity in whi | ich vou are engaged?         |
| -  | Teaching/Instructional       | □ Testing                 | □ Other (please specify)     |
| Of what type organization is   | s your work a part?          |                           |                              |
| 🗅 Industrial, Manufacturir   | •                            | Government (e             |                              |
| Educational Institution  |                              | -                         | oundation, Consulting        |
|  | ol, Hospital, Public Health  | Pharmaceutica             | I Hesearch                   |
| Which comes closest to des   |                              |                           |                              |
|  | Inorganic Chemis             |                           | Physical Chemistry           |
| Bio-Chemistry  | Analytical Chemi             | -                         | Engineering or Physics       |
| <ul> <li>Polymer Chemistry</li> <li>Organic Chemistry</li> </ul>                 |                              | stry/Quality Control      | Other (please specify)       |
| Which product did you purd<br>Purifier® PCR Enclosur<br>Purifier® Tissue Culture | e                            |                           |                              |
| Model Number*  | Serial Numb                  | er*                       | Date of Installation         |
| *Model and serial numbers are locate   |                              |                           |                              |
| Indicate Labconco accesso  |                              |                           |                              |
| Work Surface   | U Other                      |                           |                              |
| Base Stand Base Cabinet  |                              |                           |                              |
| How did you learn about the  | e enclosure?                 |                           |                              |
| Dealer Sales Rep   | Dealer Catalog               | Colleague                 | Advertisement                |
| Labconco Sales Rep   | 🗅 Labconco Literatu          | ure D Trade Show          | □Internet/WWW                |
| Other (please specify)   |                              |                           |                              |
| What factors most influence  | ed your decision to purcha   | se the enclosure?         |                              |
| (Number up to 3, #1 being the most in  |                              |                           |                              |
| Appearance   | Reputation                   | Service Program           | m Performance Specifications |
| Ease of Operation  | Safety Features              | Price                     | Dealer Recommendation        |
| Availability   | Colleague Recommendati       | ion Other (please s       | pecify)                      |
| From whom did you purcha   | se your enclosure?           |                           |                              |
|  |                              | (DEALER)                  |                              |
|  | lges and mail. No postage is | roquirod                  |                              |

### NON-VENTILATED ENCLOSURES




## LabbyWear<sup>™</sup> is the official uniform of LABsters everywhere! Be a LABster!

As a token of our thanks for returning your Product Registration Card, we would like to send you the LabbyWear of your choice. Please select from one of the three items listed or collect Labby Bucks and redeem for other LabbyWear merchandise. Then just complete the information requested on the reverse side, fold, tape edges and mail.


- **T-shirt.** 100% cotton, short-sleeved, white, with Labby The LABster embroidered on the front left side. Specify unisex size.
  - □ Large □ XLarge
- □ Twill cap. Pigment-dyed, two-color, with six panels and Labby The LABster embroidered on the front.
- Lunch bag. Insulated, teal with royal blue accent and Labby The LABster embroidered on the front.
- □ 10 Labby Bucks and LabbyWear Catalog.

SETATE DETINU IN THE IF MAILED NECESSARY **NO POSTAGE** 

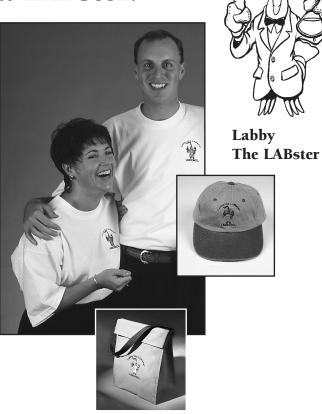

FIRST-CLASS


**KANSAS CITY MO 64132-9971 BUNEVA TOERCA AVENUE** ΙΑΒΟΟΝΟΟ CORPORATION

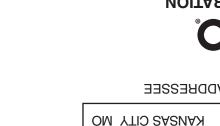

POSTAGE WILL BE PAID BY ADDRESSEE

**BUSINESS REPLY MAIL** 



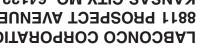



**3911 ON TIMREY JIAM**